


Speedometer / Odometer Information

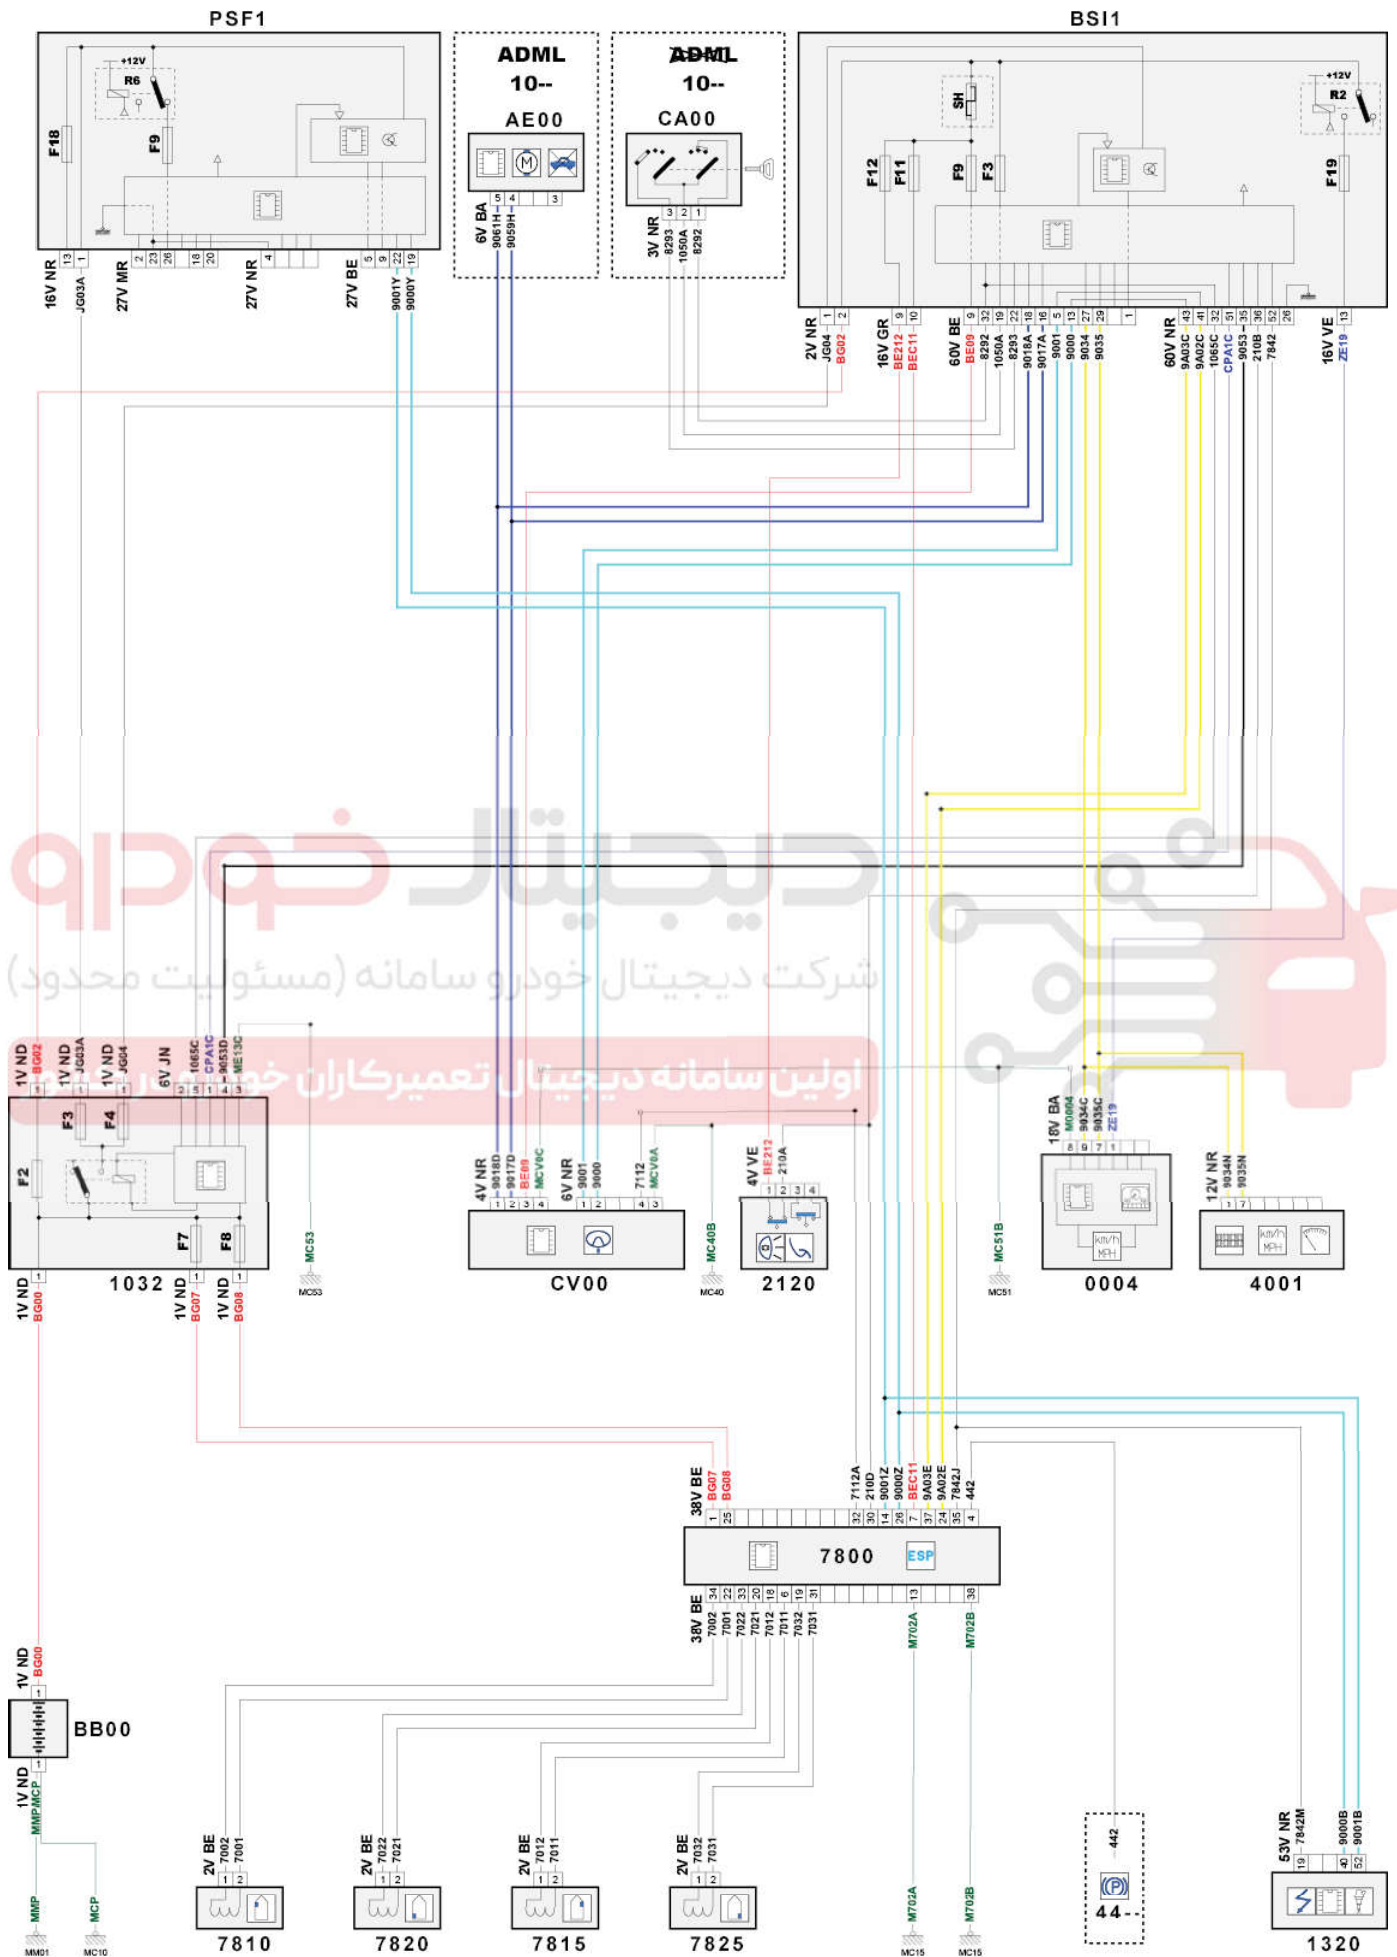

دیجیتال خودرو  
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)  
 اولین سامانه دیجیتال تعمیرکاران خودرو

## Speedometer / Odometer Information

item code	description	information
0004	null	/ instrument panel
1032	null	electrical supplies protection and management unit
1320	null	engine ECU /
2120	null	dual function brake switch /
4001	null	head-up display unit
4410	null	brake fluid level switch
7800	null	calculateur controle de stabilite
7810	null	front left wheel speed sensor
7815	null	front right wheel speed sensor
7820	null	rear left wheel speed sensor
7825	null	rear right wheel speed sensor
AE00	null	electric steering lock
BB00	null	ancillaries battery
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E212	null	crimp one information (or equipotential 212) wire
E784	null	crimp one information (or equipotential 784) wire
E900A	null	crimp one information (or equipotential 276A) wire
E901A	null	crimp one information (or equipotential 901A) wire
E902B	null	crimp one information (or equipotential 902B) wire
E903B	null	crimp one information (or equipotential 903B) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918A	null	crimp one information (or equipotential 918A) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E953	null	crimp one information (or equipotential 953) wire
EB11	null	splice of a "battery +" protected by fuse no. 11
EM40B	null	crimp earth (earth point number 40B)
EM51B	null	crimp earth (earth point number 51B)
EM53	null	crimp earth (earth point number 53)
MC10	null	body earth point number 10
MC15	null	body earth point number 15
MC15C	null	body earth point number 15C
MC40B	null	body earth point number 40
MC51B	null	body earth point number 51
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box