


Parking Brake & Fluid level In Hydraulic Circuit Information

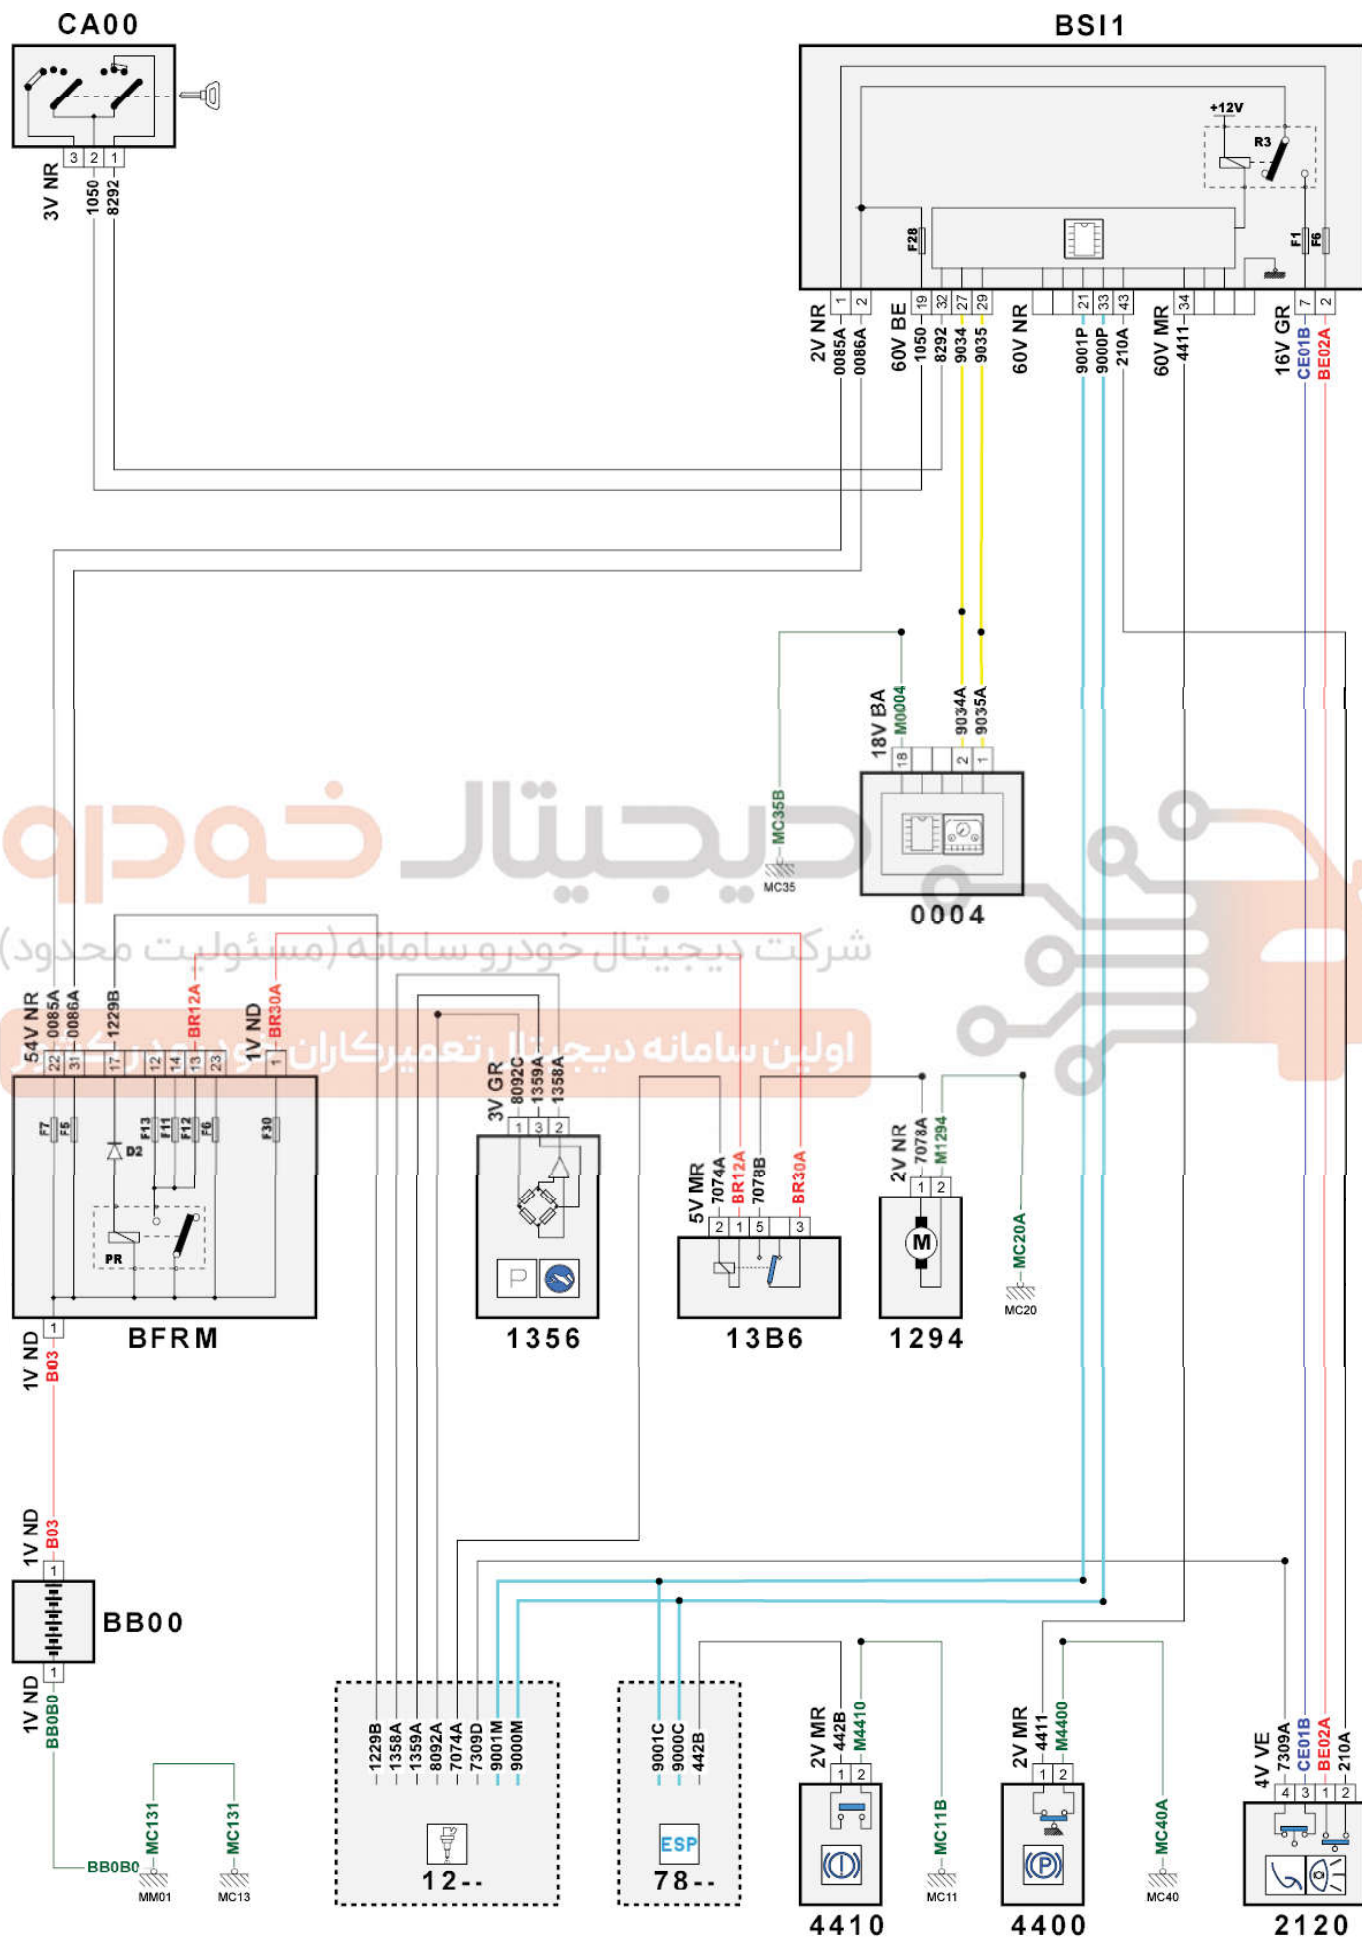

دیجیتال خودرو
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران

Parking Brake & Fluid level In Hydraulic Circuit Information

item code	description	information
0004	null	/ instrument panel
1294	null	/ vacuum pump
1320	null	engine ECU /
1356	null	braking circuit vacuum sensor /
13B6	null	vacuum pump control relay
2120	null	dual function brake switch /
4400	null	handbrake switch
4410	null	brake fluid level switch
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E703A	null	crimp one information (or equipotential 703) wire
E806A	null	crimp one information (or equipotential 806A) wire
E809A	null	crimp one information (or equipotential 809A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM40A	null	crimp earth (earth point number 40A)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC40A	null	body earth point number 40
MM01	null	engine earth point number 01