


动力转向 EPS

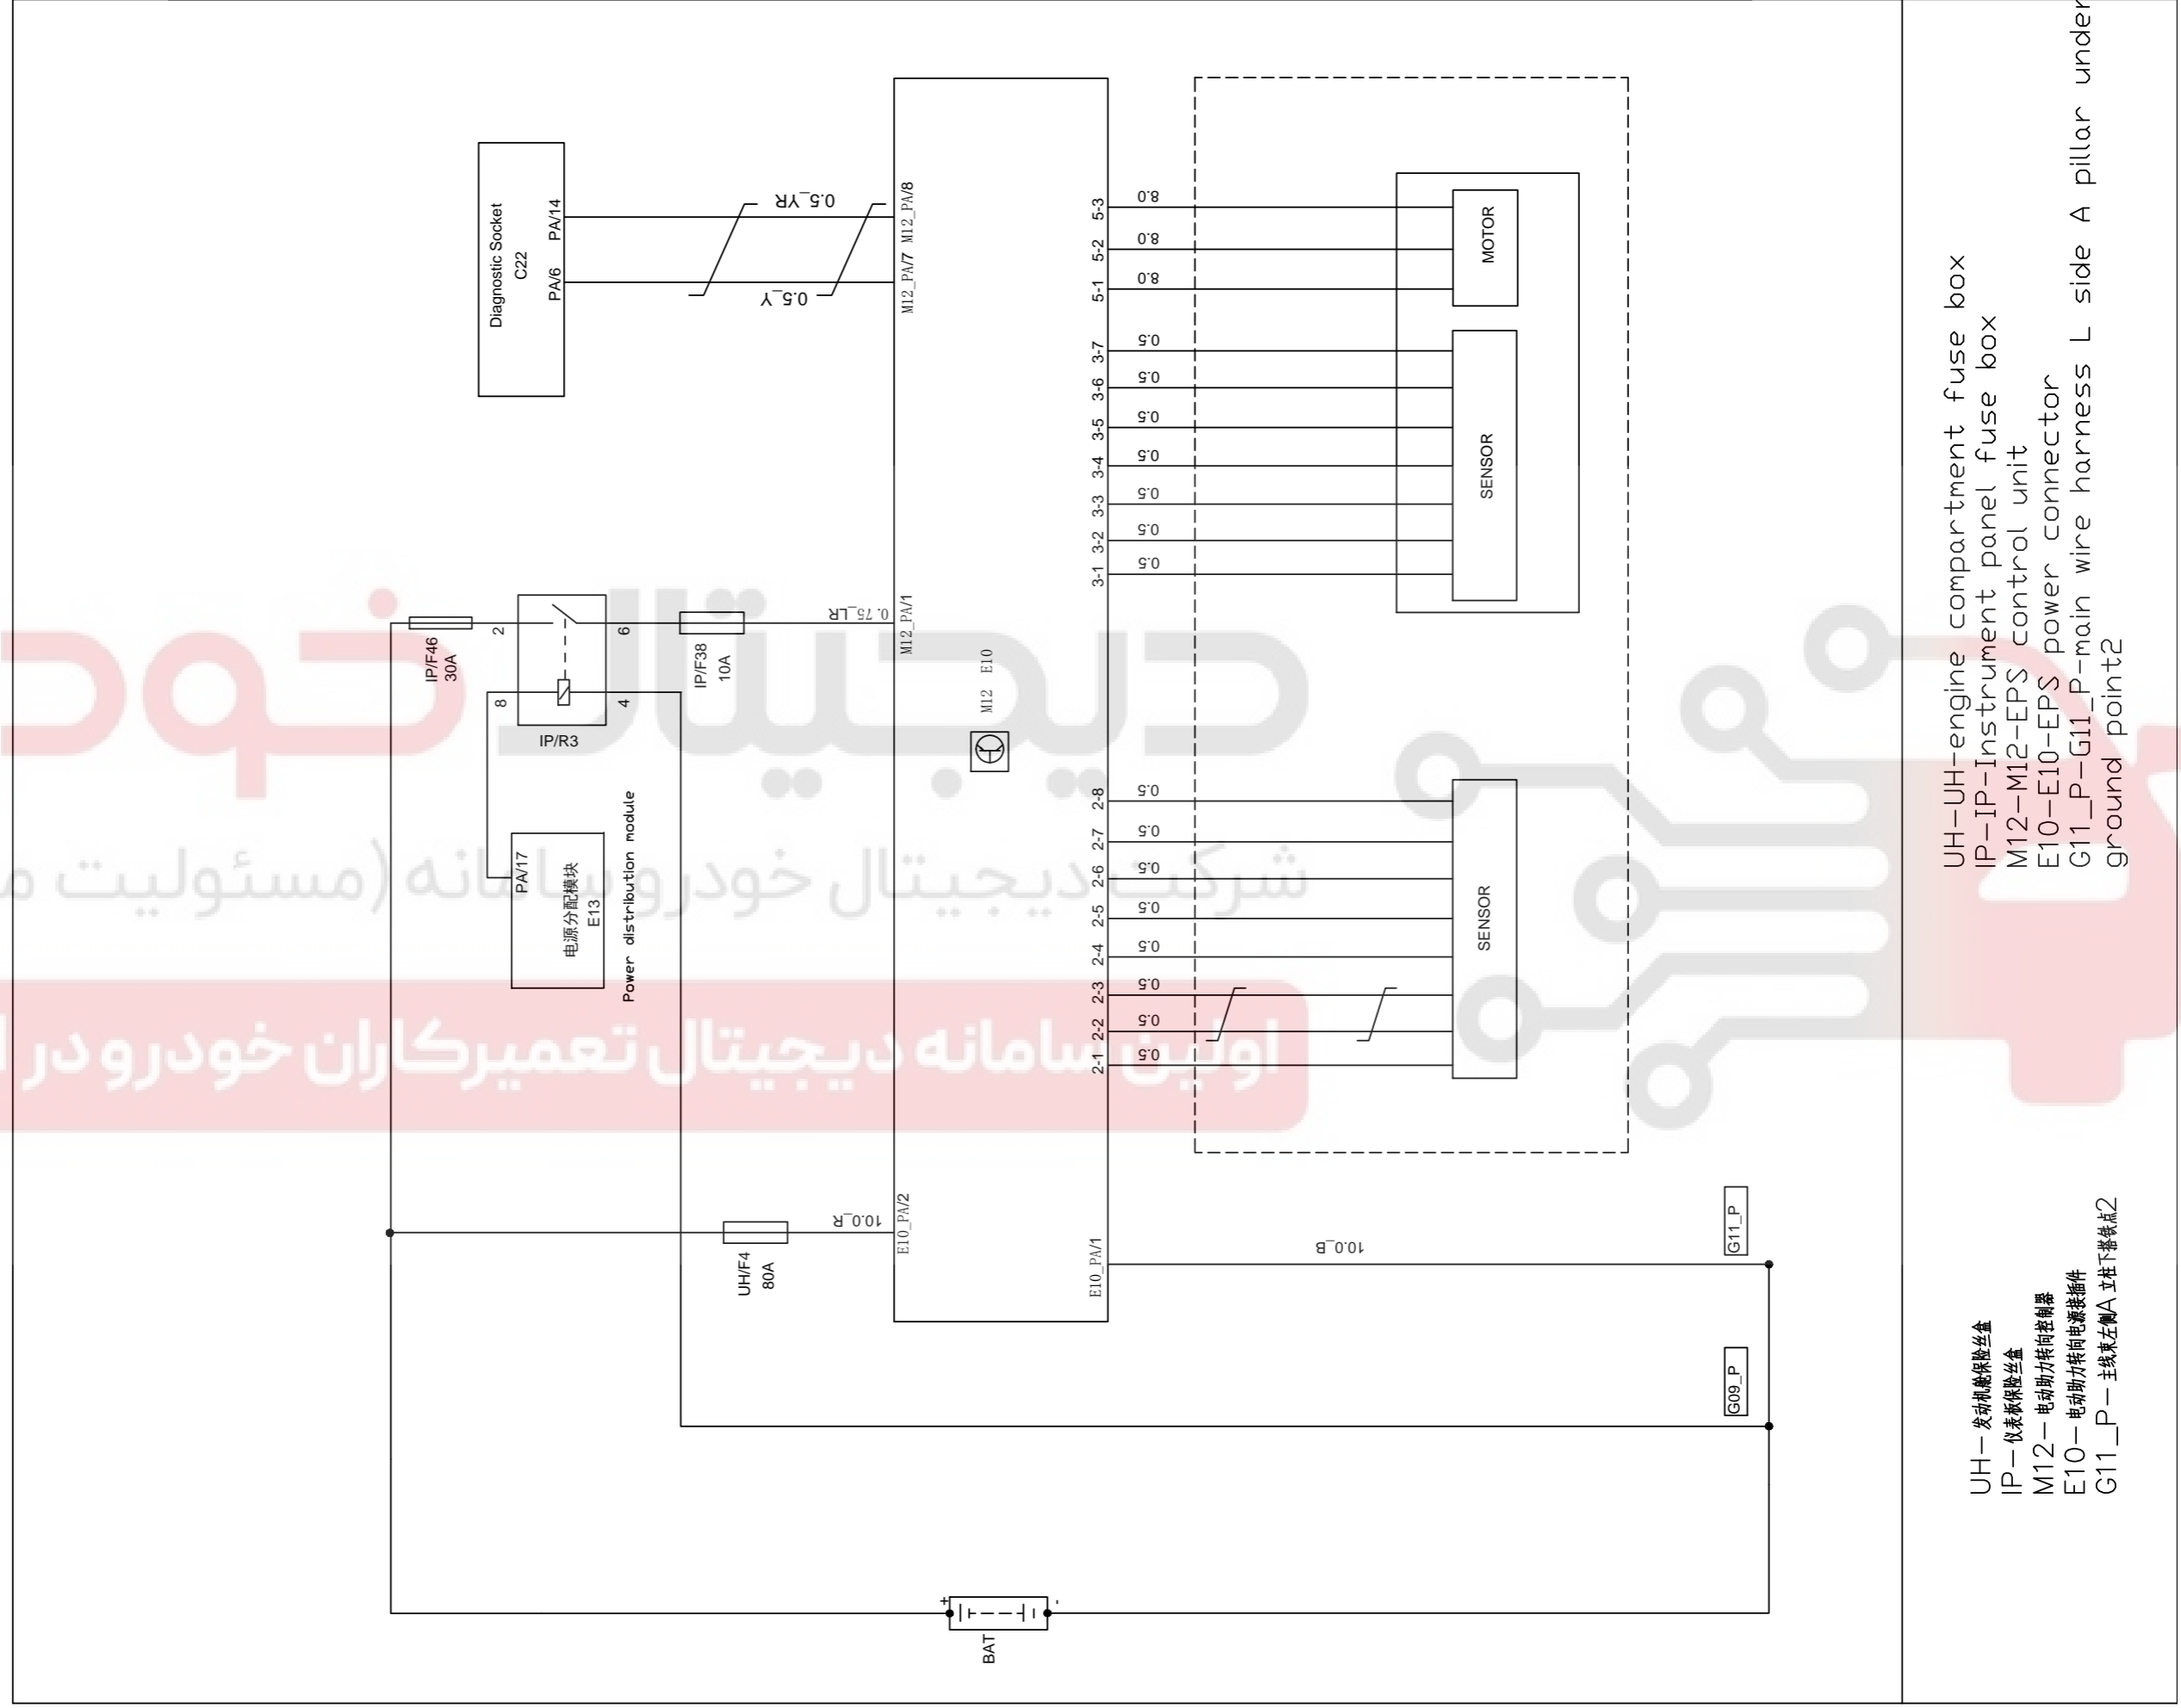

UH-UH-engine compartment fuse box
 IP-IP-Instrument panel fuse box
 M12-M12-EPS control unit
 E10-E10-EPS power connector
 G11_P-G11_P-main wire harness L side A pillar under ground point2

UH—发动机保险丝盒
 IP—仪表板保险丝盒
 M12—电动助力转向控制单元
 E10—电动助力转向电源连接器
 G11_P—主线路左侧A立柱下接点2