


Door Lock

Circuit Diagram (Page 1 of 4)

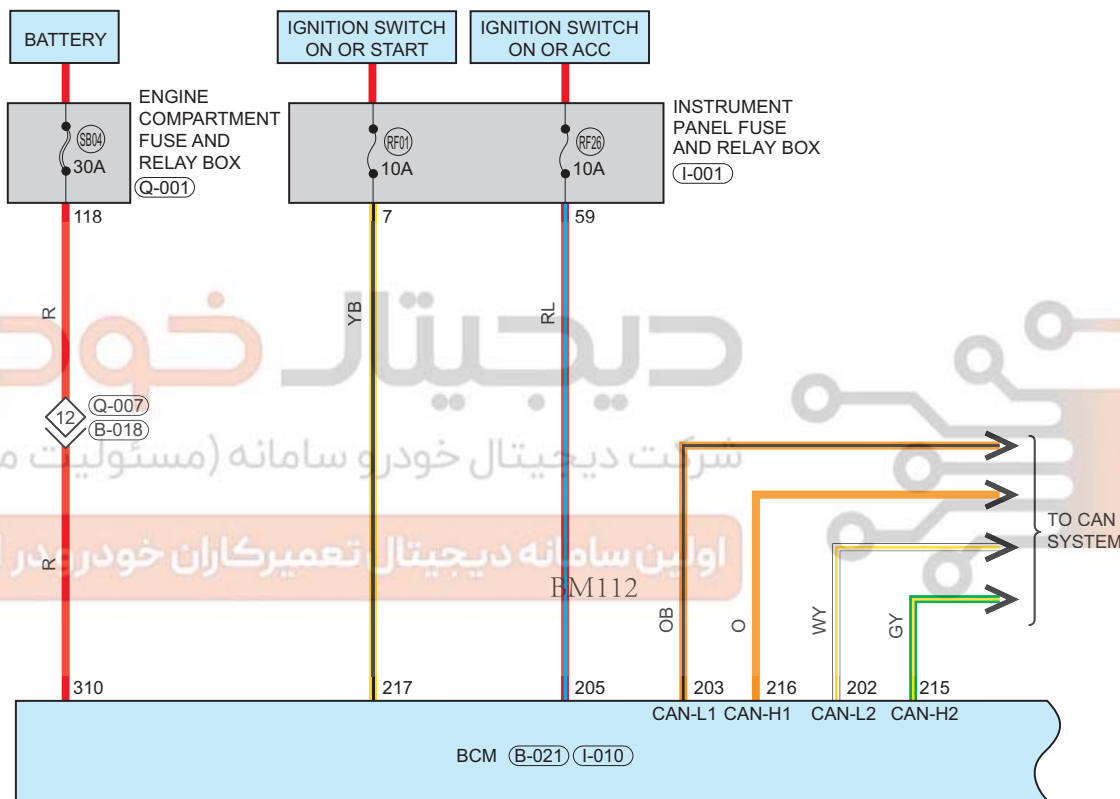

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	I-001	08-23	B-021	08-36
I-010	08-23				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
SB04	06-2	Engine Compartment Fuse and Relay Box
RF01	06-8	Instrument Panel Fuse and Relay Box
RF26	06-8	Instrument Panel Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-007, B-018	08-10, 08-36				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	I-001	12-4	B-021	12-8
I-010	12-4	Q-007, B-018	12-17, 12-8		

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 2 of 4)

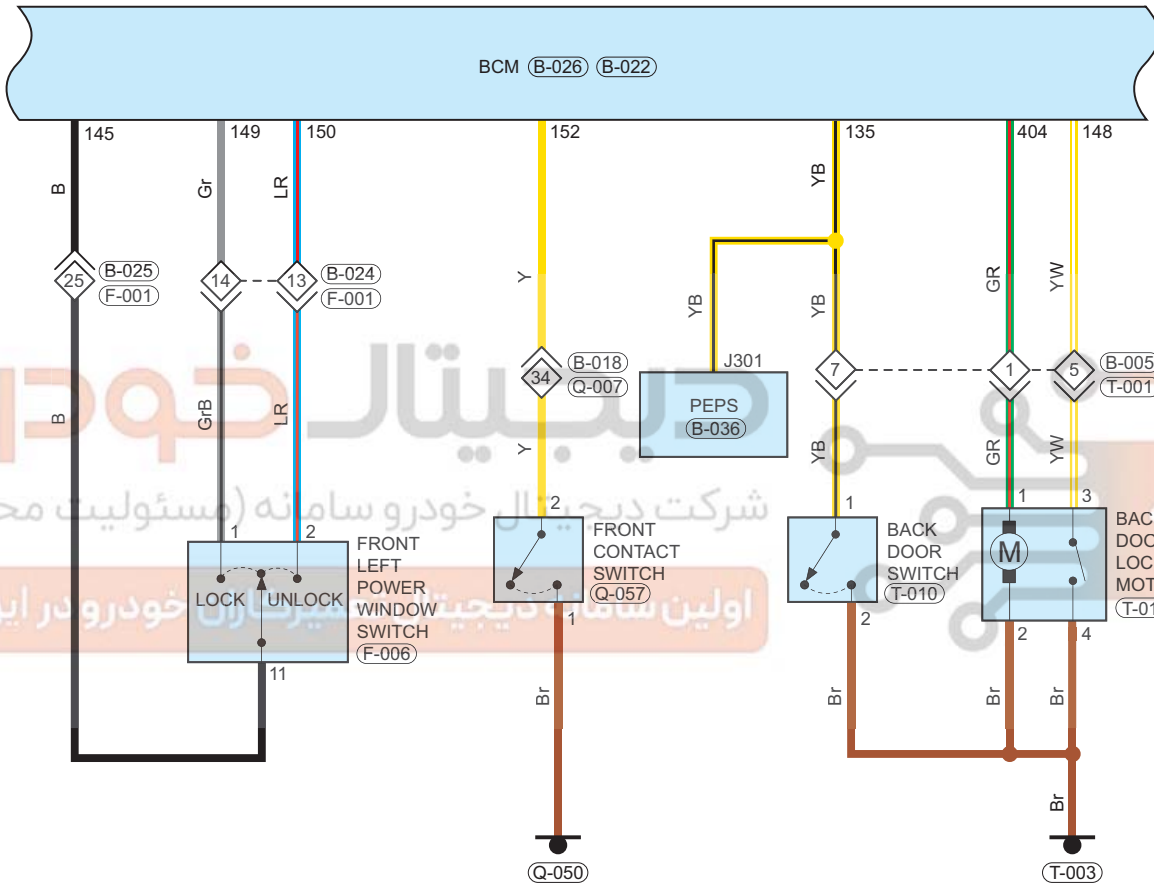

09

DLE002001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-026	08-36	B-022	08-36	F-006	08-56
Q-057	08-10	Q-050	08-10	B-036	08-36
T-010	08-60	T-016	08-60	T-003	08-60


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-025, F-001	08-36, 08-56	B-024, F-001	08-36, 08-56	B-018, Q-007	08-36, 08-10
B-005, T-001	08-36, 08-60				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-026	12-8	B-022	12-8	F-006	12-14
Q-057	12-17	Q-050	12-17	B-036	12-8
T-010	12-16	T-016	12-16	T-003	12-16
B-025, F-001	12-8, 12-14	B-024, F-001	12-8, 12-14	B-018, Q-007	12-8, 12-17
B-005, T-001	12-8, 12-16				

Circuit Diagram (Page 3 of 4)

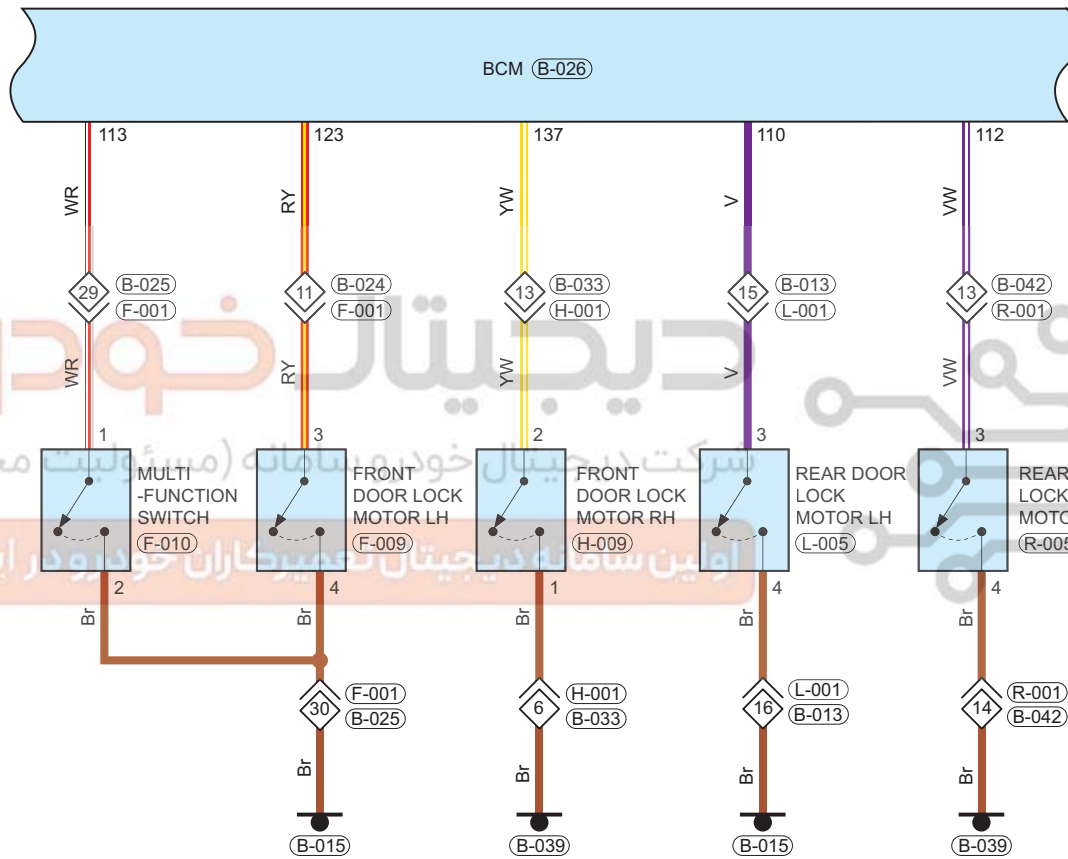

09

DLE003001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-026	08-36	F-010	08-56	F-009	08-56
B-015	08-36	H-009	08-57	B-039	08-36
L-005	08-58	B-015	08-36	R-005	08-59
B-039	08-36				

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-025, F-001	08-36, 08-56	B-024, F-001	08-36, 08-56	B-033, H-001	08-36, 08-57
B-013, L-001	08-36, 08-58	B-042, R-001	08-36, 08-59		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-026	12-8	F-010	12-14	F-009	12-14
B-015	12-8	H-009	12-14	B-039	12-8
L-005	12-15	B-015	12-8	R-005	12-15
B-039	12-8	B-025, F-001	12-8, 12-14	B-024, F-001	12-8, 12-14
B-033, H-001	12-8, 12-14	B-013, L-001	12-8, 12-15	B-042, R-001	12-8, 12-15

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 4 of 4)

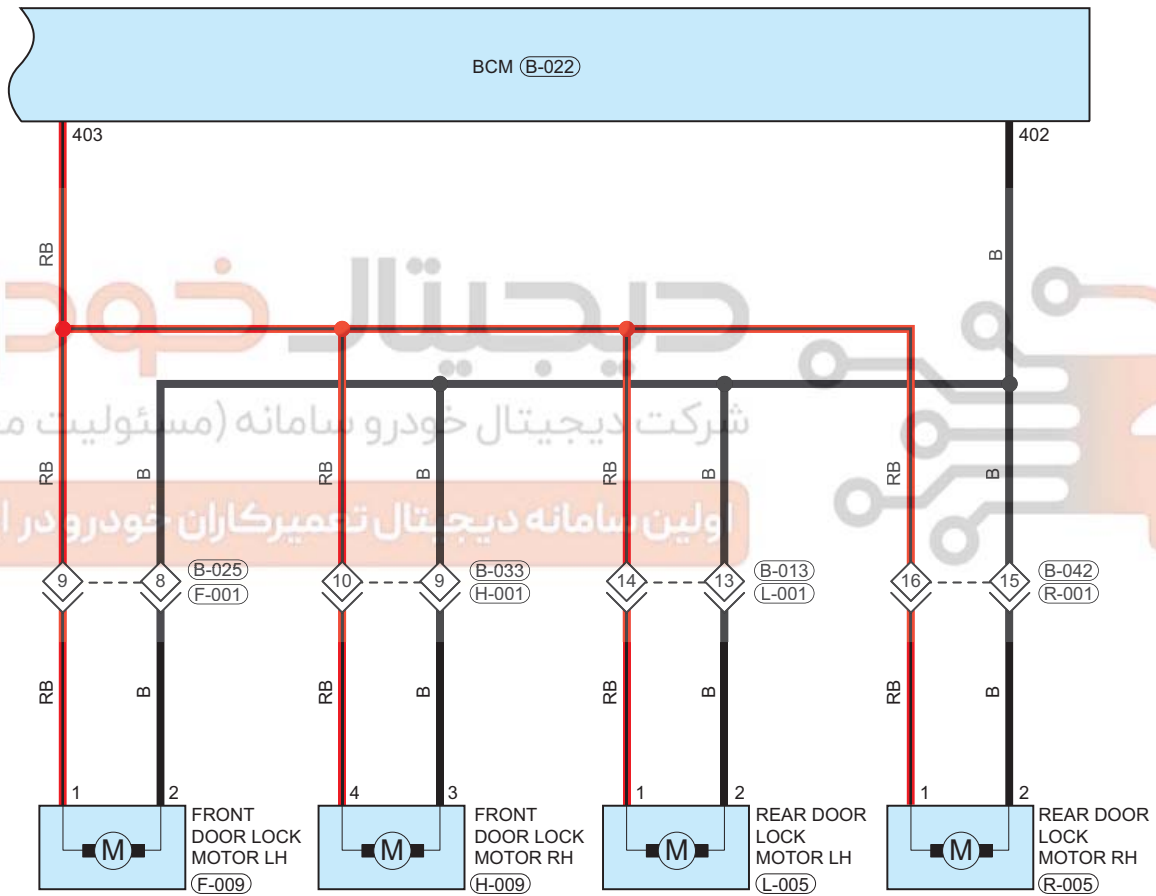

09

DLE004001