


倒车雷达 Reversing radar

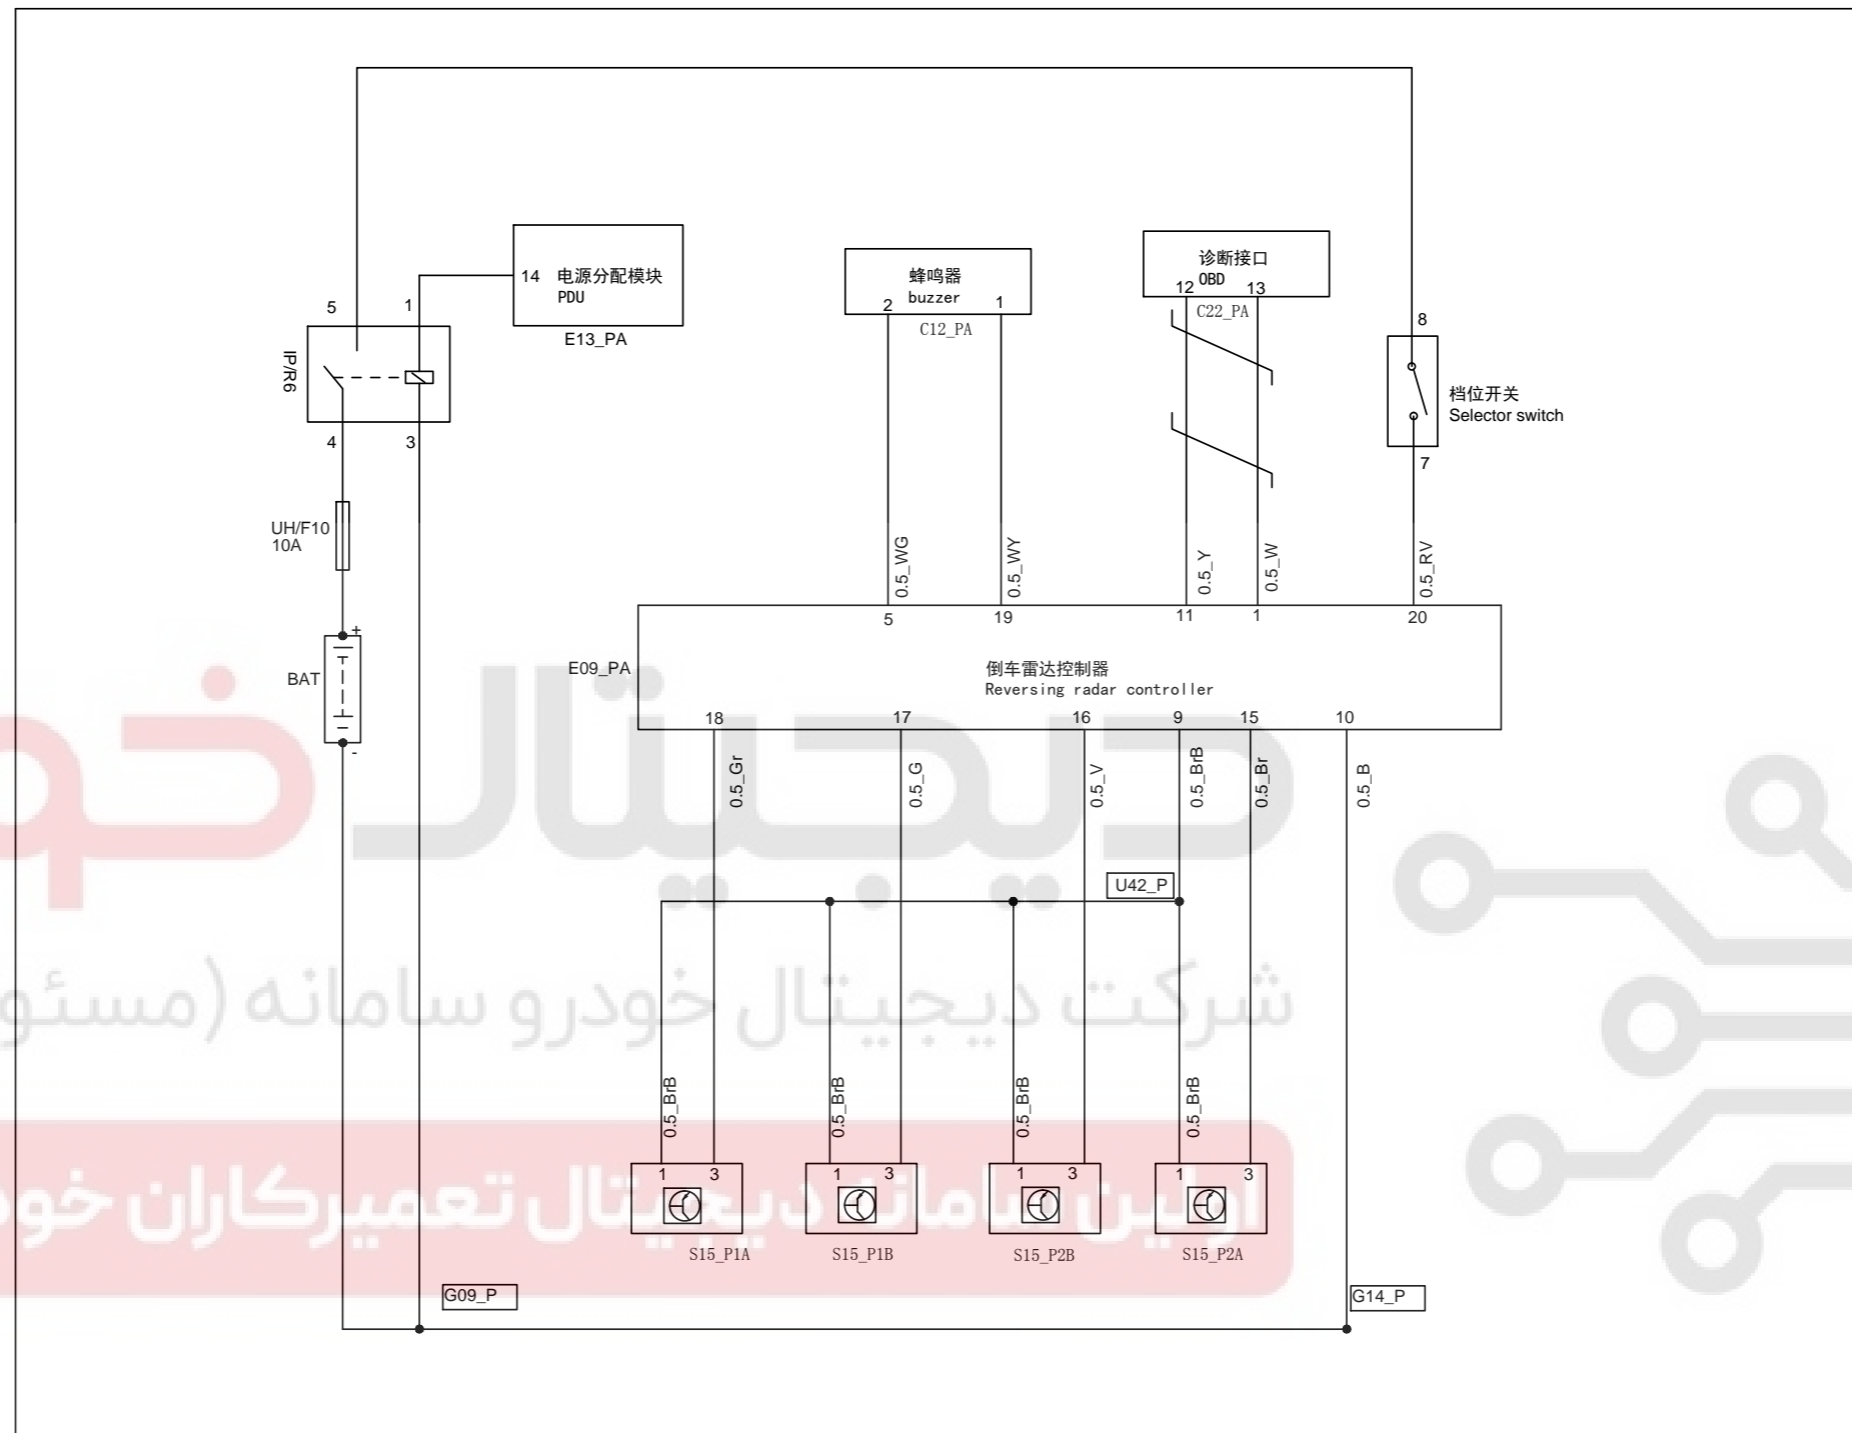

UH- 发动机舱保险丝盒
 IP- 仪表板保险丝盒
 E09- 倒车雷达ECU
 S15_P1A- 左后侧边传感器
 S15_P1B- 左后部传感器
 S15_P2B- 右后部传感器
 S15_P2A- 右后侧边传感器
 C12- 蜂鸣器
 G09_P- 主线束左侧A 立柱下搭铁点1
 G14_P_主线束右侧后排座椅下搭铁点

UH-engine compartment fuse box
 IP-instrument panel fuse box
 E09-Reversing radar controller
 S15_P1A-RL side sensor
 S15_P1B-RL sensor
 S15_P2B-RR sensor
 S15_P2A-RR side sensor
 C12-buzzer
 G09_P-ground point below main harness left A column
 G14_P_GND for main harness on right taillamp