


Position Light

Circuit Diagram (Page 1 of 2)

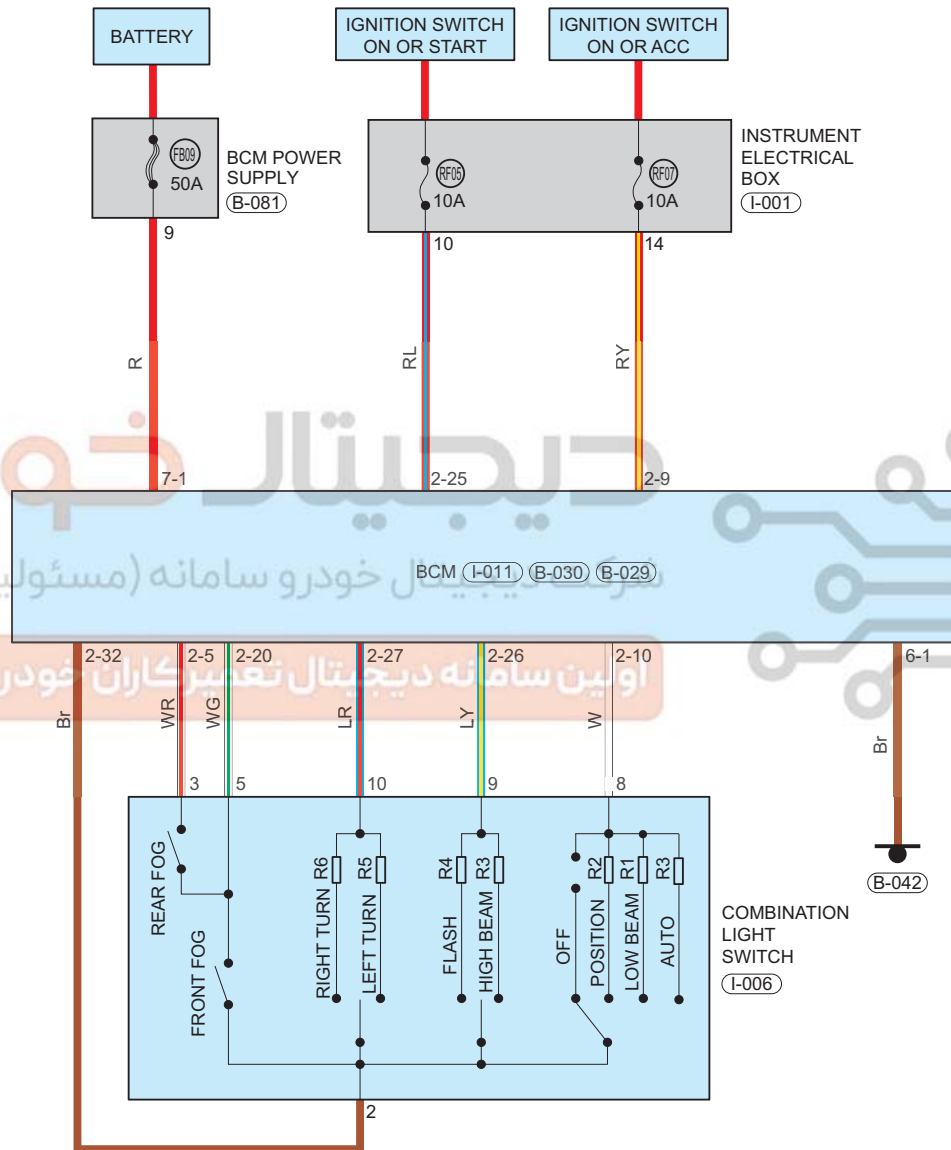

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-081	08-12	I-001	08-8	I-011	08-8
B-030	08-12	B-029	08-12	I-006	08-8
B-042	08-12				

Fuse and Relay


Fuse/Relay	See Page	Fuse and Relay Box
FB09	06-2	Engine Compartment Fuse And Relay Box
RF05	06-9	Instrument Panel Fuse And Relay Box
RF07	06-9	Instrument Panel Fuse And Relay Box

Form of Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-081	12-7	I-001	12-4	I-011	12-4
B-030	12-7	B-029	12-7	I-006	12-4
B-042	12-7				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

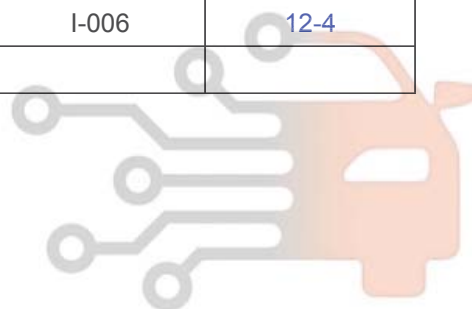

Circuit Diagram (Page 2 of 2)

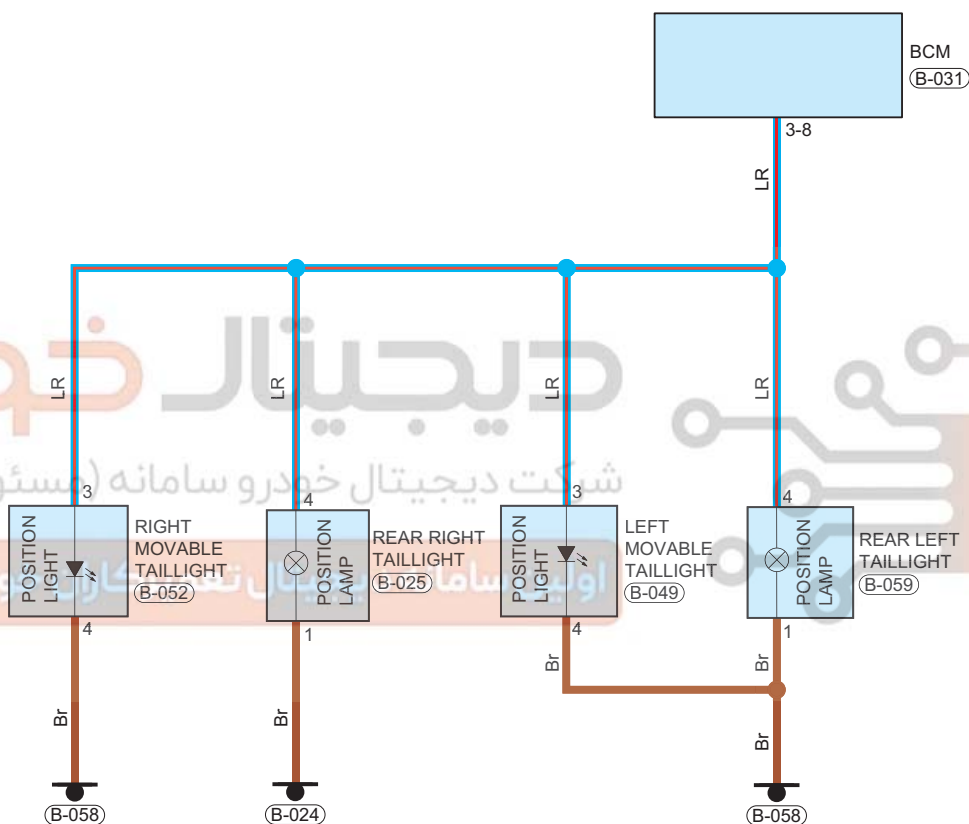

09

LIE007001