


brake information

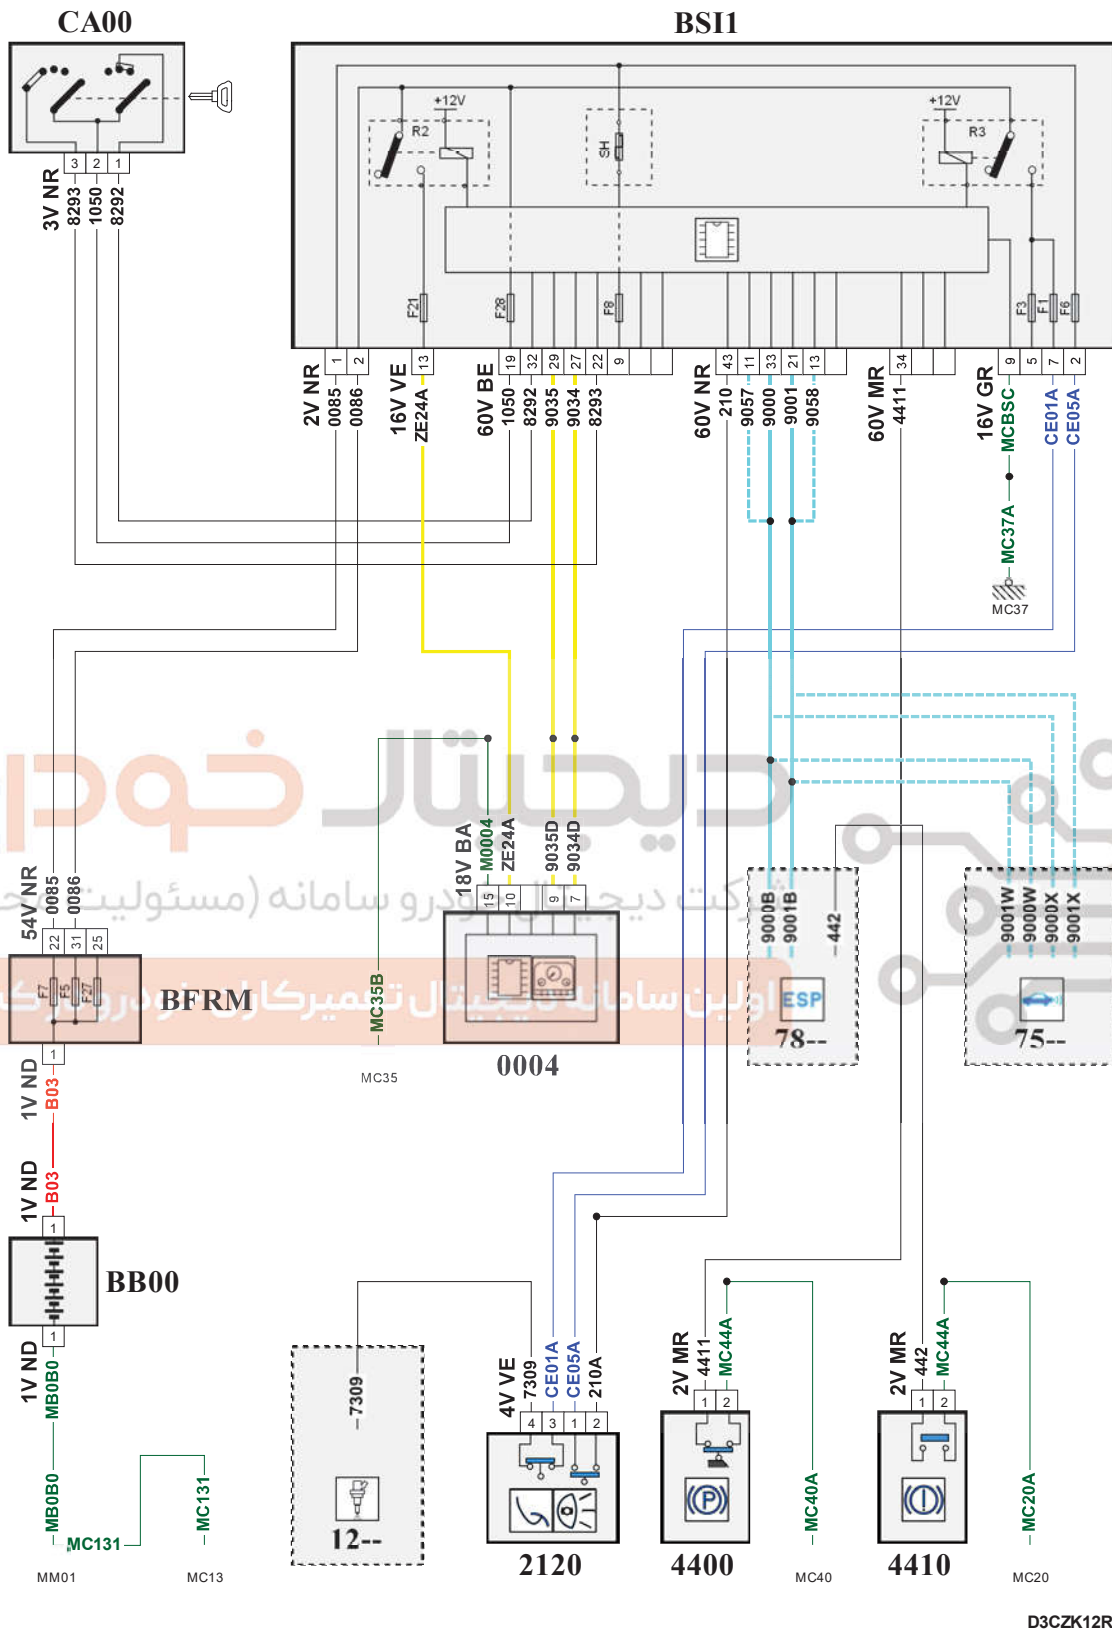

## brake information

item code	description	information
0004	null	/ instrument panel
1320	null	engine management ECU /
2120	null	dual function brake switch /
4400	null	handbrake switch
4410	null	brake fluid level switch
7500	null	Parking assistance ECU
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E210	null	crimp one information (or equipotential 210) wire
E900C	null	crimp one information (or equipotential 900C) wire
E900G	null	crimp one information (or equipotential 900G) wire
E901C	null	crimp one information (or equipotential 901C) wire
E901G	null	crimp one information (or equipotential 901) wire
E904	null	crimp one information (or equipotential 904) wire
E905	null	crimp one information (or equipotential 905) wire
EM20	null	crimp earth (earth point number 20)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM40	null	crimp earth (earth point number 40)
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35A	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MM01	null	engine earth point number 01