


BAT

IG1

IG2

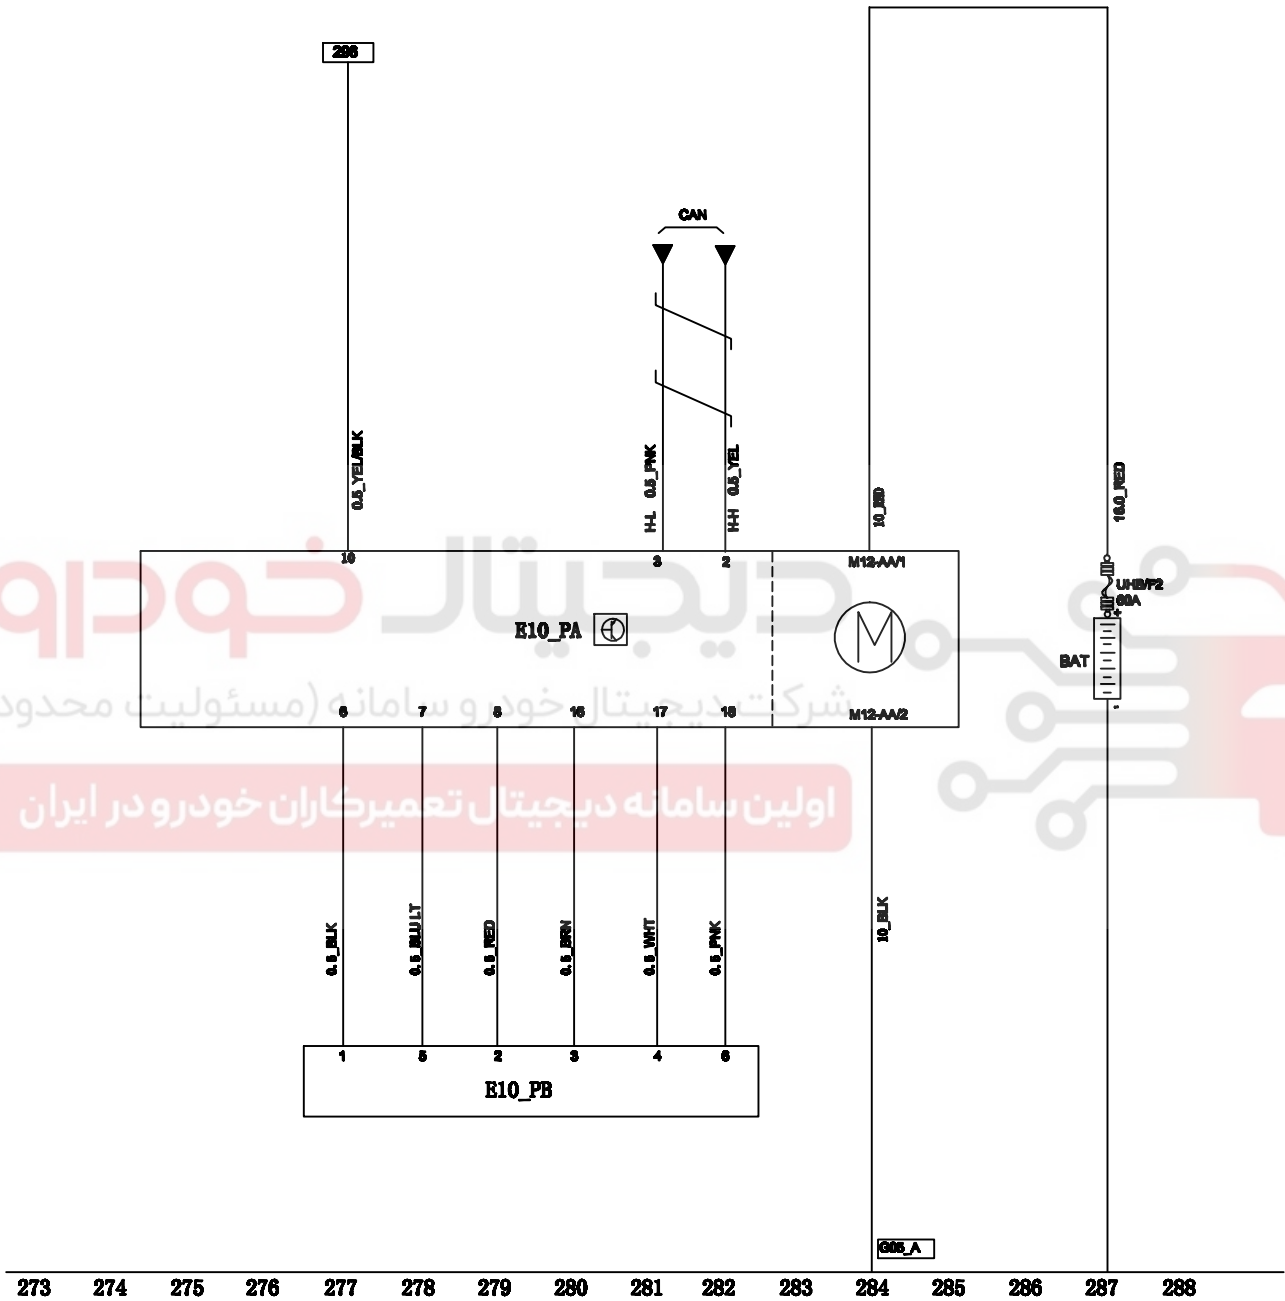

Electric power steering circuit diagram

UHB(BAT)-connection, engine compartment fuse box connecting to positive pole of battery

BAT-battery

E10_PA-electric power steering ECU connector 20 holes black

E10_PB-torque sensor connector 6 holes

M12_AA-electric power steering power connector 2 holes black

G05_A-ground 2 on the left shock absorber in the engine compartment