



Reversing system-2		E-2
Component location index		
Component code	Component name	
F21	Reversing radar controller	
F25	Left reversing radar sensor	
F26	Right reversing radar sensor	
F28	Left rear reversing lamp	
F31	Right rear reversing lamp	
A25	Reversing lamp switch	
<b>Connector</b>		
PEE	Connector E of indoor electrical box and engine harness	
PFB	Connector B of indoor electrical box and body harness	
EC2	Connector 2 of engine control wiring harness and engine harness	
MF1	Connector 1 of main wiring harness and body harness	
<b>Ground wire</b>		
F45		
F42		
F14		