


无钥匙进入系统

PEPS

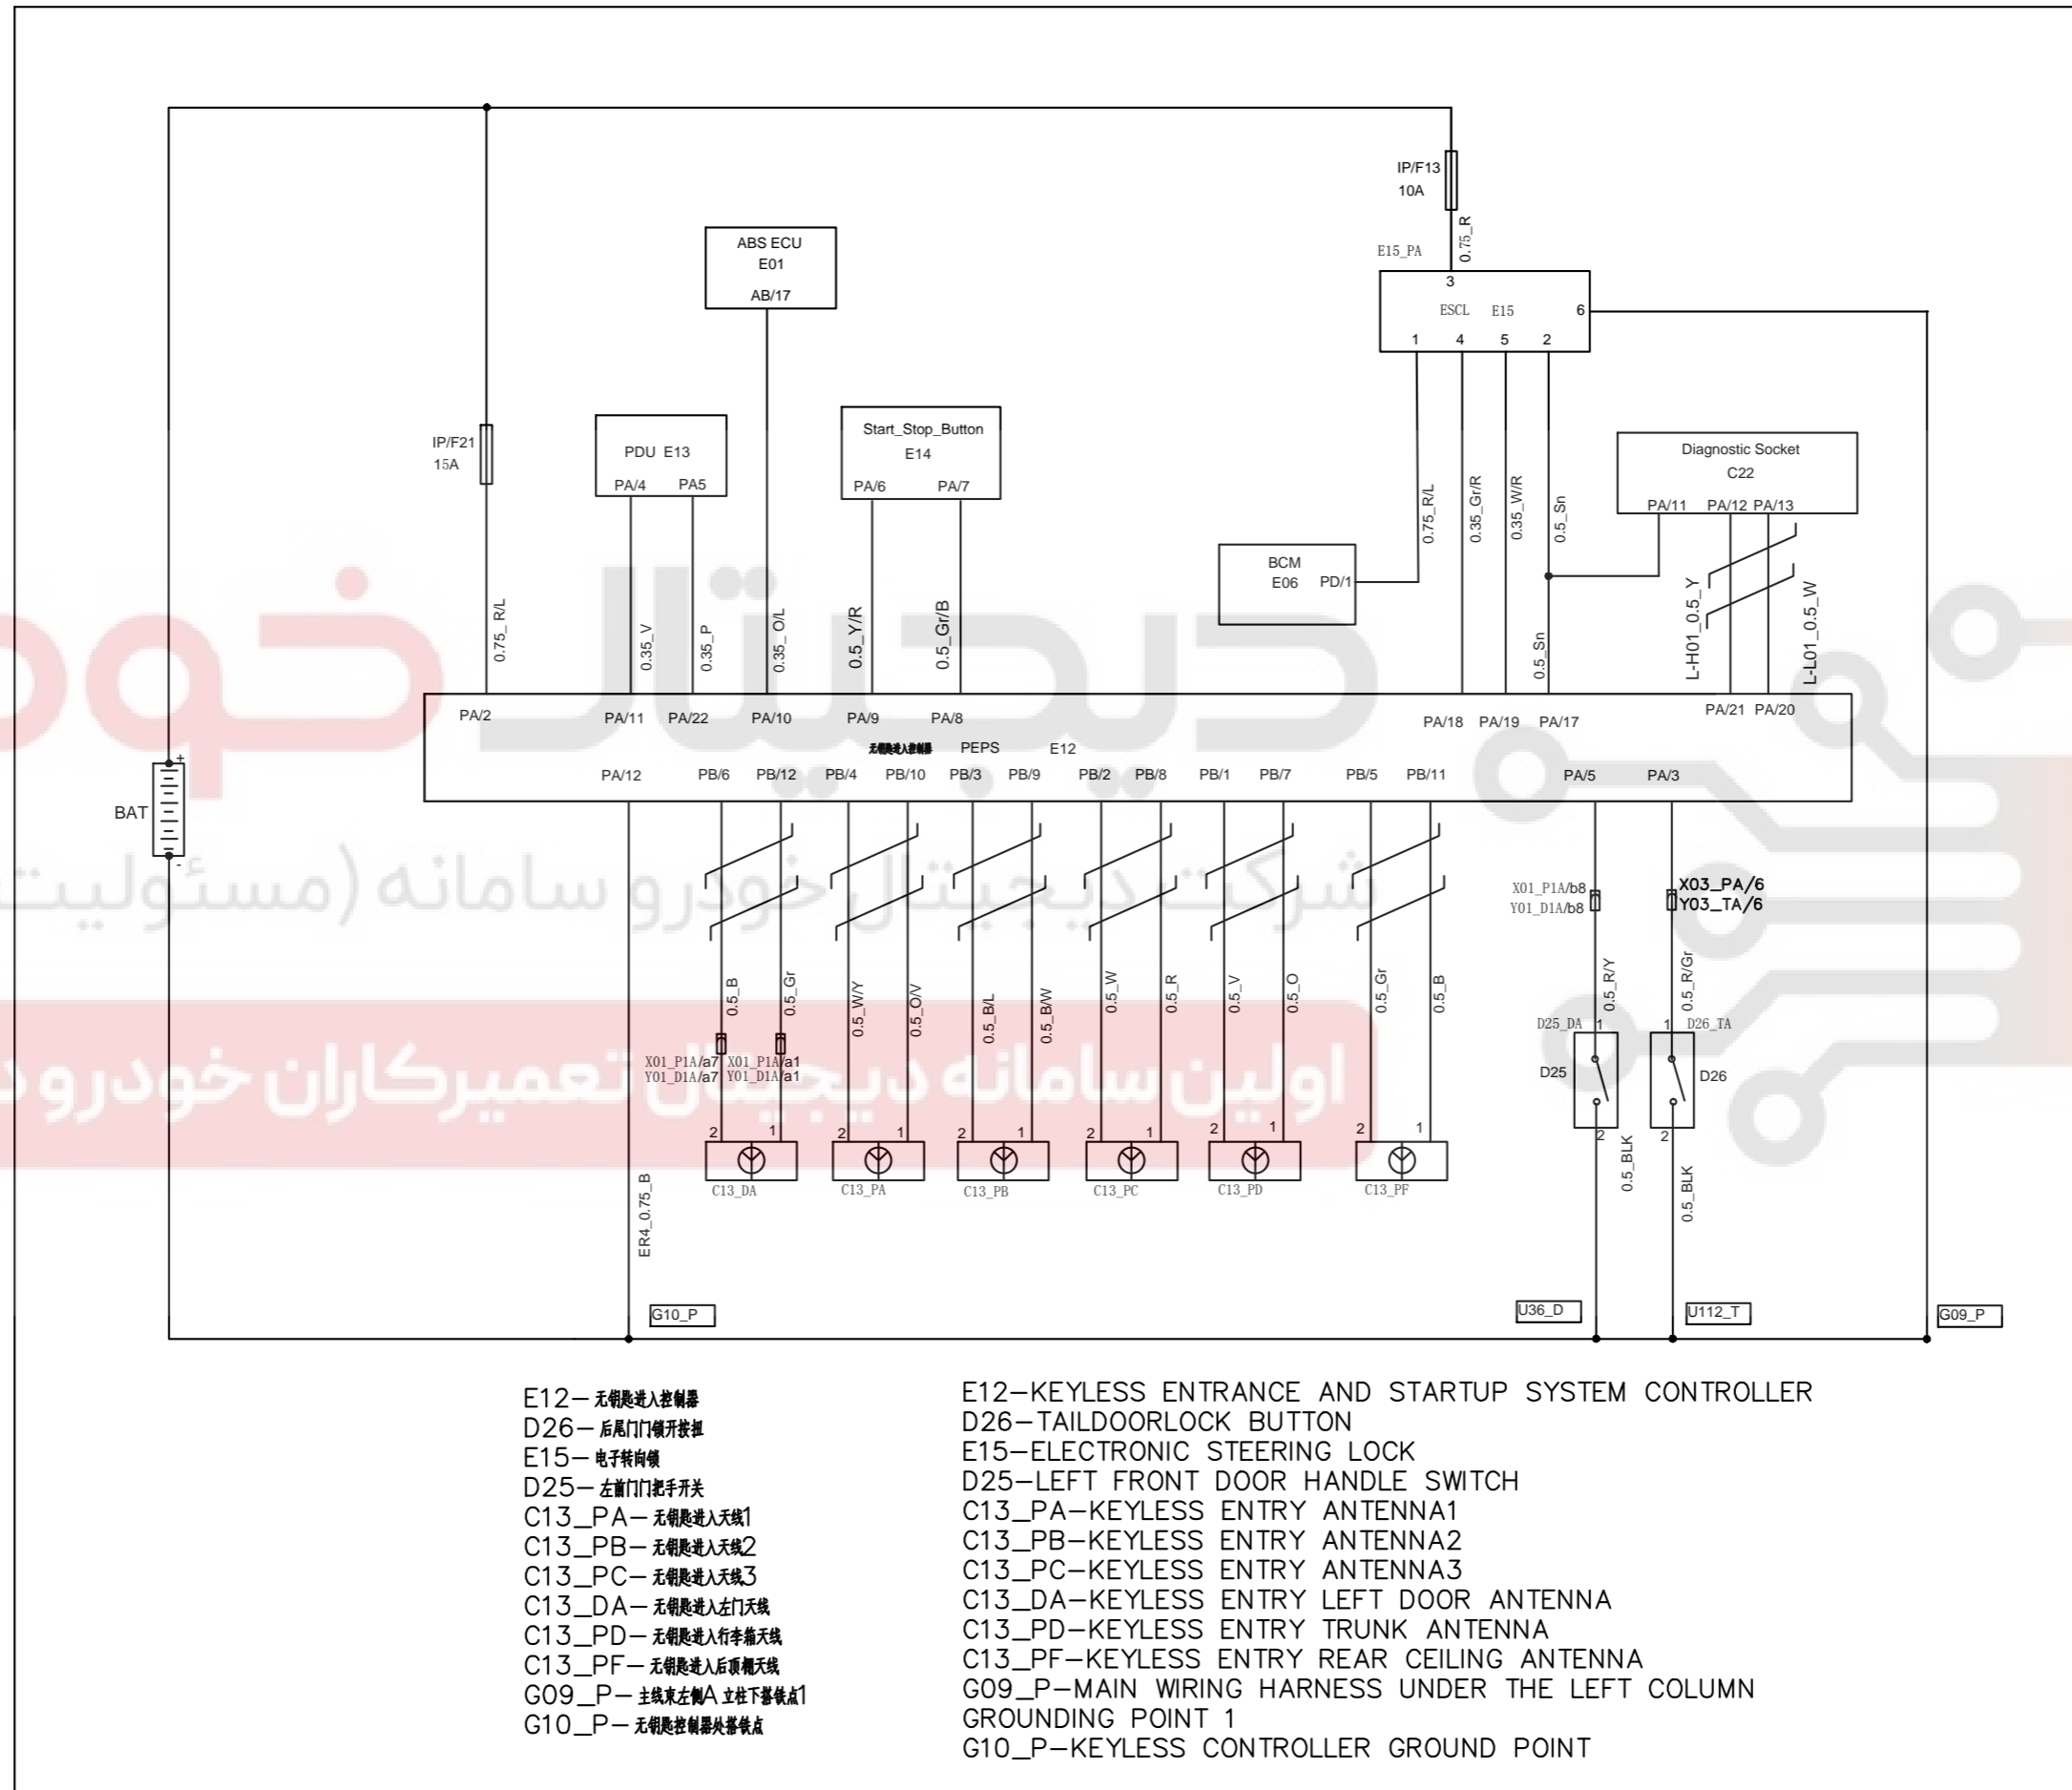

E12—无钥匙进入控制器  
 D26—后尾门锁开按钮  
 E15—电子转向锁  
 D25—左前门把手开关  
 C13\_PA—无钥匙进入天线1  
 C13\_PB—无钥匙进入天线2  
 C13\_PC—无钥匙进入天线3  
 C13\_DA—无钥匙进入左门天线  
 C13\_PD—无钥匙进入行李箱天线  
 C13\_PF—无钥匙进入后顶棚天线  
 G09\_P—主线束左侧A立柱下搭铁点1  
 G10\_P—无钥匙控制器处搭铁点

E12—KEYLESS ENTRANCE AND STARTUP SYSTEM CONTROLLER  
 D26—TAILDOORLOCK BUTTON  
 E15—ELECTRONIC STEERING LOCK  
 D25—LEFT FRONT DOOR HANDLE SWITCH  
 C13\_PA—KEYLESS ENTRY ANTENNA1  
 C13\_PB—KEYLESS ENTRY ANTENNA2  
 C13\_PC—KEYLESS ENTRY ANTENNA3  
 C13\_DA—KEYLESS ENTRY LEFT DOOR ANTENNA  
 C13\_PD—KEYLESS ENTRY TRUNK ANTENNA  
 C13\_PF—KEYLESS ENTRY REAR CEILING ANTENNA  
 G09\_P—MAIN WIRING HARNESS UNDER THE LEFT COLUMN  
 GROUNDING POINT 1  
 G10\_P—KEYLESS CONTROLLER GROUND POINT