BODY EXTERIOR

5110-00/5125-00/5210-00/5510-00/5610-00/5620-00/5710-00/5720-00/ 5720-04/5730-00/6110-00/6110-01/6110-06/6110-31/6210-00/6210-01/ 6310-00/6310-01/6410-00/6410-01/7090-00/7110-00/7110-01/7110-11/ 7120-00/7120-01/7121-00/7121-05/7210-00/7210-01/7210-11/7220-00/ 7220-01/7221-00/7221-05/7310-00/7840-00/7850-00/7870-00/7880-00/ 7910-00/7910-01/7930-00/7930-01/7930-05/7930-10/7940-00/7940-20/

BODY EXTERIOR

CONFIGURATION AND FUNCTIONS

| 5110-00 WHITE BODY | 3 | 7850-00 OUTSIDE REAR VIEW MIRROR | 25 |
|---------------------------------|---------|----------------------------------|----|
| 5125-00 BODY FRAME | 4 | 7870-00 FRONT BUMPER | 26 |
| 5210-00 SIDE AND REAR BODIES | 5 | 7880-00 REAR BUMPER | 27 |
| 5510-00 ROOF PANEL | 6 | 7910-00 RADIATOR GRILLE | 28 |
| 5610-00 FRONT FLOOR PANEL | ، دتحبت | 7930-00 SIDE BODY MOLDING | 29 |
| 5620-00 REAR FLOOR PANEL | 8 | 7940-00 ROOF AND REAR BODY | |
| 5710-00 FRONT END PANEL | 9 | MOLDINGS | 30 |
| 5720-00 FENDER AND APRON PANEL | 10 | 7950-00 EMBLEM | 31 |
| 5730-00 DASH PANEL AND COWL | 11 | 7970-00 WHEEL HOUSE COVER | 32 |
| 6110-00 HOOD PANEL | 12 | | |
| 6210-00 FRONT DOOR PANEL | 13 | | |
| 6310-00 REAR DOOR PANEL | 14 | | |
| 6410-00 TAILGATE PANEL | 15 | | |
| 7090-00 FUEL FILLER DOOR | 16 | | |
| 7110-00 FRONT DOOR LATCH CABLE | | | |
| AND HANDLE | 17 | | |
| 7120-00 FRONT DOOR POWER WINDOW | | | |
| REGULATOR AND MOTOR | 18 | | |
| 7121-00 FRONT DOOR WEATHERSTRIP | 19 | | |
| 7210-00 REAR DOOR LATCH CABLE | | | |
| AND HANDLE | 20 | | |
| 7220-00 REAR DOOR POWER WINDOW | | | |
| REGULATOR AND MOTOR | 21 | | |
| 7221-00 REAR DOOR WEATHERSTRIP | 22 | | |
| 7310-00 TAILGATE OPENING SYSTEM | 23 | | |
| 7840-00 GLASS | 24 | | |

BODY EXTERIOR

REMOVAL AND INSTALLATION

| 7870-00 FRONT BUMPER ASSEMBLY | 33 | 7221-05 REAR DOOR BELT OUTSIDE | |
|--|----|-----------------------------------|-----|
| 7910-01 RADIATOR GRILLE ASSEMBLY | 41 | WEATHERSTRIP | 57 |
| 6110-01 HOOD PANEL ASSEMBLY | 44 | 7210-01 REAR DOOR LATCH AND CABLE | |
| 6110-06 HOOD LATCH | 46 | ASSEMBLY | 59 |
| 6110-31 COWL GRILLE | 48 | 7210-11 REAR DOOR OUTSIDE HANDLE | |
| 5720-04 FENDER PANEL | 52 | ASSEMBLY | 93 |
| 793 <mark>0-01</mark> A-PILLAR GARNISH ASSEMBLY. | 57 | 7220-01 REAR DOOR POWER WINDOW | |
| 7930-05 C-PILLAR GARNISH ASSEMBLY. | 60 | REGULATOR | 97 |
| 7930-10 SIDE SEAL GARNISH | | 6310-01 REAR DOOR PANEL | |
| ASSEMBLY | 62 | ASSEMBLY | 100 |
| 7850-00 OUTSIDE REAR VIEW MIRROR | | 6410-01 TAILGATE PANEL ASSEMBLY | 103 |
| ASSEMBLY | 64 | 7940-20 REAR SPOILER ASSEMBLY | 108 |
| 7121-05 FRONT DOOR BELT OUTSIDE | | 7880-00 REAR BUMPER ASSEMBLY | 110 |
| WEATHERSTRIP | 66 | | |
| 7110-01 FRONT DOOR LATCH AND | | | |
| CABLE ASSEMBLY | 68 | | |
| 7110-11 FRONT DOOR OUTSIDE | | | |
| HANDLE ASSEMBLY | 72 | | |
| 7120-01 FRONT DOOR POWER WINDOW | | | |
| REGULATOR | 81 | | |
| 6210-01 FRONT DOOR PANEL | | | |
| ASSEMBLY | 85 | | |


06-3

BODY EXTERIOR

5110-00

CONFIGURATION AND FUNCTIONS

5110-00 WHITE BODY

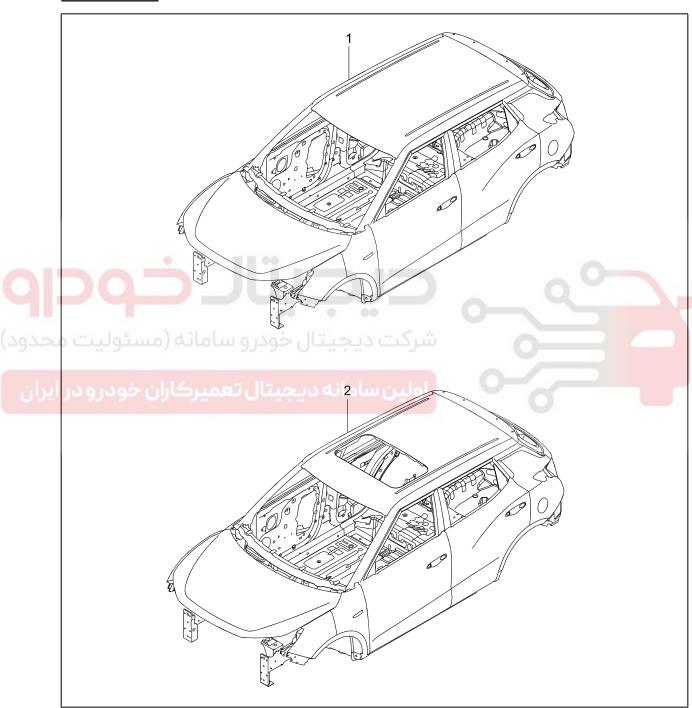

- 1. White body
- 2. White body (for vehicles with sunroof)

Modification basis
Application basis
Affected VIN


WWW.DIGITALKHODRO.COM

BODY EXTERIOR

5125-00

TIVOLI

5125-00 BODY FRAME

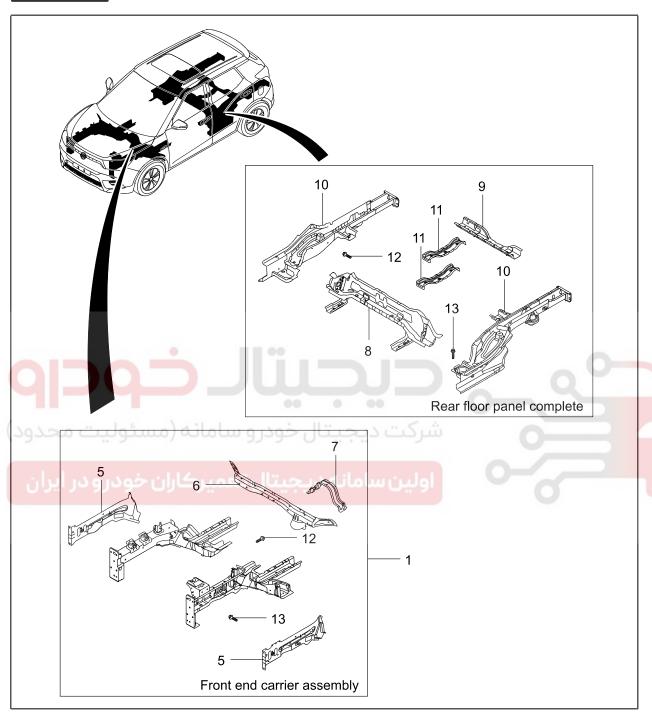

- 1. Front H-frame member assembly
- 2. Rear H-frame member assembly
- 3. Front side LH member assembly
- 4. Front side RH member assembly
- 5. Front side outer member assembly
- 6. Dash lower front member assembly
- 7. Dash lower center reinforcement


- 8. Rear floor No. 1 cross member assembly
- 9. Rear floor No. 2 cross member assembly
- 10.Rear side LH member assembly
- 11.Intermediate floor center member
- 12.Bolt
- 13.Bolt

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

L

5210-00 SIDE AND REAR BODIES

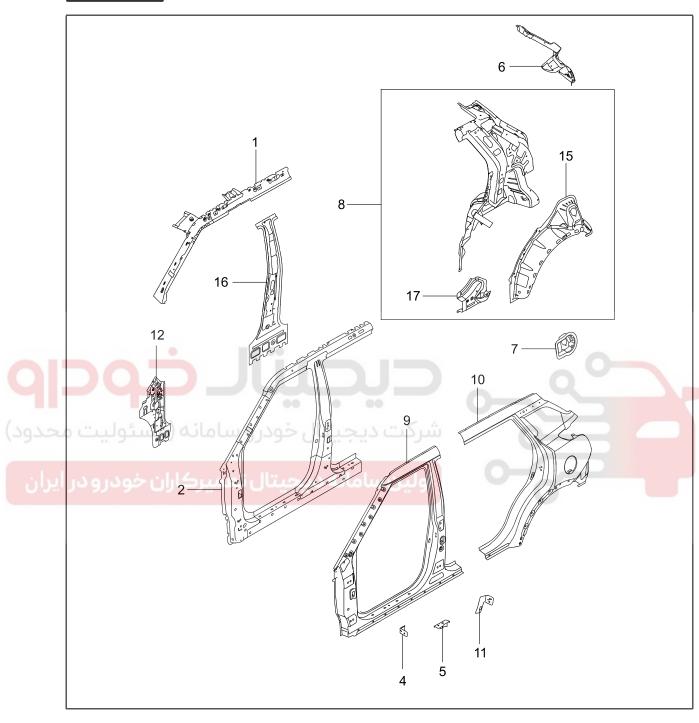


- 1. A-pillar upper panel assembly
- 2. Side outer reinforcement assembly
- 4. Fender mounting lower bracket assembly
- 5. Fender mounting upper bracket assembly
- 6. D-pillar outer complete
- 7. Fuel filler housing assembly
- 8. Quarter inner and wheel house panel complete
- 9. Side outer front panel
- 10. Side outer rear panel
- 11.Rear door striker reinforcement assembly
- 12. Cowl side inner panel complete
- 15. Wheel house rear outer panel assembly
- 16.B-pillar inner assembly
- 17. Side seal rear outer reinforcement

5510-00

TIVOLI

5510-00 ROOF PANEL

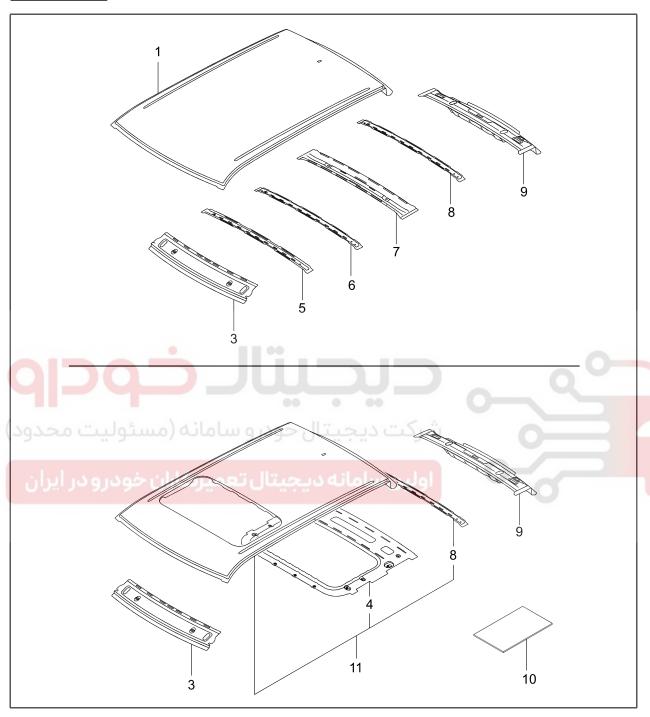


- 1. Roof panel
- 3. Front roof rail assembly
- 4. Sunroof reinforcement assembly
- 5. Roof No. 1 center rail
- 6. Roof No. 2 center rail

- 7. Roof No. 3 center rail
- 8. Roof No. 4 center rail
- 9. Roof rear rail assembly
- 10.Anti-vibration pad
- 11.Roof panel assembly

BODY EXTERIOR

0 L

5610-00 FRONT FLOOR PANEL

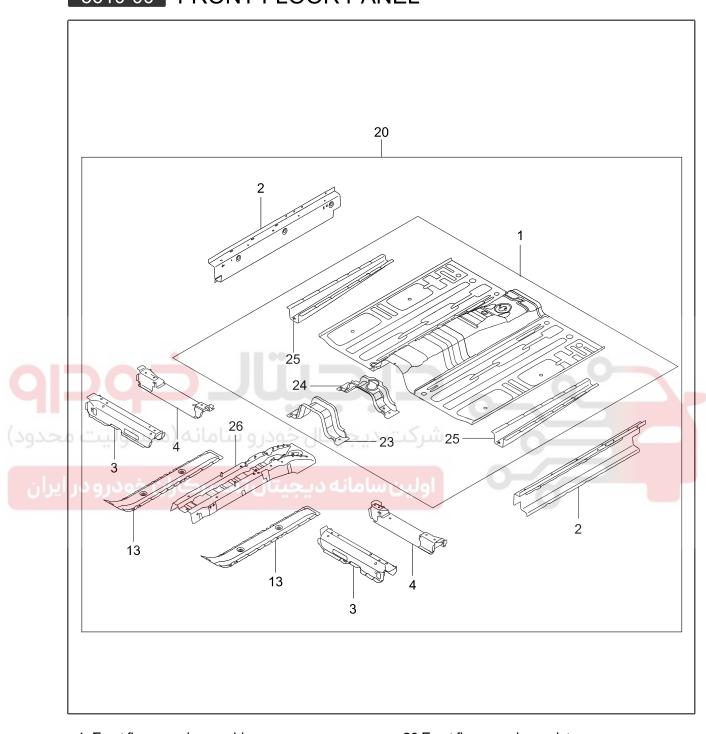


- 1. Front floor panel assembly
- 2. Side seal inner panel assembly
- 3. Front seat mounting front member assembly
- 4. Front seat mounting rear member assembly
- 13. Front floor upper member

- 20. Front floor panel complete
- 23. Front tunnel front cross member
- 24. Front tunnel rear cross member assembly
- 25.Center side member assembly
- 26. Front tunnel reinforcement assembly

06-8 5620-00

TIVOLI

5620-00 REAR FLOOR PANEL

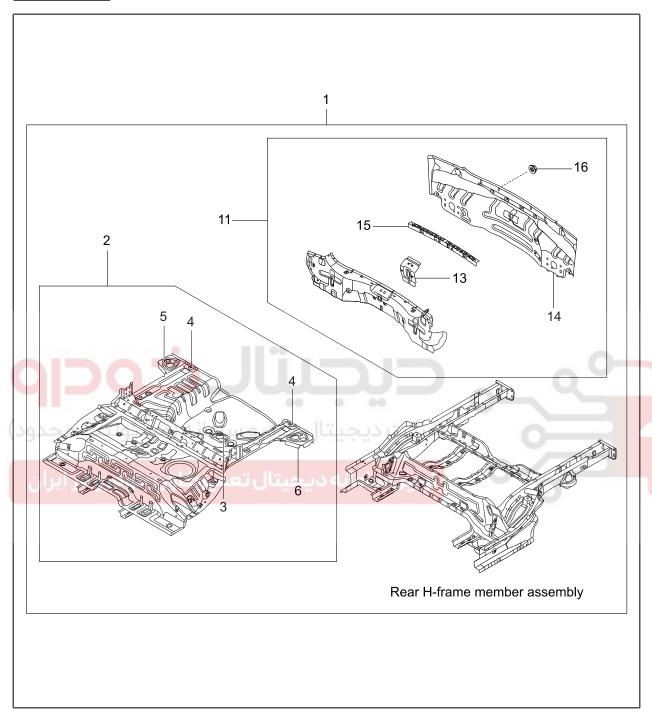

- 1. Rear floor panel complete
- 2. Rear floor panel assembly
- 3. Spare tire mounting bracket assembly
- 4. Rear floor rear bracket
- 5. Rear floor side LH extension
- 6. Rear floor side RH extension


- 11.Rear end member assembly
- 13. Tailgate striker mounting reinforcement assembly
- 14.Back outer panel assembly
- 15.Rear bumper mounting upper bracket assembly
- 16 Hexagon flanged nut

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

L

5710-00 FRONT END PANEL

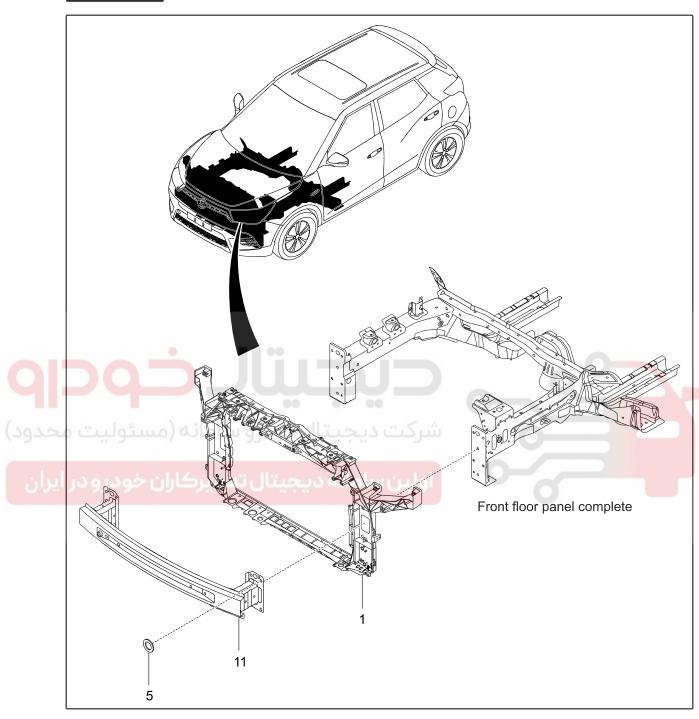


- 1. Front end carrier assembly
- 5. Washer
- 11. Front bumper impact beam assembly

06-10 5720-00

0 L

5720-00 FENDER AND APRON PANEL

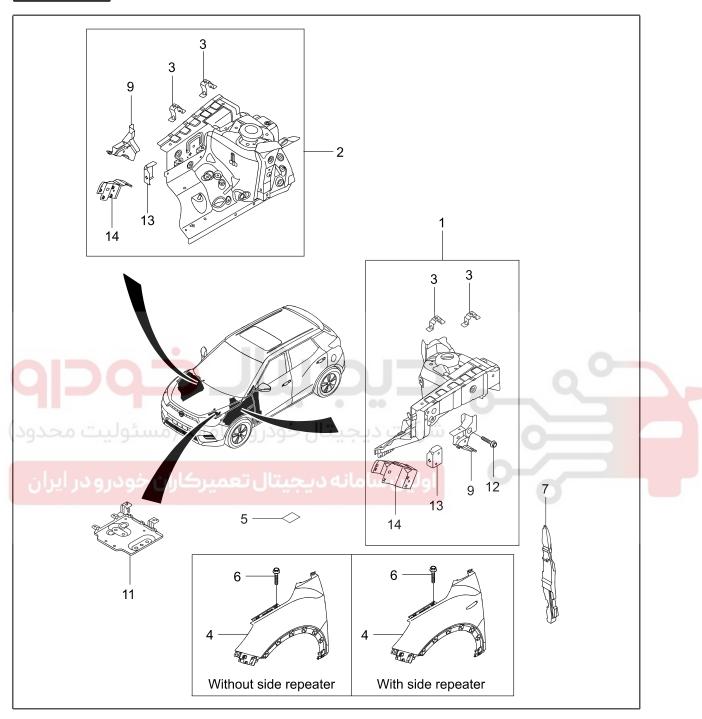


- 1. Fender apron LH panel complete
- 2. Fender apron RH panel complete
- 3. Fender mounting front bracket assembly
- 4. Fender panel
- 5. Fender mounting sealing pad
- 6. Flange bolt

- 7. Fender seal
- 9. Fender mounting lower support assembly
- 11.Battery tray plate assembly
- 12.Flange bolt
- 13. Cowl side inner panel complete
- 14. Fender mounting lower bracket assembly

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

5730-00 DASH PANEL AND COWL

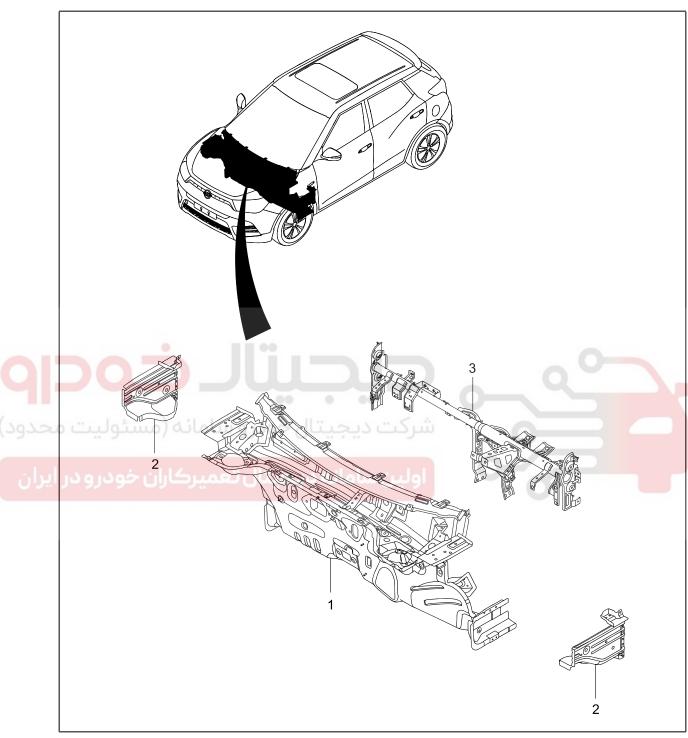

- 1. Dash and cowl panel complete
- 2. Cowl side upper member assembly
- 3. Cross member assembly

| | Modification basis | | |
|------|--------------------|--------|-------|
| | Application basis | | |
| | Affected VIN | | |
| WWW. | .DIGITA | LKHODR | O.COM |

AIR SONDITIO

IR BAG

SEAT/SE/ TBELT

SUNRO

BODY XTERIO


> BODY IMENSI

BODY WELDING

06-12 6110-00

0 L

6110-00 HOOD PANEL

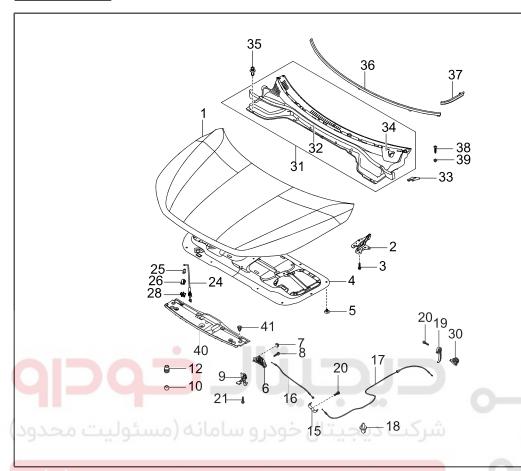


- 1. Hood panel assembly
- 2. Hood hinge assembly
- 3. Flange bolt
- 4. Hood insulator
- 5. Hood insulator pad fastener
- 6. Hood latch assembly
- 7. Hood latch mounting nut
- 8. Hood latch mounting bolt
- 9. Hood safety hook assembly
- 10. Hood overslam bumper
- 12. Hood overslam bumper
- 15. Hood cable bracket
- 16. Hood latch release front cable assembly
- 17. Hood latch release rear cable assembly
- 18. Fuel filler door release cable clip
- 19. Hood latch release handle
- 20.Bolt

- 21.Screw
- 24. Hood stay rod assembly
- 25. Hood stay rod mounting bracket
- 26. Hood stay rod retainer
- 28. Hood stay rod clip
- 30. Hood latch release handle mounting base assembly
- 31.Cowl grille assembly
- 32. Hood rear seal assembly
- 33.Cowl grille extension
- 34.Cowl grille support
- 35.Screw rivet
- 36. Cowl grille bright garnish assembly
- 37. Fender bright garnish assembly
- 38.Screw
- 39.Grommet
- 40.Front end upper cover
- 41.Screw rivet

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

6210-00 FRONT DOOR PANEL

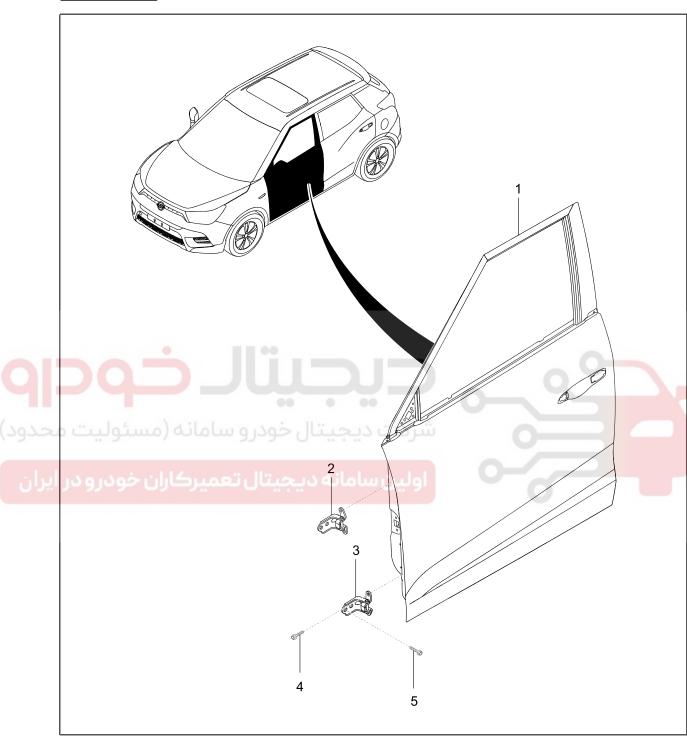

- 1. Front door panel assembly
- 2. Front door upper hinge assembly
- 3. Front door lower hinge assembly
- 4. Door side hinge bolt
- 5. Door hinge mounting flange bolt

Modification basis
Application basis
Affected VIN
WWW.DIGITALKHODRO.COM

AIR ONDITIO

IR BAG

SEAT/SE, TBELT

SUN

BODY EXTERIO


> BODY DIMENSI

BODY WELDING

06-14 0000-00

V O L

6310-00 REAR DOOR PANEL

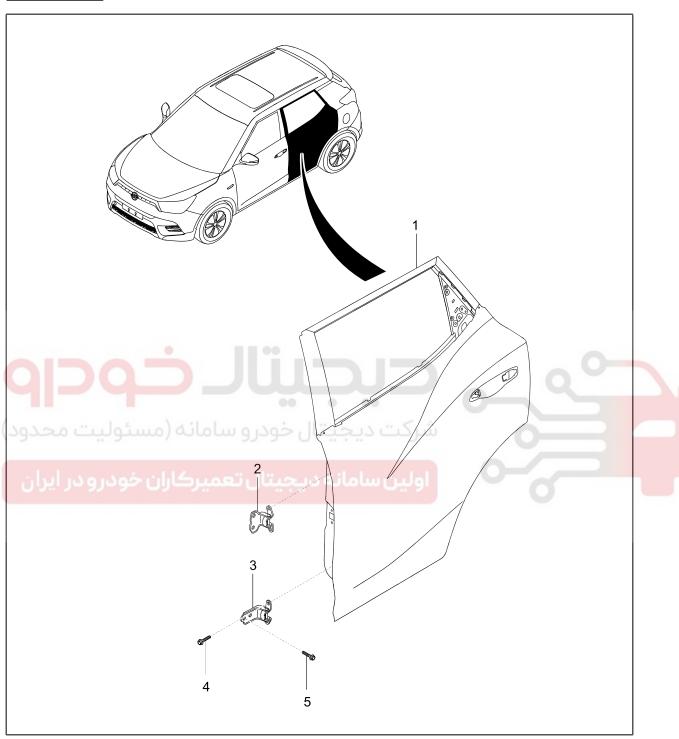

- 1. Rear door panel assembly
- 2. Rear door upper hinge assembly
- 3. Rear door lower hinge assembly
- 4. Door side hinge bolt
- 5. Door hinge mounting flange bolt


BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

 \mathbb{V} 0 L 0000-00

06-15

6410-00 T/GATE PNL

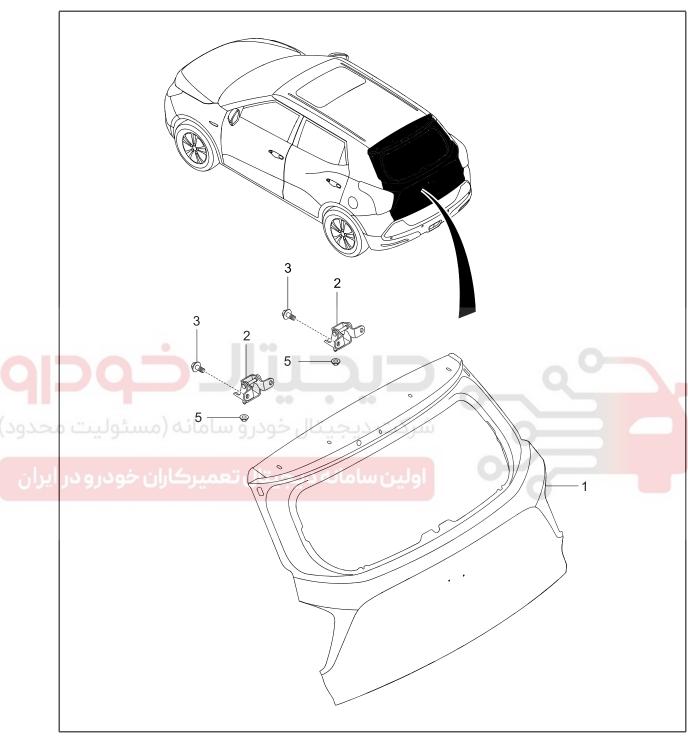


- 1. Tailgate panel assembly
- 2. Tailgate hinge assembly
- 3. Flange bolt
- 5. Tailgate hinge mounting flange bolt

Modification basis Application basis Affected VIN WWW.DIGITALKHODRO.COM **BODY EXTERIOR**

06-16 7090-00

V O L

7090-00 FUEL FILLER DOOR

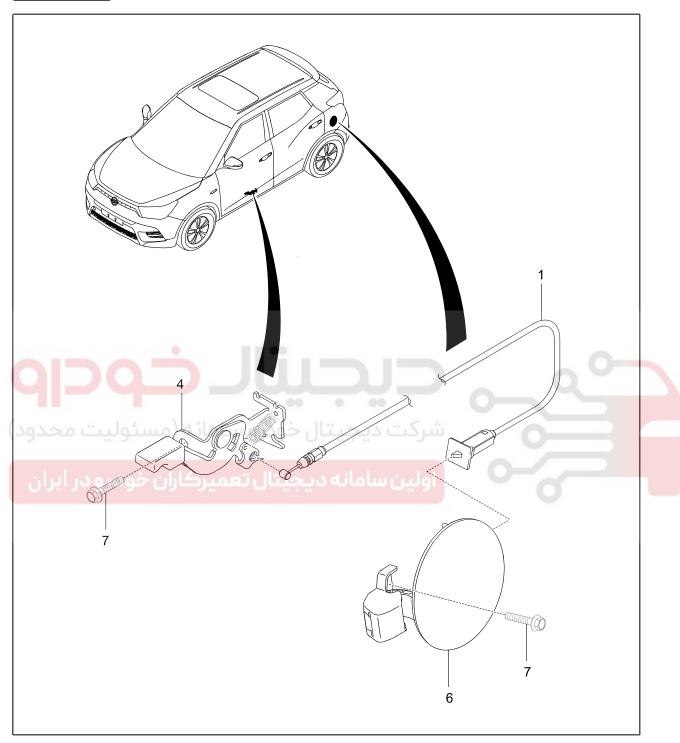


- 1. Fuel filler door release cable assembly
- 4. Fuel filler door release handle assembly
- 6. Fuel filler door assembly
- 7. Bolt

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

7110-00 FRONT DOOR LATCH CABLE AND HANDLE

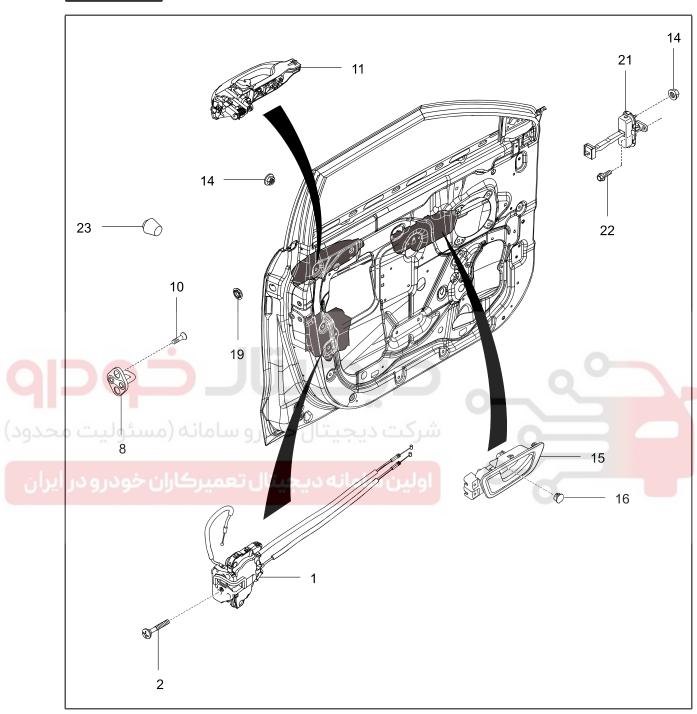


- 1. Front door latch & cable assembly
- 2. Door latch mounting bolt
- 8. Door striker assembly
- 10.Door striker mounting screw
- 11. Front door outside handle assembly
- 14.Nut

- 15. Door inside handle assembly
- 16.Door inside handle cap
- 19. Front door tooling hole plug
- 21. Front door checker assembly
- 22.Flange bolt
- 23.Door overslam bumper

06-18 7120-00

O L

7120-00 FRONT DOOR POWER WINDOW REGULATOR

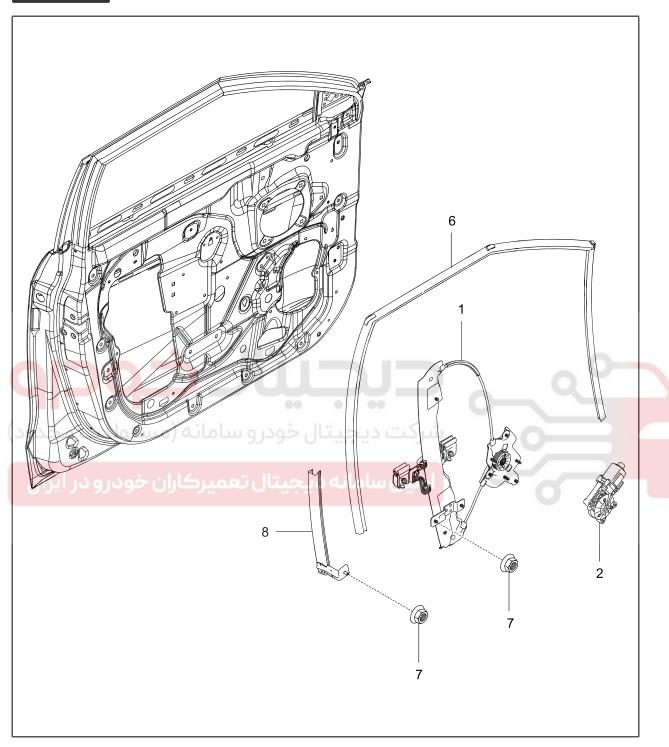

- 1. Front door power window regulator
- 2. Power window motor assembly
- 6. Front door window glass run
- 7. Nut
- 8. Front door glass guide rail assembly


BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

O L

 \mathbb{V}

7121-00 FRONT DOOR WEATHERSTRIP

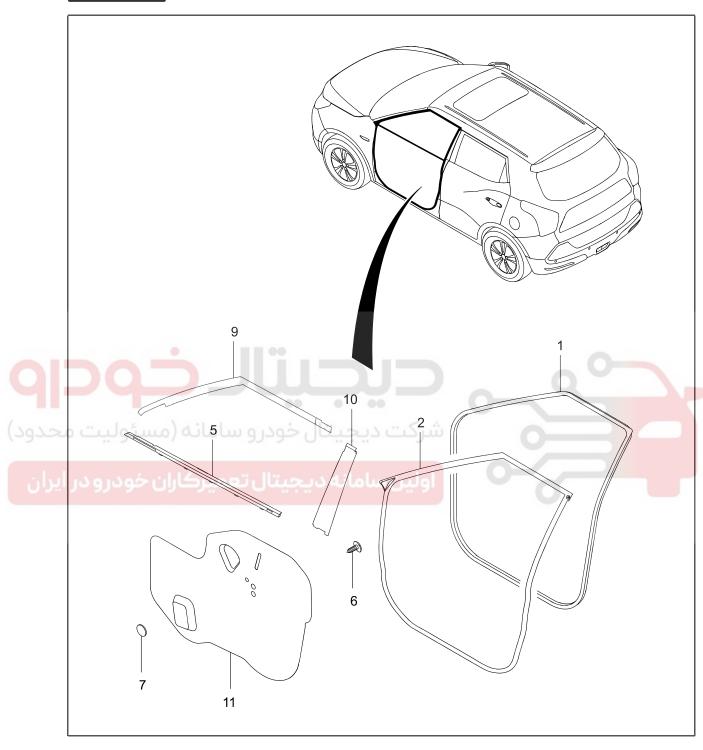

- 1. Front door body side weatherstrip
- 2. Front door opening weatherstrip assembly
- 5. Front door belt outside weatherstrip assembly
- 6. Screw


- 7. Door tooling hole sealing tape
- 9. Front door frame A-tape
- 10. Front door frame B-tape
- 11. Front door trim vinyl seal

Modification basis
Application basis
Affected VIN

06-20 7210-00

0 L

7210-00 REAR DOOR LATCH CABLE AND HANDLE

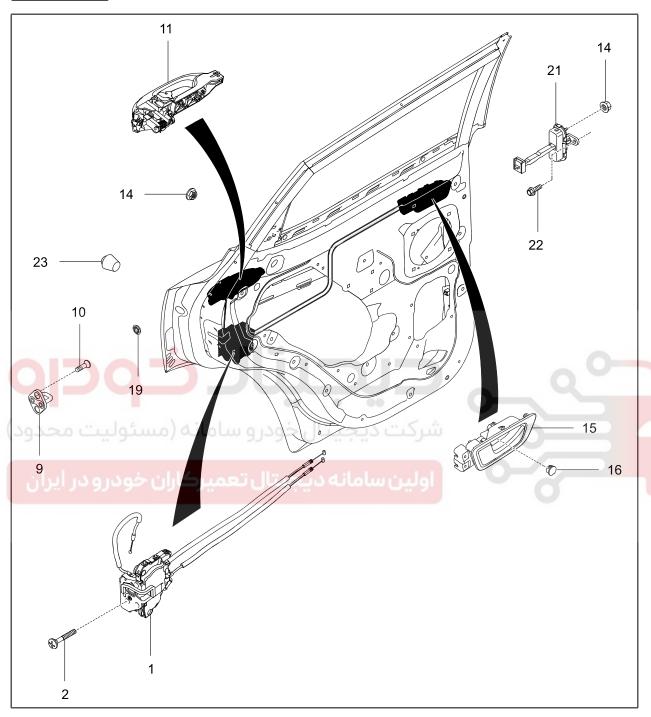

- 1. Rear door latch & cable assembly
- 2. Door latch mounting bolt
- 9. Door striker assembly
- 10.Door striker mounting screw
- 11.Rear door outside handle assembly
- 14.Nut

- 15. Door inside handle assembly
- 16.Door inside handle cap
- 19.Rear door tooling hole plug
- 21.Rear door checker assembly
- 22.Flange bolt
- 23.Door overslam bumper

BODY EXTERIOR

CONDI

AIR BA

SEAT/SE/ TBELT


SUNR

BODY EXTERIO

> BODY DIMENSI

BODY WELDING

7220-00 REAR DOOR POWER WINDOW REGULATOR AND MOTOR

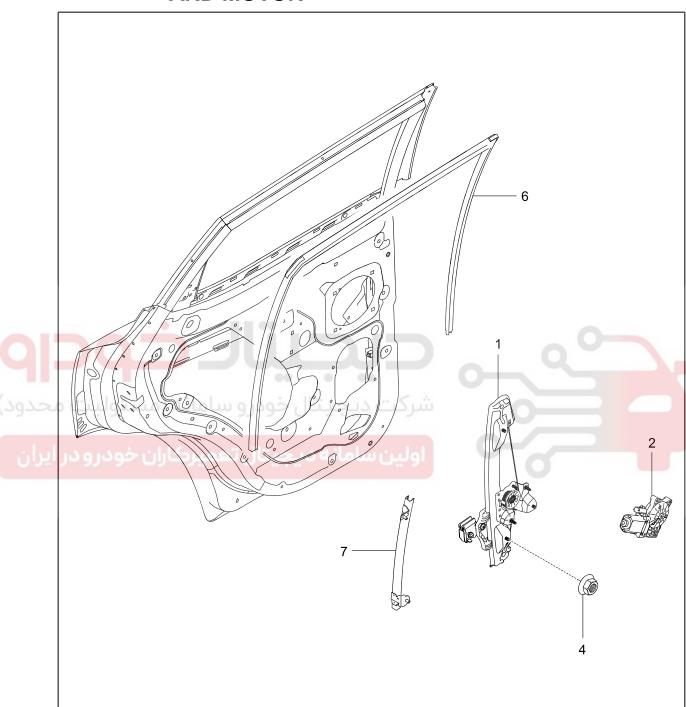


- 1. Rear door power window regulator
- 2. Power window motor assembly
- 4. Nut
- 6. Rear door window glass run
- 7. Rear door glass guide rail assembly

| , L | DIOITA | LIZUODE | 000 |
|-----|--------------------|---------|-----|
| | Affected VIN | | |
| | Application basis | | |
| | Modification basis | | |

06-22 7221-00

V O L

7221-00 REAR DOOR WEATHERSTRIP

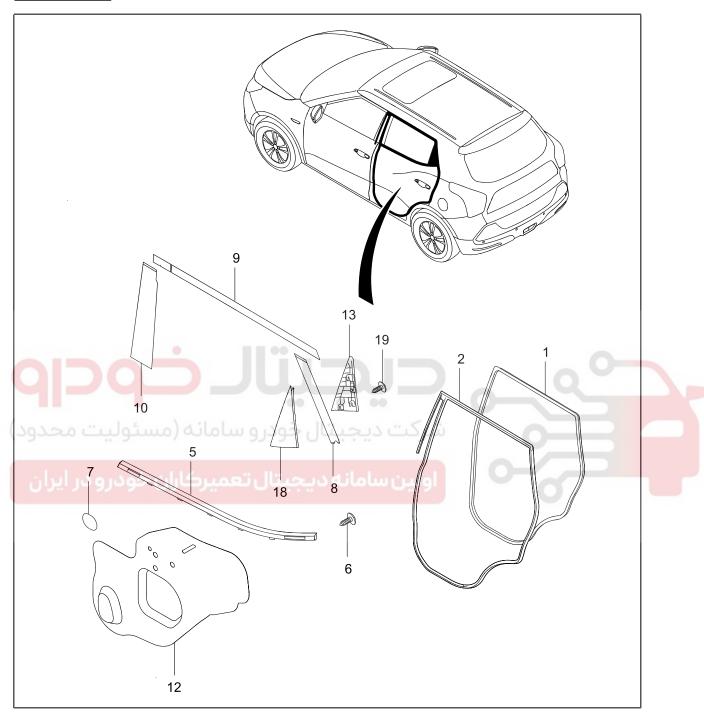


- 1. Rear door body side weatherstrip
- 2. Rear door side weatherstrip assembly
- 5. Rear door belt outside weatherstrip assembly
- 6. Screw
- 7. Door tooling hole sealing tape
- 8. Rear door frame C-tape

- 9. Rear door frame B-tape
- 10.Rear door frame A-tape
- 12.Rear door trim vinyl seal
- 13. Rear door trim upper cover assembly
- 18. Rear door delta molding assembly
- 19.Screw

BODY EXTERIOR

7310-00 TAILGATE OPENING SYSTEM

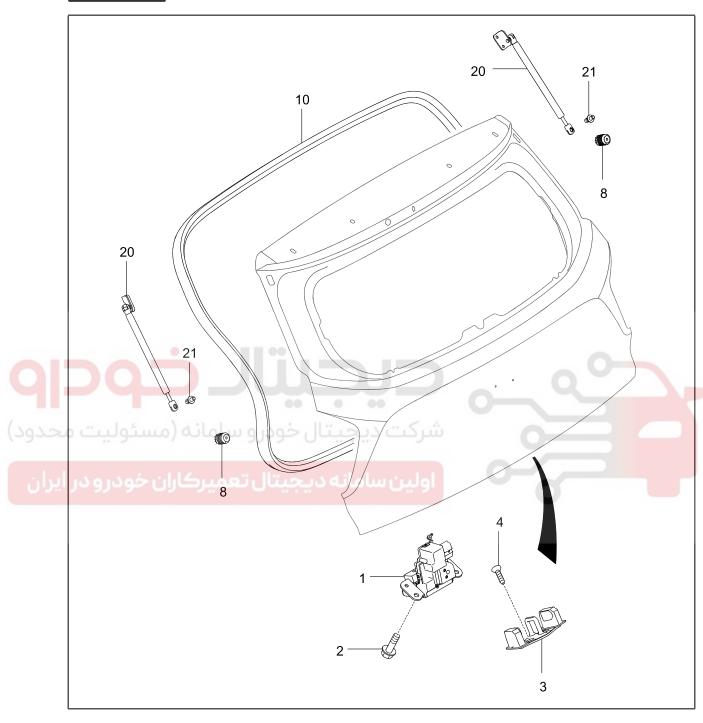

- 1. Tailgate latch assembly
- 2. Bolt
- 3. Tailgate striker assembly
- 4. Screw


- 8. Tailgate overslam bumper assembly
- 10. Tailgate opening weatherstrip
- 20. Tailgate lifter assembly
- 21.Ball stud

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

06-24 7840-00

V O L

7840-00 GLASS

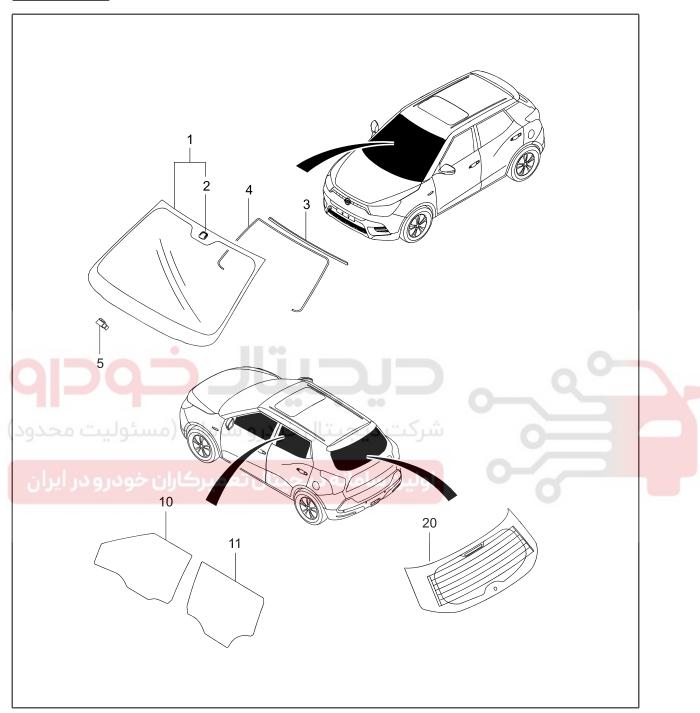


- 1. Windshield glass assembly
- 2. Inside rear view mirror base
- 3. Windshield molding assembly
- 4. Windshield dam

- 8. Windshield spacer assembly
- 10. Front door drop glass
- 20.Rear door drop glass
- 21. Tailgate glass assembly

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

7850-00 OUTSIDE REAR VIEW MIRROR

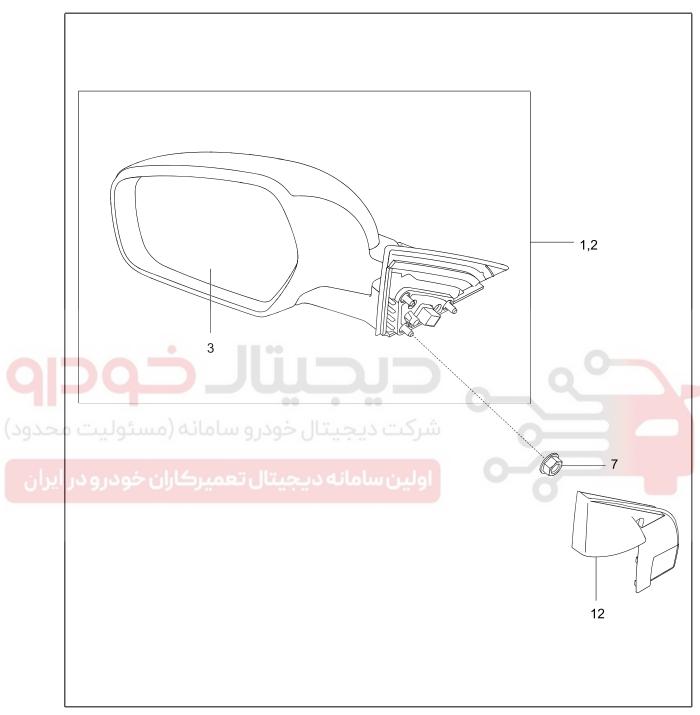


- 1. Outside LH rear view mirror assembly
- 2. Outside RH rear view mirror assembly
- 3. Outside rear view mirror glass holder assembly
- 7. Nut
- 12.Inner cover assembly

| | Modification basis | | |
|-----------------------|--------------------|--|--|
| | Application basis | | |
| | Affected VIN | | |
| WWW.DIGITALKHODRO.COM | | | |

06-26 7870-00

V O L

7870-00 FRONT BUMPER

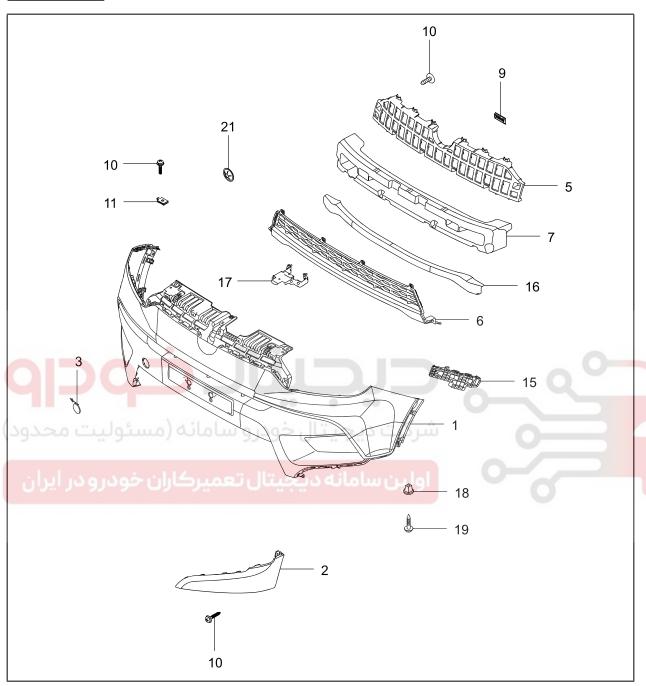


- 1. Front bumper fascia
- 2. Front bumper lower fascia
- 3. Towing front cover
- 5. Front bumper center reinforcement
- 6. Intake grille
- 7. Front bumper energy absorber
- 9. Lock clip
- 10.Screw

- 11.Spring nut
- 15. Front bumper side bracket
- 16. Front bumper lower stiffener assembly
- 17. Front bumper center bracket assembly
- 18. Screw grommet
- 19.Bolt
- 21.Clamping washer

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

7880-00 REAR BUMPER

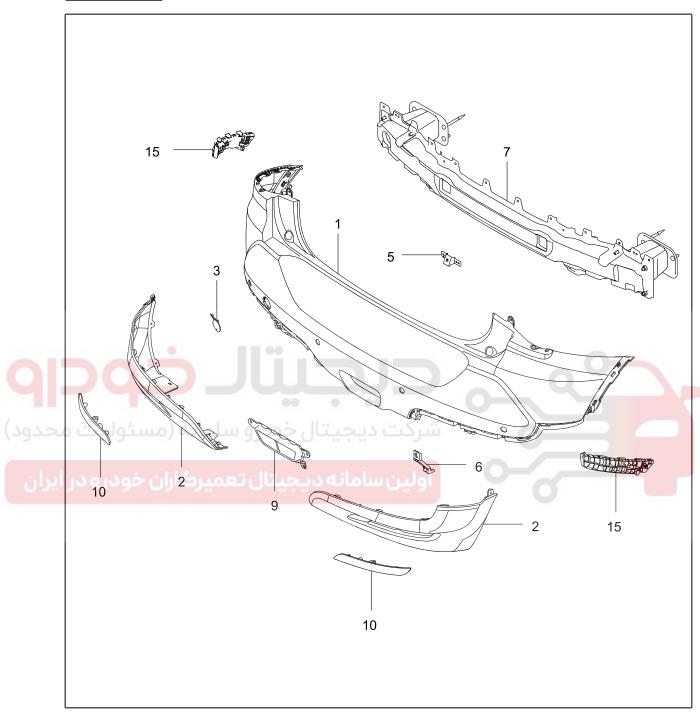


- 1. Rear bumper upper fascia
- 2. Rear bumper lower fascia
- 3. Towing rear cover
- 5. License plate mounting bracket assembly
- 6. Fascia mounting lower bracket

- 7. Impact rear bumper beam assembly
- 9. Rear fog lamp blanking cover
- 10.Reflex reflector lamp assembly
- 15.Rear bumper side bracket

06-28 7910-00

 $T \quad I \quad V \quad \mathbf{0} \quad L \\$

7910-00 Radiator Grille

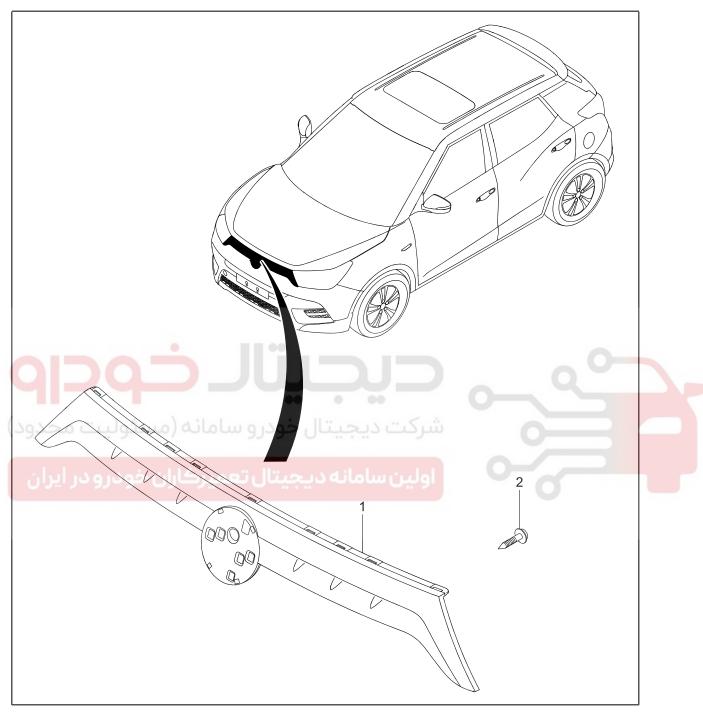


- 1. Radiator Grille
- 2. Screw

0 L

 \mathbb{V}

7930-00 SIDE BODY MOLDING

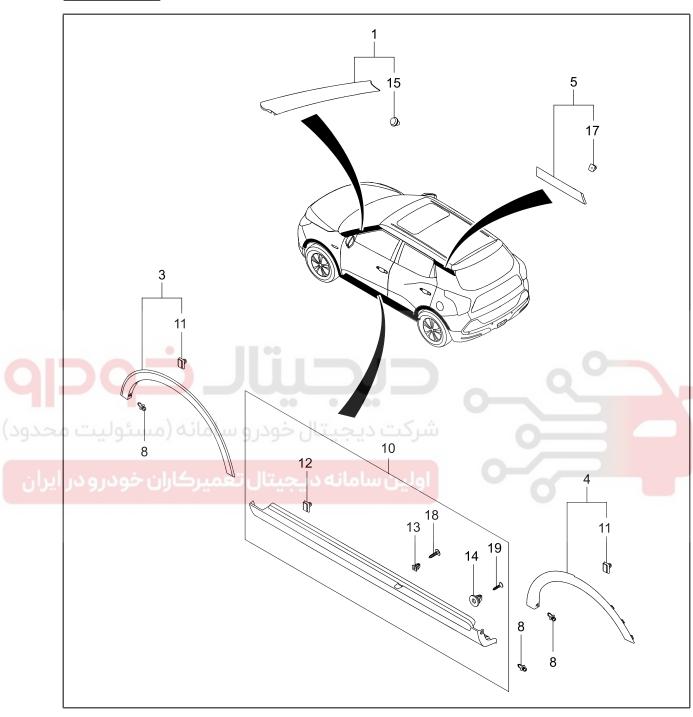

- 1. A-pillar garnish assembly
- 3. Front wheel arch garnish assembly
- 4. Rear wheel arch garnish assembly
- 5. C-pillar garnish assembly
- 8. Under cover mounting screw rivet
- 10. Side seal garnish assembly
- 11. Wheel arch molding mounting clip


- 12. Side seal molding mounting clip
- 13. Side seal molding mounting lower clip
- 14. Door garnish mounting clip
- 15.A-pillar clip
- 17.C-pillar clip
- 18.Screw
- 19.Screw

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

06-30 7940-00

 $T \quad I \quad V \quad \mathbf{0} \quad L$

7940-00 ROOF AND REAR BODY

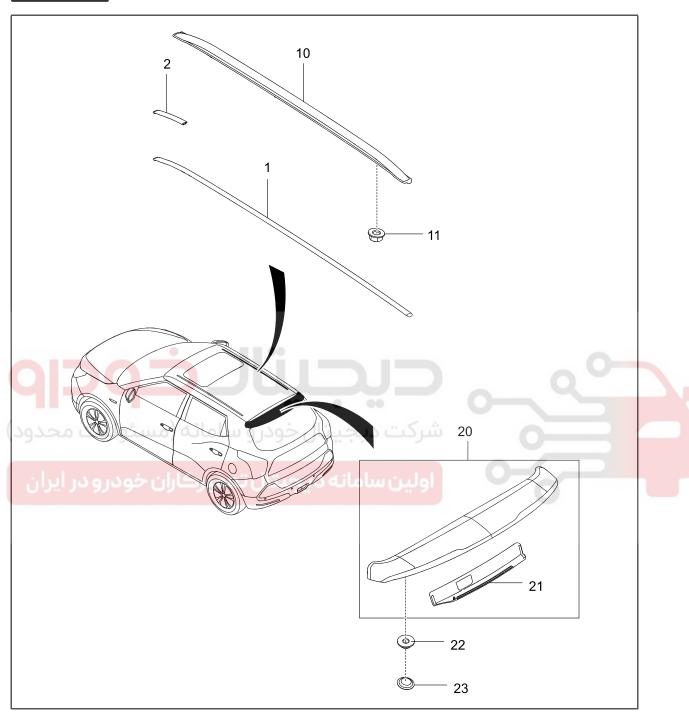

- 1. Roof molding assembly
- 2. Roof No. 1 molding assembly
- 10. Fashion rail assembly
- 11.Nut

- 20. Spoiler assembly
- 21. Spoiler lower cover
- 22.Nut
- 23.Blind plug


BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

O L

 \mathbb{V}

7950-00 EMBLEM

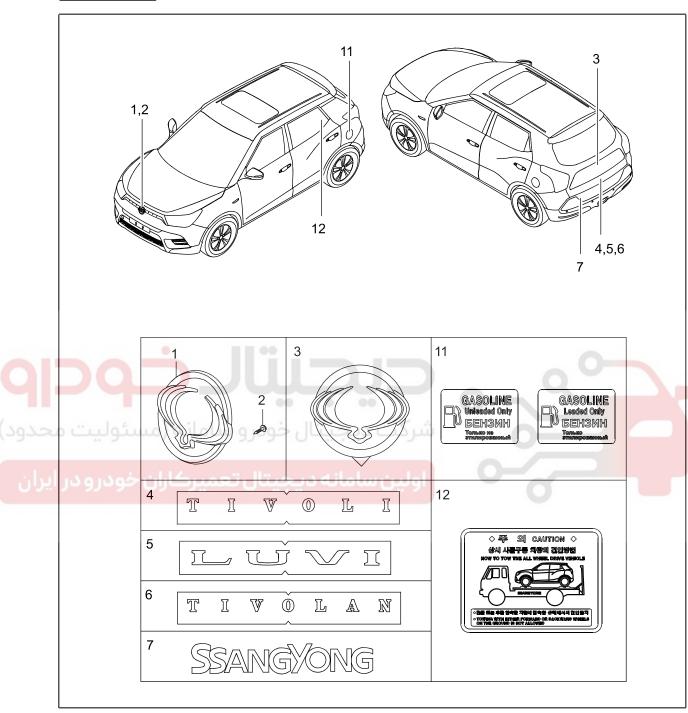


- 1. Radiator emblem assembly
- 2. Screw
- 3. Tailgate emblem assembly
- 4. TIVOLI emblem
- 7. Emblem-SSANGYONG
- 11.GASOLINE label
- 12.TOWING label

| | Modification basis | |
|---|--------------------|---|
| | Application basis | |
| | Affected VIN | |
| • | BIGITA | 1 |

06-32 7970-00

V O L

7970-00 WHEEL HOUSE COVER

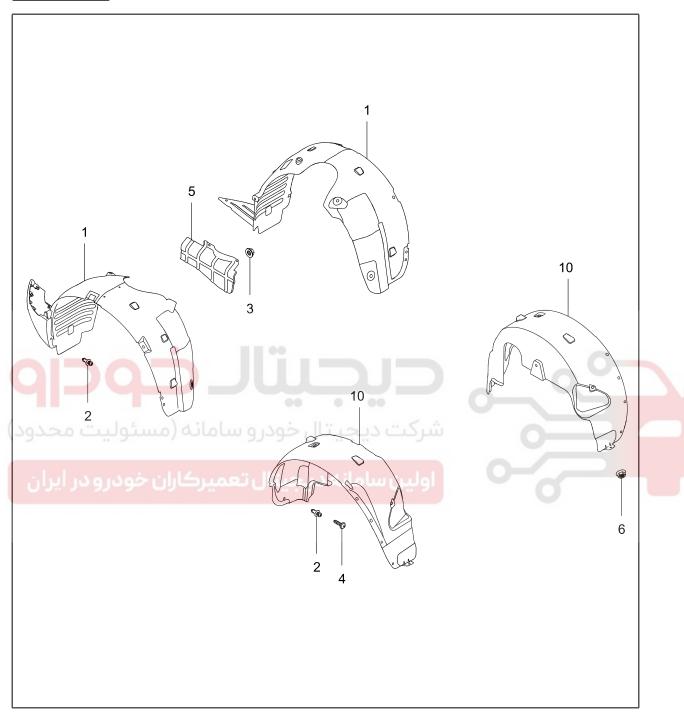

- 1. Front wheel house cover assembly
- 2. Screw rivet
- 3. Cap nut
- 4. Screw
- 5. Engine compartment side cover
- 6. Nut
- 10.Rear wheel house cover

BODY EXTERIOR


| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |


REMOVAL AND INSTALLATION

7870-00 FRONT BUMPER ASSEMBLY

Preceding work

- Disconnect the negative battery cable.
- Remove the front wheel.

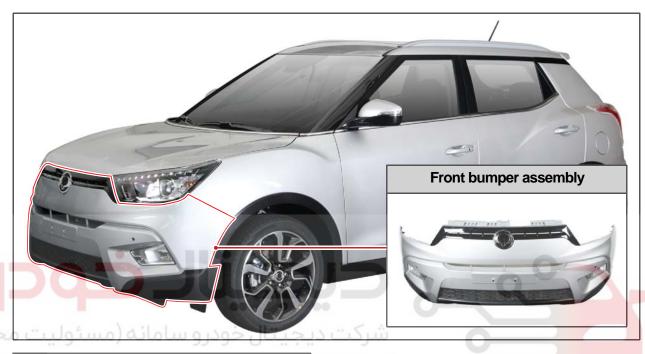

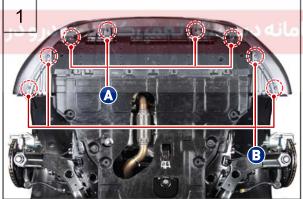

1. Remove the 4 front under cover mounting screw rivets (A) and 4 LH/RH wheel house cover mounting screw rivets (B).



2. Remove the 10 wheel house cover mounting screw rivets.

06-34 7870-00 T I V O L :




3. Remove the LH/RH front wheel house covers.



4. Press the 7 front wheel arch garnish fixing keys with a plier to remove it from the wheel house in the fender.



5. Remove the LH/RH front wheel arch garnishes.

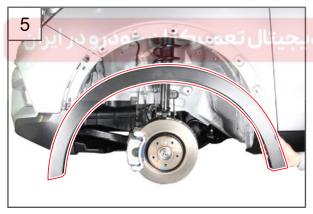

6. Disconnect the front bumper LH/RH fog lamp connectors.




BODY EXTERIOR


V O L I



7. Remove the 7 mounting screw rivets securing the front end upper cover.

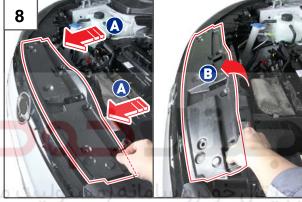

Push the front end upper cover to the arrow
 direction, lift the rear side a little to the arrow
 direction and remove the end upper cover clip.

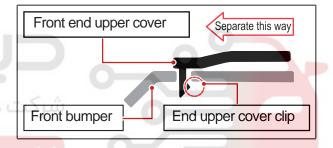

9. Remove the front end upper cover.



10.Unscrew the 3 front bumper upper mounting bolts (10 mm).



Modification basis
Application basis
Affected VIN
WWW.DIGITALKHODRO.COM

06-36 7870-00 V O L




11. Pull the LH/RH front bumper upper fascia to remove it from the front bumper side bracket.

A CAUTION

Do not apply an excessive force to detach the front bumper fascia.



12.Lift out the upper section of the front bumper from the front bumper mounting (A) at the headlamp.

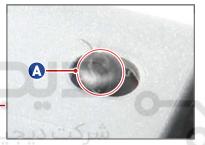

- 13.Remove the front bumper and disconnect the LH/RH front parking aid sensor connectors (B) from the back side of the bumper.



A CAUTION

Do not pull off the front bumper excessively as this may damage the front parking aid sensor bracket.





14. Remove the front bumper assembly.

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

0 L I \mathbb{V}

7870-00

15.Install in the reverse order of removal.

06-37

SUNROO SEAT/SEA AIR BAG CONDITI



Modification basis Application basis Affected VIN

06-38 7870-00 T I V O L

► Front bumper overhaul



1. Unscrew the 4 fog lamp mounting screws on each side to remove the fog lamp.



2. Undo the 2 lock clips and remove the front bumper energy absorber.




3. Remove the 2 front parking aid sensors.





4. Unscrew the 12 front bumper center reinforcement mounting screws.

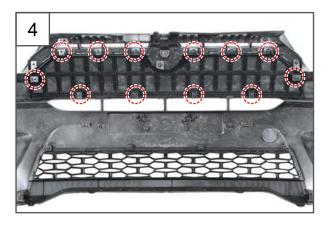


BODY EXTERIOR

I V O L I

7870-00

5


Remove the front bumper center reinforcement.

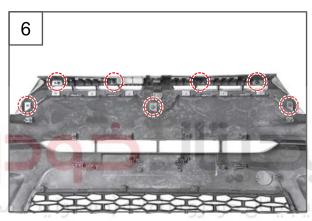

6. Unscrew the 7 mounting screws and remove the radiator grille assembly.




7. Unscrew the 3 front bumper lower fascia mounting screws on both sides.

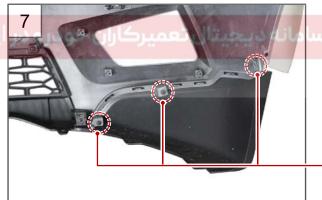





8. Remove the LH/RH front bumper lower fascia.

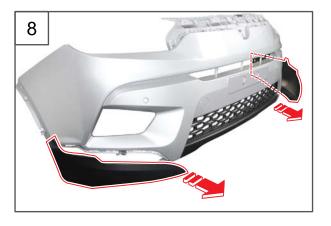

06-40 7870-00 T I V O L

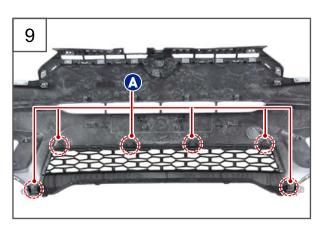

9. Unscrew the 6 intake grille mounting screws(A) and pull out the 6 fixing parts (B).

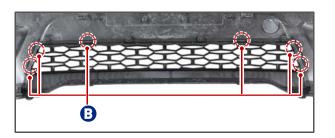

10.Remove the intake grille.



11.Install in the reverse order of removal.



0 L

7910-01

7910-01 RADIATOR GRILLE ASSEMBLY

Preceding work

 \mathbf{v}

- Disconnect the negative battery cable.






1. Remove the front bumper.


♣ NOTE

See "FRONT BUMPER ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY EXTERIOR".

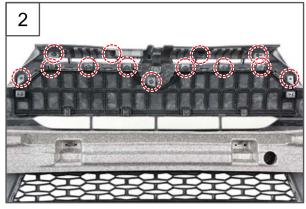


2. Unscrew the 13 mounting screws (A) on the radiator grille assembly.

06-42 7910-01 T I V O L

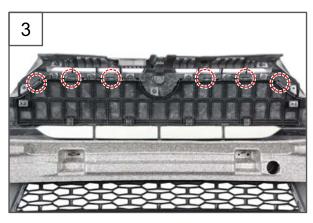

3. Pull out the 6 fixing parts for the radiator grille assembly.

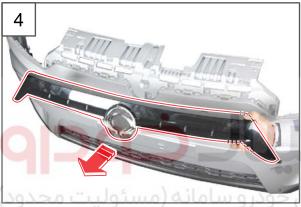

4. Remove the radiator grille assembly.



5. Install in the reverse order of removal.

BODY EXTERIOR

0 L

 \mathbb{V}

7910-01


► Removing and fitting emblem



1. Remove the radiator grille assembly.

♣ NOTE

See "RADIATOR GRILLE ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY EXTERIOR".

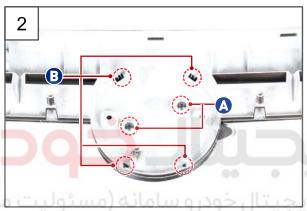

2. Unscrew the 2 emblem mounting screws (A) at the rear side of the radiator grille and pull out the 4 emblem fixing parts (B).



3. Install in the reverse order of removal.



06-44 6110-01

V O L

6110-01 HOOD PANEL ASSEMBLY





1. Unscrew the 2 hood panel mounting bolts (12 mm) on both sides and remove the hood panel assembly.

Tightening torque 16.6 ~ 25.4 Nm



2. Install in the reverse order of removal.



A CAUTION

Two persons are required to do this work, so as not to drop the hood panel and cause any personal injury or damage to the vehicle.

BODY EXTERIOR


| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

0 L

6110-01

 \mathbb{V}

► Hood panel adjustment

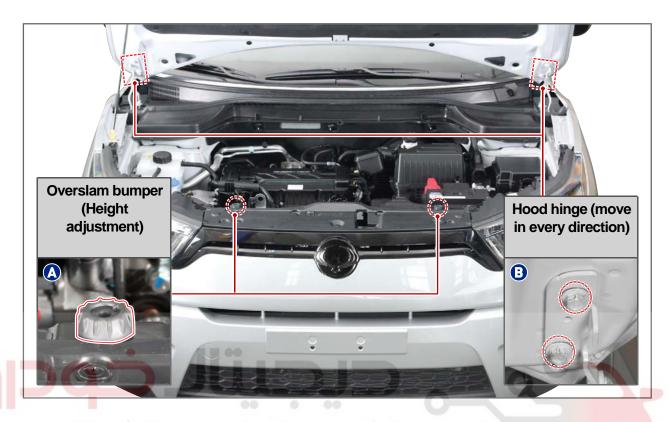



- A. Raise or lower the front side of the hood panel assembly by adjusting the overslam bumpers on each side.
 - Clockwise: Lowered - Anti-clockwise: Raised



B. Slacken the 2 hood hinge mounting bolts (12 mm) on both sides, move them in every direction and tighten them to adjust the position of the hood panel assembly.

♣ NOTE


Considering the size and weight of the hood panel assembly, two or more people are required to carry out this work.


| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

06-46 6110-06

V O L


6110-06 HOOD LATCH

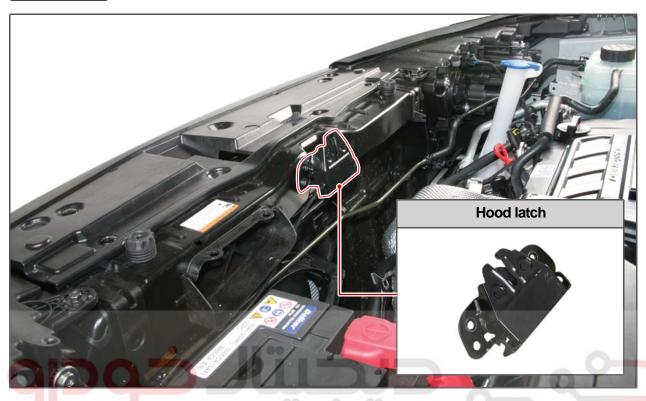

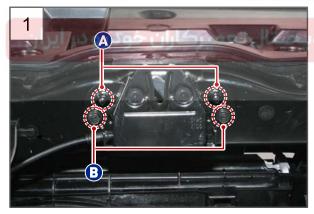

1. Unscrew the 2 hood latch mounting nuts (A, 10 mm) and 2 mounting bolts (B, 10 mm).

Tightening torque 8.8 ∼ 17.6Nm

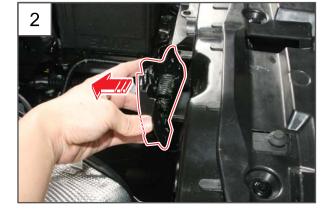

2. Remove the hood latch from the front panel.

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

6110-06



3. Remove the hood cable from the hood latch fixing part.



4. Remove the hood latch.




5. Install in the reverse order of removal.

06-48 6110-31

V O L I

6110-31 COWL GRILLE

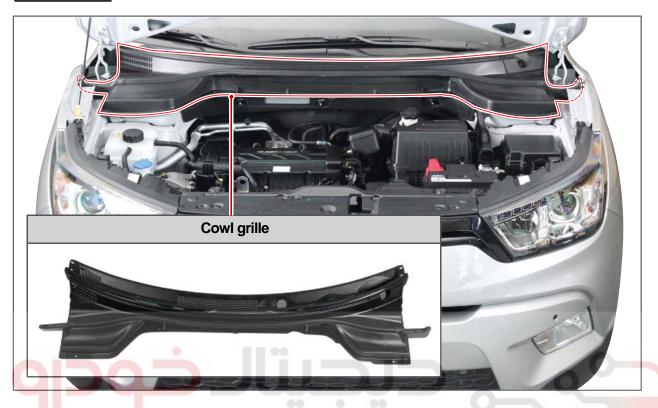





1. Lift out the windshield wiper arm cap.



2. Remove the windshield wiper arm mounting nut (14mm).

Tightening torque 25 ~ 31 Nm

BODY EXTERIOR


| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

I V O L I





3. Remove the windshield wiper arm and blade.

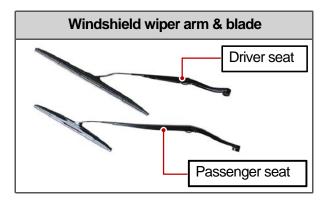

4. Remove the cowl grille extension cover (A) using a hand remover and unscrew the bright garnish mounting screw (B).





BODY EXTERIOR

Modification basis

Application basis

06-50 6110-31 T I V O L



5. Push out the LH/RH bright garnishes forwards.





Make sure that the cowl grille is pressed against the fender panel during assembly.



6. Unscrew the 4 mounting screw rivets.



BODY EXTERIOR


I V O L I

06-51

6110-31

7

Remove the washer hose from the back side of the cowl grille to the arrow direction.

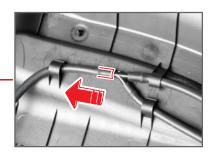

8. Draw out the removed washer hose through the cowl grille hole.



9. Remove the cowl grille.



10.Install in the reverse order of removal.



Modification basis
Application basis
Affected VIN

06-52 5720-04 TIVOLI

5720-04 FENDER PANEL

Preceding work - Disconnect the negative battery cable.





1. Remove the front bumper.

♣ NOTE

See "FRONT BUMPER ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY EXTERIOR".



2. Remove the A-pillar garnish.

♣ NOTE

Refer to "A-PILLAR GARNISH ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY EXTERIOR" chapter.

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

V O L I


5720-04

3 B A


 Disconnect the headlamp assembly connector
 (A) and unscrew the one upper mounting screw (B) and one mounting bolt (C, 10 mm).



When removing the headlamp assembly, detach the headlamp assembly from the upper mounting screw bracket (A).

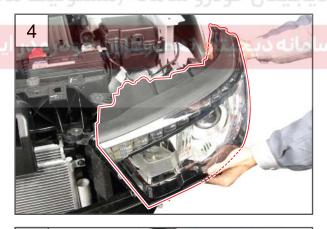

4. Remove the headlamp assembly.

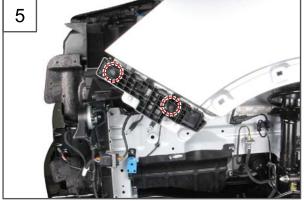


Unscrew the 2 front bumper side bracket mounting bolts (10 mm) and remove the front bumper side bracket.




| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |


06-54 5720-04 V O L

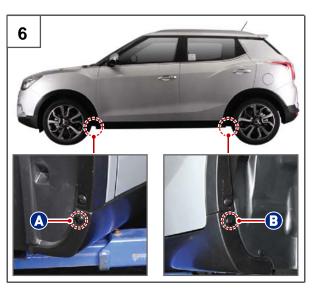

6. Remove the one mounting screw rivet (A) for the front side seal garnish assembly and one mounting screw rivet (B) for the rear side seal garnish assembly.

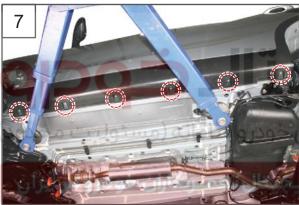

7. Unscrew the 6 side seal garnish lower mounting screws.

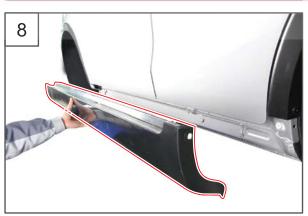


8. Remove the side seal garnish assembly.



♣ NOTE

There are 11 fixing keys inside of the side seal garnish assembly.

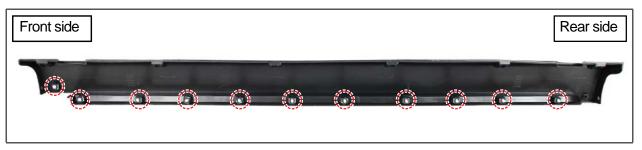

BODY EXTERIOR


I V O L I




9. Remove the pad fitted on inside of the fender.



10.Unscrew the 8 mounting bolts (10 mm) for the fender panel.

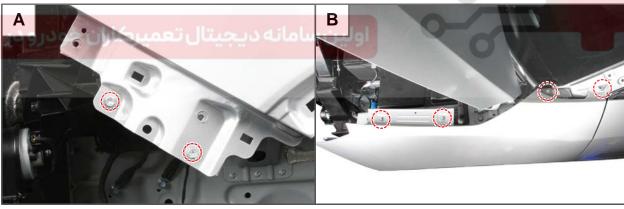


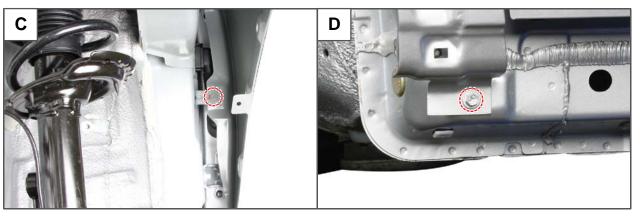

Modification basis
Application basis
Affected VIN

BODY EXTERIOR

06-56 5720-04 T I V O L

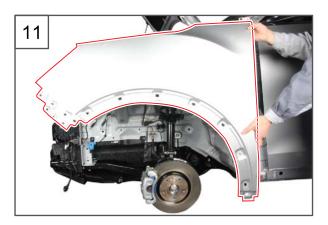

11.Remove the fender panel.



12.Install in the reverse order of removal.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



BODY EXTERIOR

7930-01

7930-01 A-PILLAR GARNISH ASSEMBLY





 Prise off the cowl grille extension cover using a hand remover.



2. Remove the cowl grille extension cover.

06-58 7930-01 T I V O L



3. Unscrew the one bright garnish mounting screw.



4. Press against the bright garnish to the arrow direction.





- 5. Push out the bright garnish to the arrow direction.
- 6. Pull out the A-pillar garnish from the bottom.




BODY EXTERIOR

I V O L

7

7. Remove the A-pillar garnish assembly while paying attention not to damage the fixing keys (9 off).

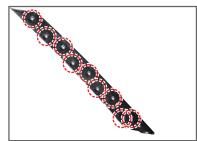

8. Install in the reverse order of removal.



A CAUTION

Always replace the fixing keys (clips or fasteners) with new ones when fitting.



Modification basis Application basis Affected VIN

06-60 7930-05

V O L T I


7930-05 C-PILLAR GARNISH ASSEMBLY







1. Pull out only up to the second fixing key for the C-pillar garnish assembly using a hand remover.

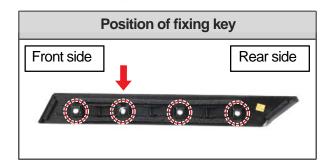

2. Push the C-pillar garnish assembly to the arrow direction.

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

T I V O L I

7930-05

06-61

R BAG

A AIR BA

SEAT/SE T BEL1

SUNROO

DY ERIO INTE

> BODY JIMENSI

30DY ELDING F




عبتال خودر و سامانه (مسئولیت و

3. Remove the C-pillar garnish assembly.

♣ NOTE

You can push out it depending on the mounting direction of the fixing keys.

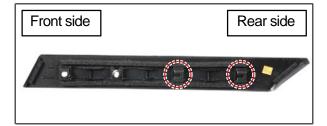

4. Install in the reverse order of removal.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Modification basis
Application basis
Affected VIN

BODY EXTERIOR

06-62 7930-10

V O L

7930-10 SIDE SEAL GARNISH ASSEMBLY





1. Remove the one mounting screw rivet (A) for the front side seal garnish assembly and one mounting screw rivet (B) for the rear side seal garnish assembly.




BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

I V O L I

2. Unscrew the 6 side seal garnish assembly mounting screws.

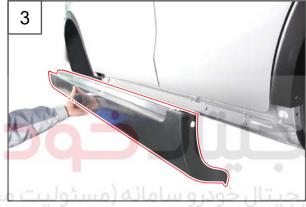

3. Remove the side seal garnish assembly.



There are 11 fixing keys inside of the side seal garnish assembly.





4. Install in the reverse order of removal.

06-64 7850-00

T I V O L I

7850-00 OUTSIDE REAR VIEW MIRROR ASSEMBLY

Preceding work

- Disconnect the negative battery cable.





1. Remove the outside rear view mirror inner cover.



2. Disconnect the outside rear view mirror connector.

BODY EXTERIOR


| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

I V O L I

3

3. Remove the 3 outside rearview mirror mounting nuts (10 mm).

Tightening torque 5.8 ∼ 7.8Nm

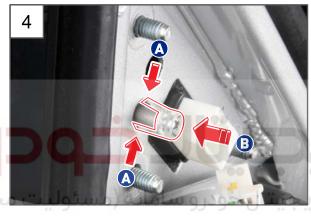

4. Remove the front door panel by pressing the outside rearview mirror fixing key to the arrow (A) direction while pushing the outside rearview mirror assembly to the arrow (B) direction.



Remove the outside rearview mirror assembly.



6. Install in the reverse order of removal.


06-66 7121-05

T I V O L I

7121-05 FRONT DOOR BELT OUTSIDE WEATHERSTRIP

Preceding work

- Disconnect the negative battery cable.

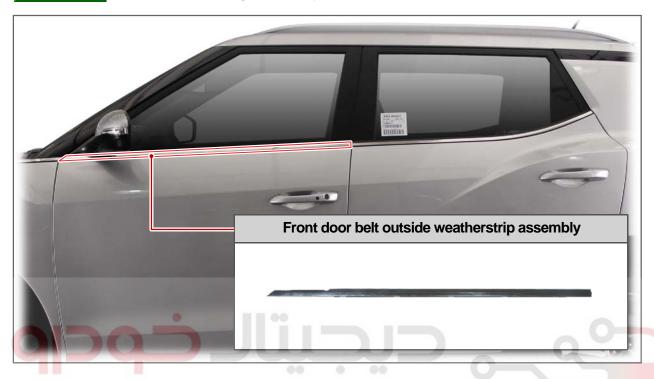



1. Remove the outside rearview mirror assembly.




🕹 NOTE

See "OUTSIDE REARVIEW MIRROR ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY EXTERIOR".



2. Remove the one front door trim weatherstrip fixing key (A).

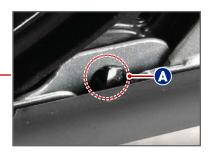


BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

7121-05



3. Unscrew the 2 mounting screws for the front door belt outside weatherstrip.

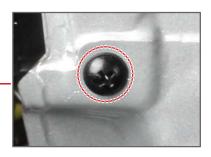




♣ NOTE

The front mounting screw is hidden by the front door trim weatherstrip.



4. Pull up and remove the front door belt outside weatherstrip.

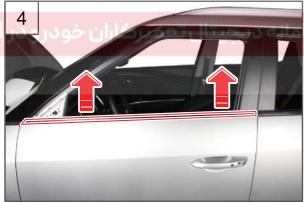

5. Install in the reverse order of removal.



Modification basis Application basis Affected VIN

WWW.DIGITALKHODRO.COM


06-68 7110-01

T I V O L

7110-01 FRONT DOOR LATCH AND CABLE ASSEMBLY

Preceding work

- Carry out the work with the window glass closed.
- Disconnect the negative battery cable.

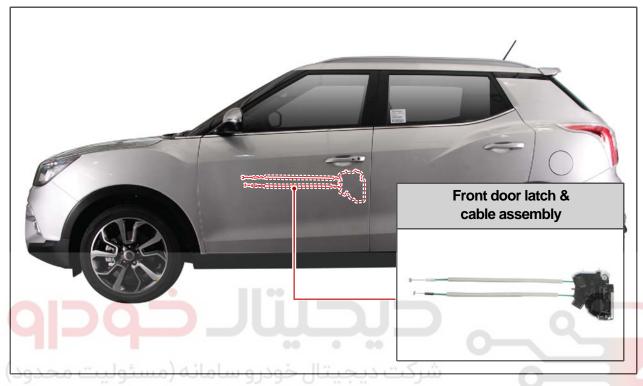



1. Remove the front door trim assembly.

♣ NOTE

Refer to "FRONT DOOR TRIM ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY INTERIOR" chapter.



WWW.DIGITALKHODRO.COM


2. Pull out the vinyl seal from the front door panel to provide working space.

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

0 L

 \mathbf{v}

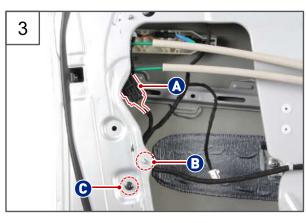

 Disconnect the door lock actuator connector (A), remove the wiring fixing key (B) and unscrew the one window glass guide rail mounting nut (C, 10 mm).




4. Pull out the window glass guide rail from the front door inner panel.



5. Unscrew the 3 mounting bolts (T30) for the front door latch and cable assembly.

Tightening torque 6.7 ∼ 10.7Nm

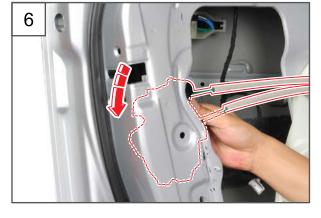

6. Move the front door latch and cable assembly downwards from its mounting position.

WWW.DIGITALKHODRO.COM

 
06-70 7110-01 T I V O L I




7. Take out the front door latch and cable assembly from the front door panel.

A CAUTION


Make sure that any part is not deformed or damaged due to an excessive force or interference.





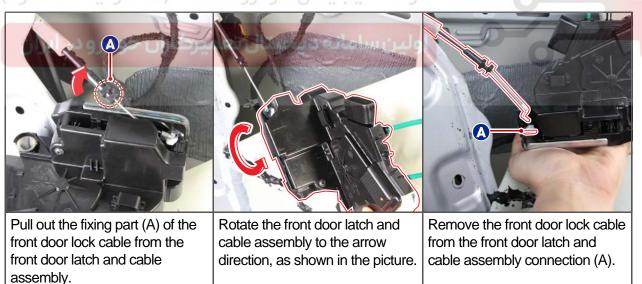

BODY EXTERIOR

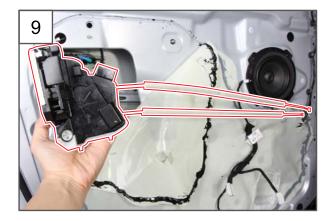

9. Remove the front door latch and cable assembly.



10.Install in the reverse order of removal.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Modification basis
Application basis
Affected VIN

BODY EXTERIOR


06-72 7110-11

TIVOLI

7110-11 FRONT DOOR OUTSIDE HANDLE ASSEMBLY

Preceding work

- Carry out the work with the window glass closed.
- Disconnect the negative battery cable.

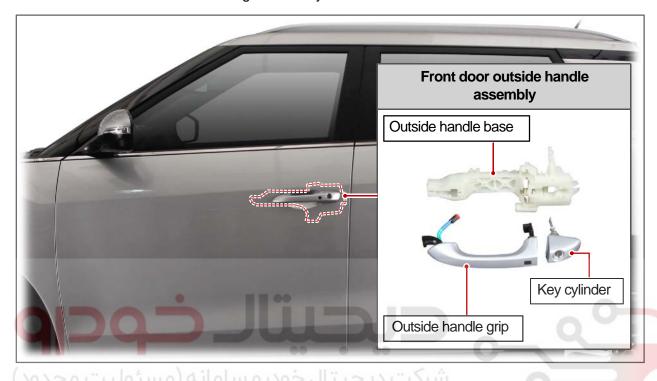




1. Remove the front door trim assembly.

♣ NOTE

Refer to "FRONT DOOR TRIM ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY INTERIOR" chapter.

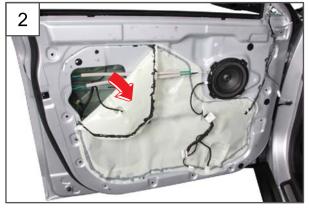


2. Strip off the door trim vinyl seal to the arrow direction to provide working space.

BODY EXTERIOR

| Modification bas | sis |
|------------------|-----|
| Application bas | sis |
| Affected VIN | |

0 L

 \mathbf{v}

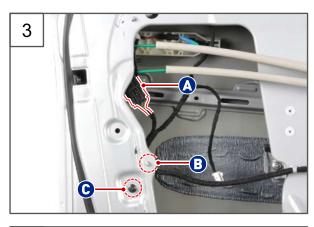

 Disconnect the door lock actuator connector (A), remove the wiring fixing key (B) and unscrew the one window glass guide rail mounting nut (C, 10 mm).

Tightening torque 6.7 ∼ 10.7Nm



4. Pull out the window glass guide rail from the front door inner panel.



5. Disconnect the connector (A) between the door handle switch and antenna.



6. Remove the key cylinder mounting cover (A).



06-74 7110-11 T I V O L I



7. Unscrew the one key cylinder mounting bolt (10 mm).

Tightening torque 5.8 ~ 7.8Nm



8. Remove the key cylinder.



9. Remove the front door outside handle.



Push the outside handle to the arrow (A) direction.



Lift up the rear part (B) of the outside handle to the arrow direction.




Remove the door handle switch & antenna wiring (C) together with the outside handle.

BODY EXTERIOR

| | Modification basis | |
|--|--------------------|--|
| | Application basis | |
| | Affected VIN | |

V O L I

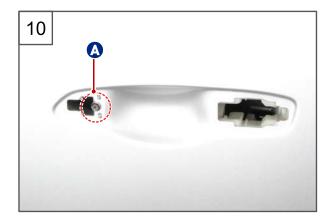

10.Unscrew the one mounting screw bolt (A, 8 mm) for the front door outside handle base.

Tightening torque 5.8 ∼ 7.8Nm




11.Unscrew the 3 mounting bolts (T30) for the front door latch and cable assembly.

Tightening torque 6.7 ∼ 10.7Nm




12.Pull out the front door outside handle base (B) after pulling out the front door latch and cable assembly (A).

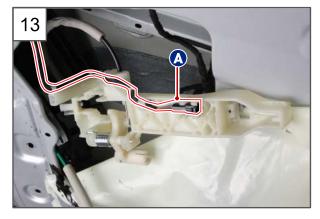


13.Remove the door handle switch wiring (A) from the front door outside handle assembly.

06-76 7110-11

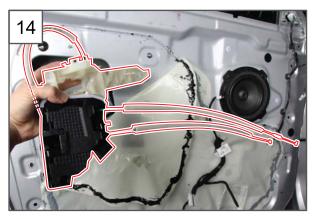

14. Remove the front door outside handle base together with the front door latch and cable assembly.

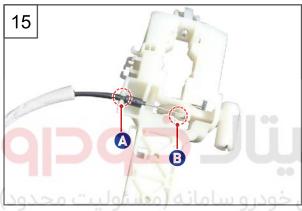

15. Remove the front door outside handle release cable from the fixing part (A) and operating part (B) of the front door outside handle base.



16.Remove the front door outside handle base.



17.Install in the reverse order of removal.

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

V O L I

▶ With REKES key



1. Remove the key cylinder mounting cover (A) and unscrew the one key cylinder mounting bolt (10 mm).



2. Remove the key cylinder.



3. Remove the front door outside handle.





Push the outside handle to the arrow (A) direction.



Lift up the rear part (B) of the outside handle to the arrow direction.




Pull out the front part of the outside handle.

Modification basis
Application basis
Affected VIN

BODY EXTERIOR

06-78 7110-11 T I V O L I

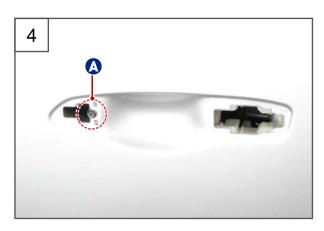

4. Unscrew the one mounting screw bolt (A, 8 mm) for the front door outside handle base.




5. Remove the front door trim assembly.



Refer to "FRONT DOOR TRIM ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY INTERIOR" chapter.



Strip off the door trim vinyl seal to the arrow direction to provide working space.

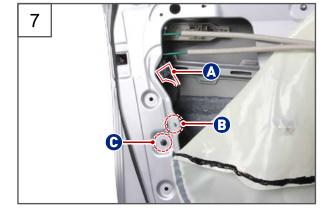


WWW.DIGITALKHODRO.COM

 Disconnect the door lock actuator connector (A), remove the wiring fixing key (B) and unscrew the one window glass guide rail mounting nut (C, 10 mm).

BODY EXTERIOR

V O L

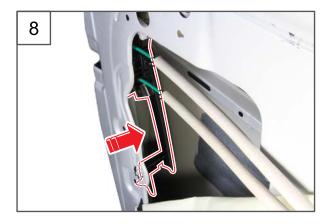


8. Pull out the window glass guide rail to the arrow direction from the front door inner panel.




9. Unscrew the 3 mounting bolts (T30) for the front door latch and cable assembly.


Tightening torque 6.7 ~ 10.7Nm

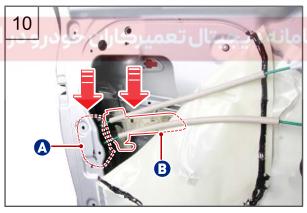

10.Pull out the front door outside handle base (B) after pulling out the front door latch and cable assembly (A) downwards.

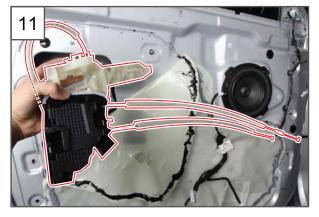

11.Remove the front door outside handle base together with the front door latch and cable assembly. 06-80 7110-11 T I V O L

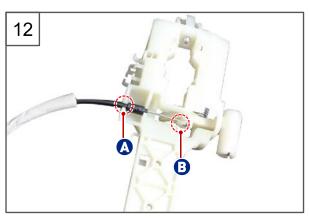

12.Remove the front door outside handle release cable from the fixing part (A) and operating part (B) of the front door outside handle base.



13. Remove the front door outside handle base.



14.Install in the reverse order of removal.

BODY EXTERIOR

V O L

7120-01 FRONT DOOR POWER WINDOW REGULATOR


Preceding work

- Disconnect the negative battery cable.





1. Adjust the window glass height so that the window glass is visible by 11 ± 0.5 cm, as shown in the figure. (measure at B-pillar)

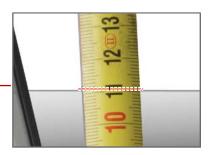

2. Remove the front door trim assembly.



♣ NOTE

Refer to "FRONT DOOR TRIM ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY INTERIOR" chapter.

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |


06-82 7120-01 T I V O L



3. Unscrew the 2 mounting screws to remove the front door pull handle mounting bracket.




4. Disconnect the front door speaker connector(A) and the outside rear view mirror connector(B).

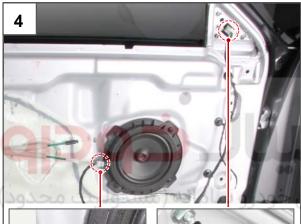

B

اولین سامانه د

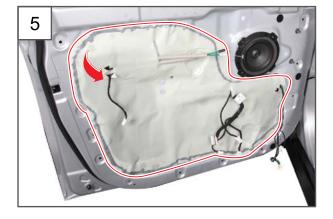


5. Remove the front door trim vinyl seal.


BODY EXTERIOR

0 L

 \mathbb{V}

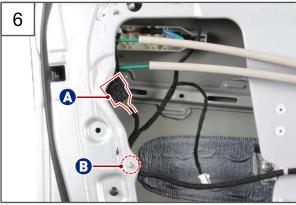

6. Disconnect the front door actuator connector(A) and remove the front door wiring fixing key(B) from the front door panel.

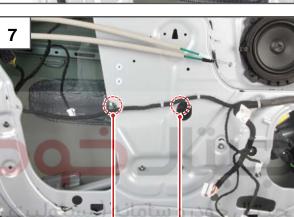

7. Loosen the 2 clamp grip mounting nuts (10 mm) only to the extent that the window glass can be separated, and lift the window glass into place.









8. Be careful not to damage the body coating by window glass.

06-84 7120-01 T I V O L

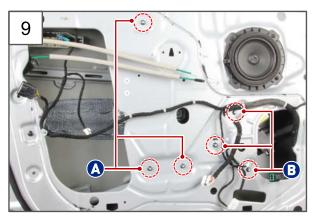

 Unscrew the 3 power window regulator assembly rail mounting nuts (A, 10 mm) and 3 motor mounting nuts (B, 10 mm).

Tightening torque 5.8 ~ 7.8Nm

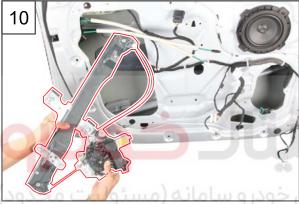

10.Remove the power window regulator assembly.



11.Install in the reverse order of removal.

اولین سامانه

6210-01

6210-01 FRONT DOOR PANEL ASSEMBLY


Preceding work

- Disconnect the negative battery cable.






Lift out the front door main wiring connector key using a flat bladed screwdriver.

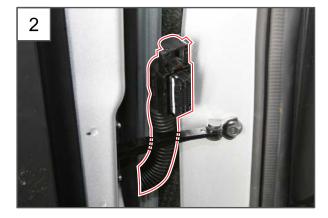

2. Disconnect the front door main wiring connector.

06-86 6210-01 T I V O L

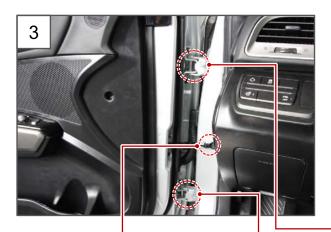


3. Unscrew the following bolts to remove the front door panel.

A CAUTION

Two persons are required to do this work, so as not to drop the front door panel assembly and cause any personal injury or damage to the vehicle.

Tightening torque 19.6 ∼ 30.4Nm

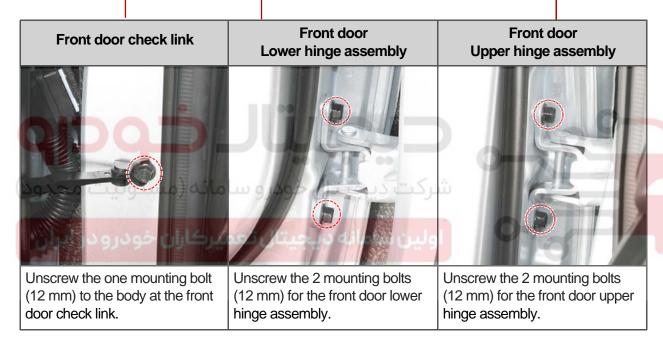




4. Install in the reverse order of removal.

BODY EXTERIOR

7221-05 REAR DOOR BELT OUTSIDE WEATHERSTRIP

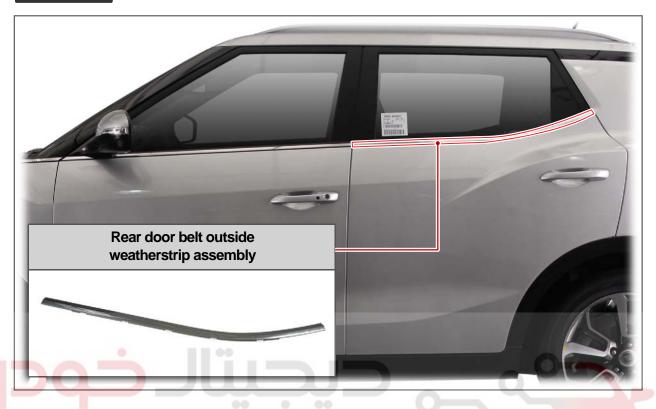



1. Unscrew the 2 mounting screws for the rear door belt outside weatherstrip.






♣ NOTE

The rear mounting screw is hidden by the rear door trim weatherstrip.

06-88 7221-05 T I V O L

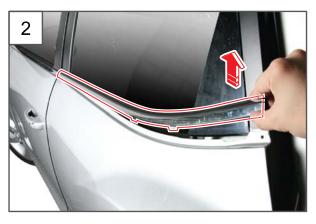

2. Pull up and remove the rear door belt outside weatherstrip.



3. Remove the rear door belt outside weatherstrip.



4. Install in the reverse order of removal.

BODY EXTERIOR

V O L

S.G.N.

7210-01 REAR DOOR LATCH AND CABLE ASSEMBLY

Preceding work

- Carry out the work with the window glass closed.
- Disconnect the negative battery cable.






1. Remove the rear door trim assembly.

₿ NOTE


Refer to "REAR DOOR TRIM ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY INTERIOR" chapter.

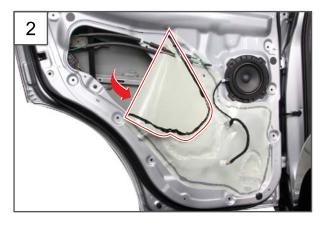

2. Strip off the rear door trim vinyl seal as shown in the picture to provide working space.

WWW.DIGITALKHODRO.COM

06-90 7210-01 T I V O L :

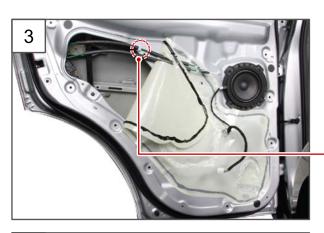



3. Remove the door lock cable mounting clip.



 Disconnect the door actuator connector (A) and unscrew the one window glass guide rail mounting nut (B, 10 mm).

 Tightening torque 6.7 ~ 10.7Nm

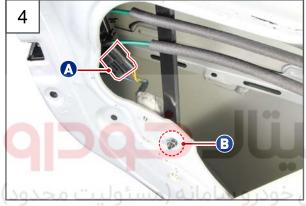




Tightening torque 6.7 ∼ 10.7Nm



Pull out the window glass guide rail slightly from the rear door inner panel.

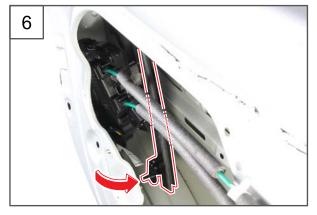


A CAUTION

Do not pull out it excessively as this may damage the parts or cause the power window to malfunction.

BODY EXTERIOR

| | Modification basis | |
|--|--------------------|--|
| | Application basis | |
| | Affected VIN | |

0 L

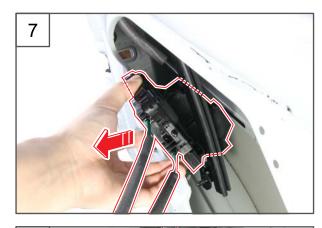

7. Take out the rear door latch and cable assembly though the place at which the window glass guide rail was removed.



8. Remove the door lock cable from the rear door latch and cable assembly.



Pull out the fixing part (A) of the rear door lock cable from the rear door latch and cable assembly.




Rotate the rear door latch and cable assembly to the arrow direction, as shown in the picture.



Remove the front door lock cable from the front door latch and cable assembly.

06-92 7210-01 T I V O L

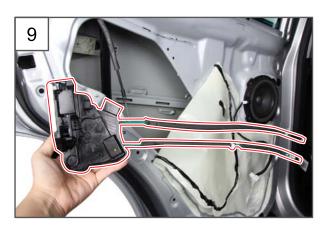


9. Remove the rear door latch and cable.



10.Install in the reverse order of removal.

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

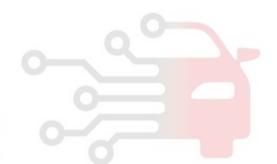


BODY EXTERIOR

0 L

7210-11 REAR DOOR OUTSIDE HANDLE ASSEMBLY

Preceding work

- Carry out the work with the window glass closed.
- Disconnect the negative battery cable.

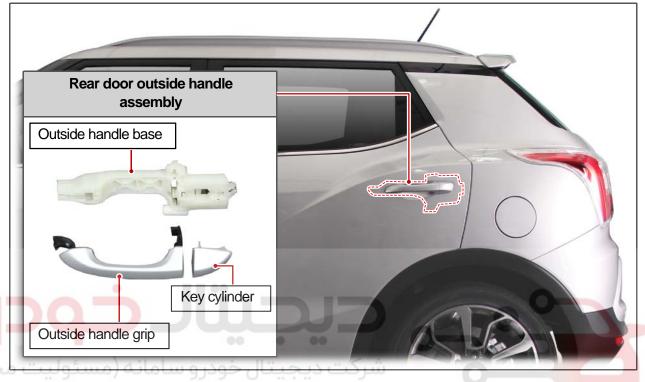




1. Remove the rear door trim assembly.

♣ NOTE

Refer to "REAR DOOR TRIM ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY INTERIOR" chapter.

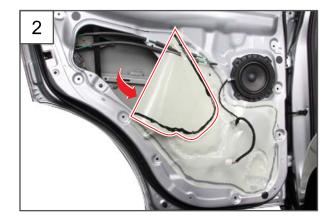

2. Strip off the rear door panel vinyl seal as shown in the picture to provide working space.

| | Modification basis | | |
|------|--------------------|--------|-------|
| | Application basis | | |
| | Affected VIN | | |
| WWW. | .DIGITA | LKHODR | O.COM |

06-94 7210-11 T I V O L I




3. Remove the rear door plug.



4. Unscrew the mounting bolt for the rear door outside handle cover.

Tightening torque 5.8 ∼ 7.8Nm

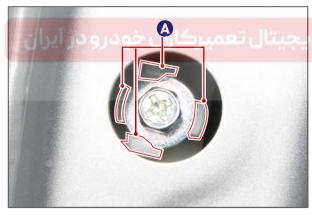



There is a holder (A) which prevents the mounting bolt from dropping into the rear door panel.



5. Remove the rear door outside handle cover.

BODY EXTERIOR

| | Modification basis | |
|--|--------------------|--|
| | Application basis | |
| | Affected VIN | |

I V O L I




Push the rear door outside handle rearwards and remove the handle from the rear door panel from the rear.




7. Unscrew the mounting bolt for the rear door outside handle base.

Tightening torque 5.8 ∼ 7.8Nm

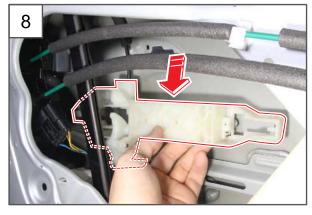


8. Remove the rear door outside handle base from the rear door panel.

06-96 7210-11 T I V O L

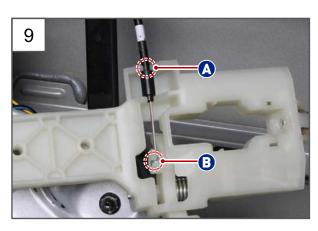

Remove the rear door outside handle release cable from the fixing part (A) and operating part (B) of the rear door outside handle base.

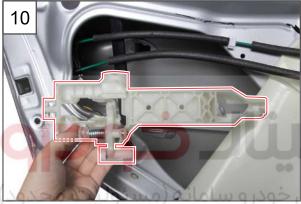

10. Remove the rear door outside handle base.



11.Install in the reverse order of removal.

BODY EXTERIOR

V O L

7220-01

REAR DOOR POWER WINDOW REGULATOR


Preceding work

- Disconnect the negative battery cable.





1. Lower the window glass so that the window glass is visible by 23 ± 0.5 cm, as shown in the figure. (measure at B-pillar)

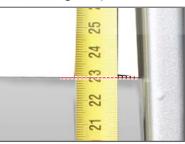

2. Remove the rear door trim assembly.




♣ NOTE

Refer to "REAR DOOR TRIM ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY INTERIOR" chapter.


| 2 | |
|---|-----|
| | 14/ |
| | R |
| | |
| | |
| | 0 |

Modification basis
Application basis
Affected VIN

06-98 7220-01 T I V O L I

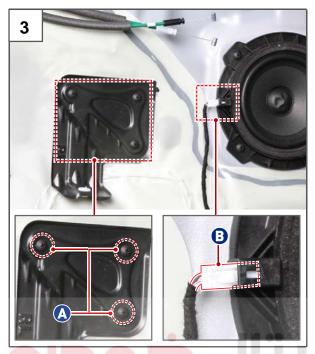

Unscrew the 3 rear door pull handle bracket mounting screws (A) and disconnect the rear door speaker connector (B).

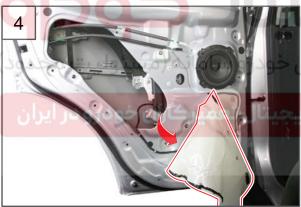

Remove the rear door trim vinyl seal and pull it back to the arrow direction.



Loosen the 2 clamp grip mounting nuts (10 mm) only to the extent that the window glass

can be separated, and lift the window glass into place.


Tightening torque 5.8 ∼ 7.8Nm

BODY EXTERIOR

I V O L I




Disconnect the rear door power window motor connector.

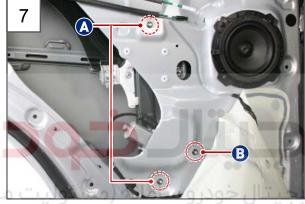

 Unscrew the 2 rear door power window regulator assembly rail mounting nuts (A, 10 mm) and one motor mounting nuts (B, 10 mm).

Tightening torque 5.8 ∼ 7.8Nm

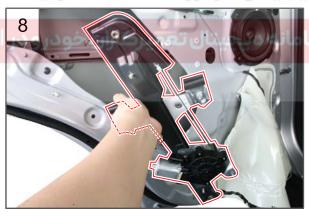

Remove the rear door power window regulator.




9. Install in the reverse order of removal.

06-100 6310-01 V O L I

6310-01 REAR DOOR PANEL ASSEMBLY

Preceding work - Disconnect the negative battery cable.

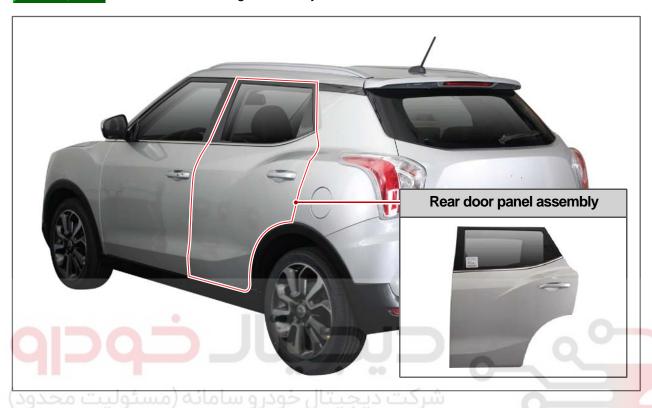





WWW.DIGITALKHODRO.COM

1. Remove the rear door main wiring cover.



2. Press out the connector's fixing parts (6 off) in sequence from the B-pillar using a flatbladed screwdriver.

BODY EXTERIOR

| | Modification basis | |
|--|--------------------|--|
| | Application basis | |
| | Affected VIN | |

V O L I

3. Disconnect the rear door main wiring connector.



 
4. Unscrew the following bolts to remove the rear door panel.



CAUTION

Two persons are required to do this work, so as not to drop the rear door panel assembly and cause any personal injury or damage to the vehicle.

Tightening torque 19.6 ∼ 30.4Nm



Rear door lower hinge assembly

Rear door upper hinge assembly



Unscrew the one rear door check link mounting bolt (12 mm) to the body.

Unscrew the 2 mounting bolts (12 mm) for the rear door lower hinge assembly.


Unscrew the 2 mounting bolts (12 mm) for the rear door upper hinge assembly.

| | Modification basis | |
|--|--------------------|--|
| | Application basis | |
| | Affected VIN | |

06-102 6310-01 T I V O L I



7. Install in the reverse order of removal.

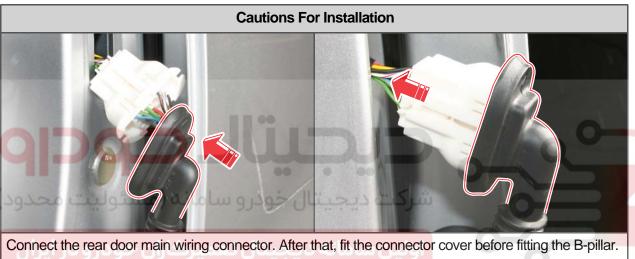

BODY EXTERIOR

6410-01 TAILGATE PANEL ASSEMBLY

Preceding work

- Disconnect the negative battery cable.






1. Remove the tailgate trim assembly.

Ů NOTE

Refer to "TAILGATE TRIM ASSEMBLY" under "REMOVAL AND INSTALLATION" in "BODY INTERIOR" chapter.

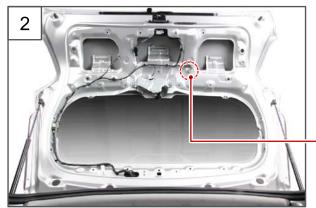

2. Unscrew the ground mounting bolt (10 mm) for the tailgate wiring assembly.




| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

06-104 6410-01 T I V O L I




Pull out the high-mounted stop lamp connector (A) and rear washer hose (B) from the upper part of the tailgate.

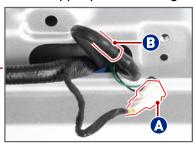

4. Unscrew the one mounting screw (A) for LH/RH license plate lamp assemblies.



Remove the license plate lamp from the tailgate assembly and disconnect the license plate lamp connector (A).

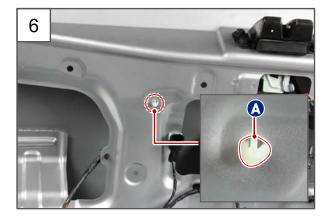


6. Pull out the rearview camera connector fixing key (A) to the arrow direction and disconnect the rearview camera connector (B).





BODY EXTERIOR

| | Modification basis | |
|--|--------------------|--|
| | Application basis | |
| | Affected VIN | |

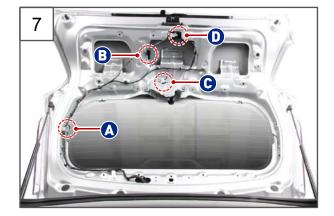


- 7. Disconnect each connector for the tailgate wiring assembly.
 - A. Tailgate glass heating connector
 - B. Tailgate door switch connector
 - C. Rear wiper motor connector
 - D. Tailgate latch connector

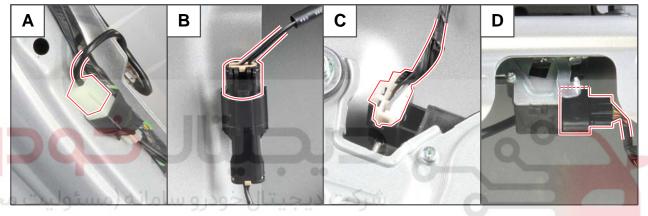

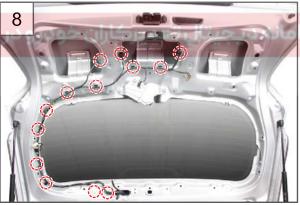

8. Remove the tailgate wiring fixing keys (13 off).

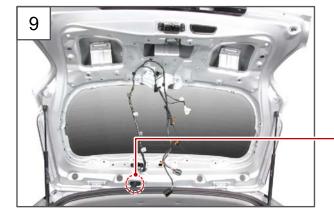

Remove the tailgate wiring assembly cover (A) and take out the tailgate wiring through the cover hole



| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

06-106 6410-01 T I V O L



10.Remove the LH/RH tailgate lifter from the tailgate panel assembly.

A CAUTION

Two persons are required to do this work, so as not to drop the tailgate panel assembly and cause any personal injury or damage to the vehicle.





11.Unscrew the 2 tailgate hinge mounting bolts (12 mm) on both sides and remove the tailgate panel assembly.

Tightening torque 16.6 ~25.4 Nm

0 L I \mathbb{V}

6410-01 06-107

SUNROO SEAT/SEA AIR BAG CONDITION





12.Install in the reverse order of removal.

Modification basis Application basis Affected VIN

06-108 7940-20

TIVOLI

7940-20 REAR SPOILER ASSEMBLY

Preceding work

- Disconnect the negative battery cable.






1. Open the tailgate and remove the 4 blind plugs.



2. Remove the 4 rear spoiler mounting nuts (10 mm).

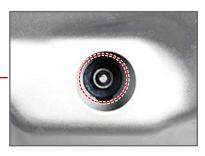


BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

I V O L I



3. Lift out the rear spoiler and disconnect the rear washer hose (A) and high-mounted stop lamp connector (B).

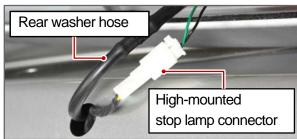

4. Remove the rear spoiler.



5. Install in the reverse order of removal.



06-110 7880-00

V O L I T I


7880-00 REAR BUMPER ASSEMBLY

Preceding work

- Disconnect the negative battery cable.
- Remove the rear wheel.





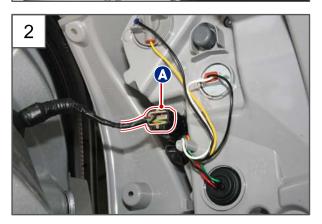

1. Unscrew the 2 rear combination lamp assembly mounting screws and pull out the rear combination lamp assembly from the body to the arrow direction.



2. Disconnect the rear combination lamp assembly connector (A) and remove the rear combination lamp assembly.




♣ NOTE

Perform the same procedure for the removal of the opposite rear combination lamp.


BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |

V O L I

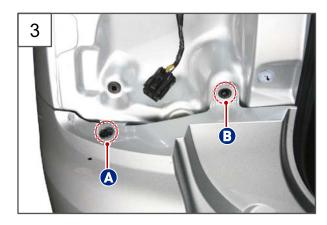

3. Remove the one LH/RH mounting screw rivet (A) for the rear bumper assemblies and unscrew the mounting screw (B) on both sides.

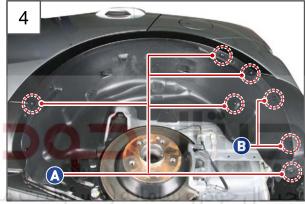

4. Remove the 5 mounting screw rivets (A) for the rear wheel house cover and unscrew the 2 mounting screws (B).

♣ NOTE

You can carry out the work by only prising off the rear wheel house cover. Therefore, it's not necessary to remove it.




5. Prise off the wheel arch garnish using a hand remover.




6. Remove the wheel arch garnish.

| | Modification basis | | |
|------|--------------------|--------|-------|
| | Application basis | | |
| | Affected VIN | | |
| WWW. | .DIGITA | LKHODR | O.COM |


06-112 7880-00 T I V O L

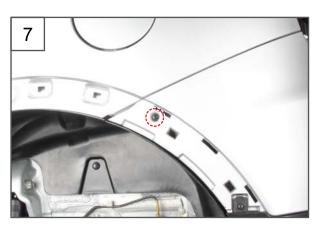

7. Unscrew the one mounting screw for LH/RH rear bumper side fascia.

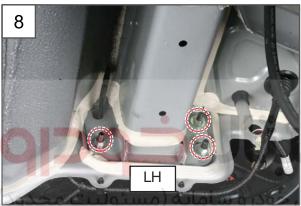

8. Unscrew the 3 LH mounting nuts (12 mm) and 2 RH mounting nuts (12 mm) for the impact beam.

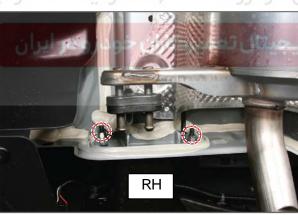

اولین سامانه د



9. Pull out the LH/RH rear bumper side fascia from the rear bumper side bracket.

BODY EXTERIOR

| Modification basis | |
|--------------------|--|
| Application basis | |
| Affected VIN | |


I V O L I




10. Remove the rear bumper assembly from the body.



11. Remove the parking aid wiring connector fitted on the left-hand side of the rear bumper assembly.

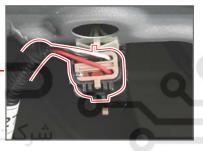

12.Remove the rear bumper assembly.

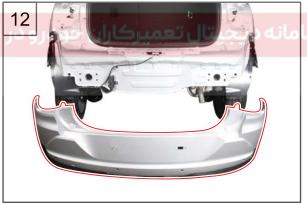


13.Install in the reverse order of removal.



06-114 7880-00

TIVOL

Rear bumper overhaul

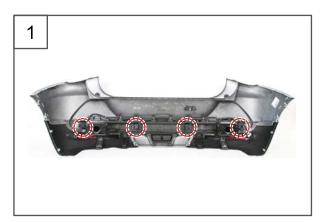

 Disconnect the 4 rear parking sensor connectors and remove the 4 rear parking aid sensors.



2. Remove the 4 mounting screw rivets for the rear bumper upper fascia under the rear bumper.



جیتال تعمیرکاران خودرو در ایر

Unscrew the 4 mounting screws and remove the rear bumper impact beam with the parking aid sensor wiring.



4. Unscrew the 4 mounting screws and remove the rear fog lamp blanking cover.



BODY EXTERIOR


V O L I

5


5. Unscrew the 2 mounting screws to remove the license plate mounting bracket assembly.



6. Unscrew the 6 rear bumper lower fascia mounting screws on both sides.

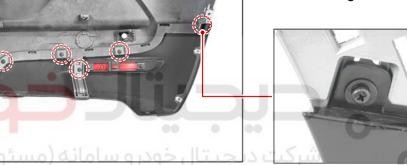

7. Push out the rear bumper LH/RH lower fascia fixing parts (5 off).

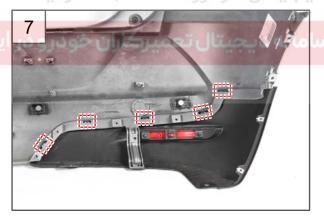



8. Install in the reverse order of removal.

| | Modification basis | |
|---|--------------------|--|
| | Application basis | |
| _ | Affected VIN | |

| Memo | | | | | |
|-----------|----------------|----------------|------|---|--|
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | , | | | | |
| | - 11 | 0 | | | |
| | | | | | |
| | | 00 0 00 | 0- | | |
| 100.00 | | ت دیجیتال خو | < :. | | |
| سوبيت معد | مرو ساهامه رمد | ے دیجیتال حو | سرحا | 0 | |
| | | | | | |
| | | ن سامانه دیجیت | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |