


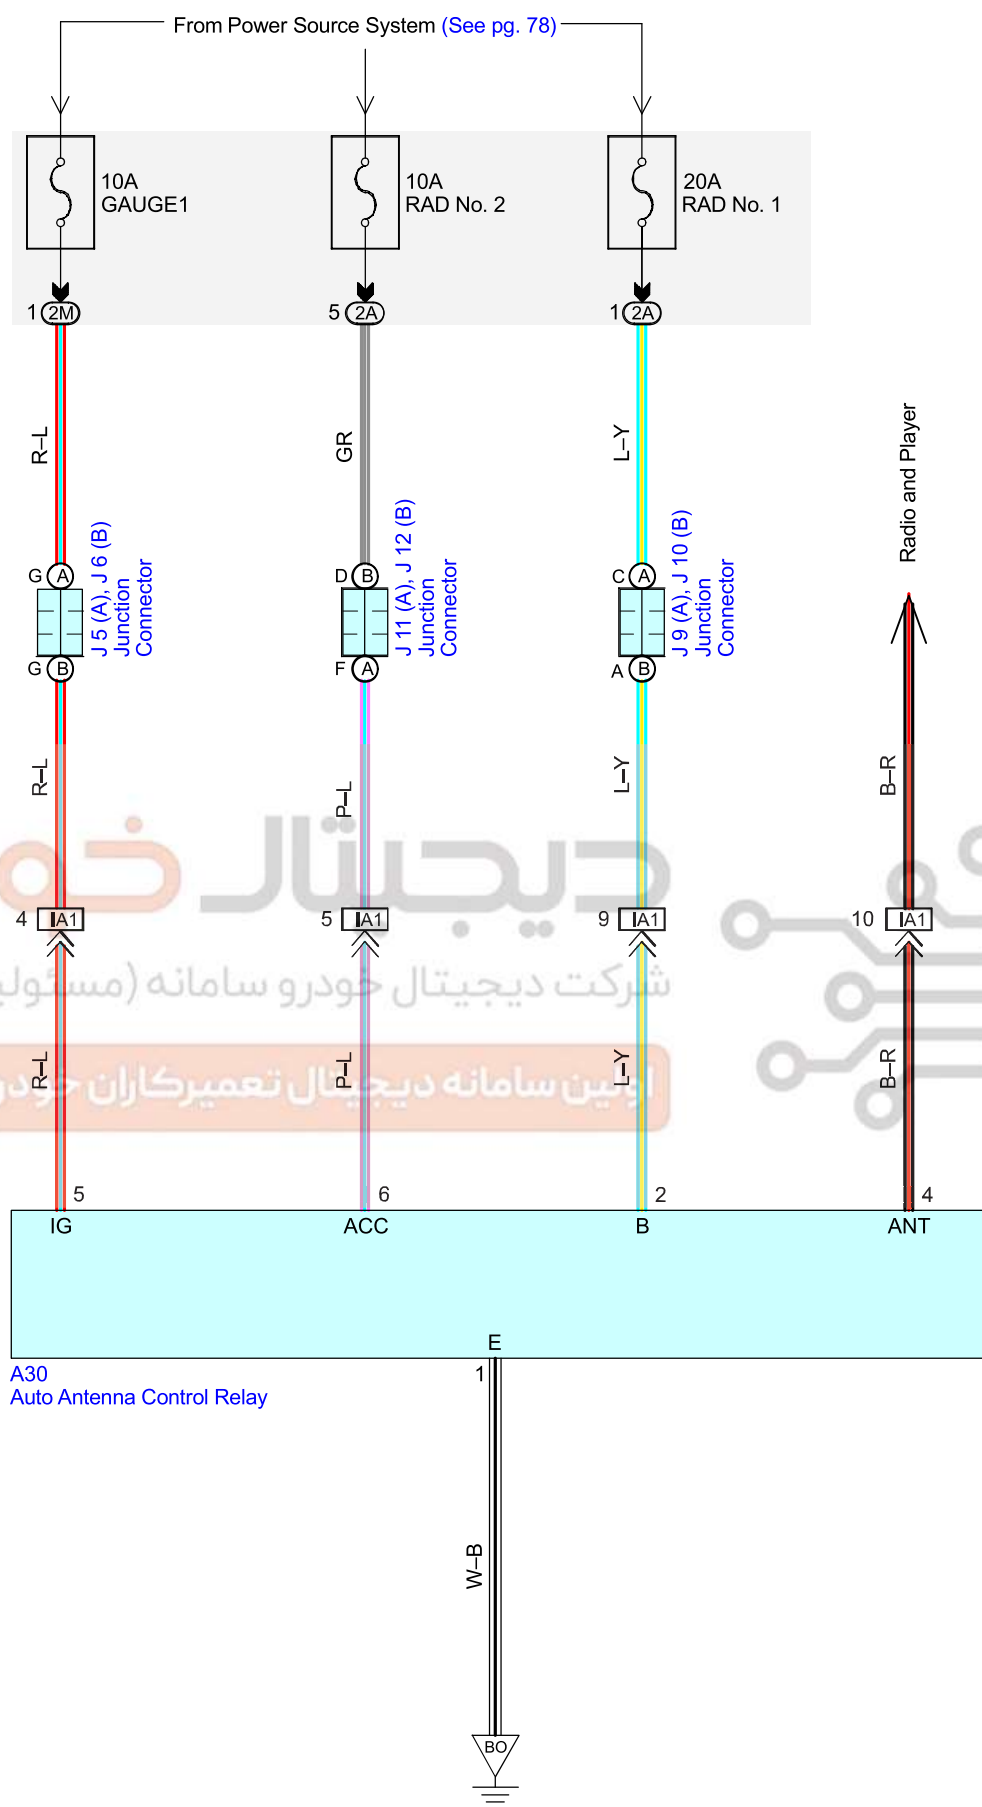

Service Hints**A30 Auto Antenna Control Relay**

- 5-Ground : Approx. 12 volts with the ignition SW at ON or ST position
 6-Ground : Approx. 12 volts with the ignition SW at ACC or ON position
 2-Ground : Always approx. 12 volts
 1-Ground : Always continuity

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A30		38 (LHD)		J9	A	37 (LHD)		J12	B	37 (LHD)	
J5	A	37 (LHD)		J10	B	37 (LHD)					
J6	B	37 (LHD)		J11	A	37 (LHD)					

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	26	Instrument Panel Wire and Driver Side J/B
2M	27	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	55 (LHD)	Instrument Panel Wire and Floor Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
BO	60 (LHD)	Front Side of Rear Quarter Wheel House LH