



Starter.Alternator.Preheat

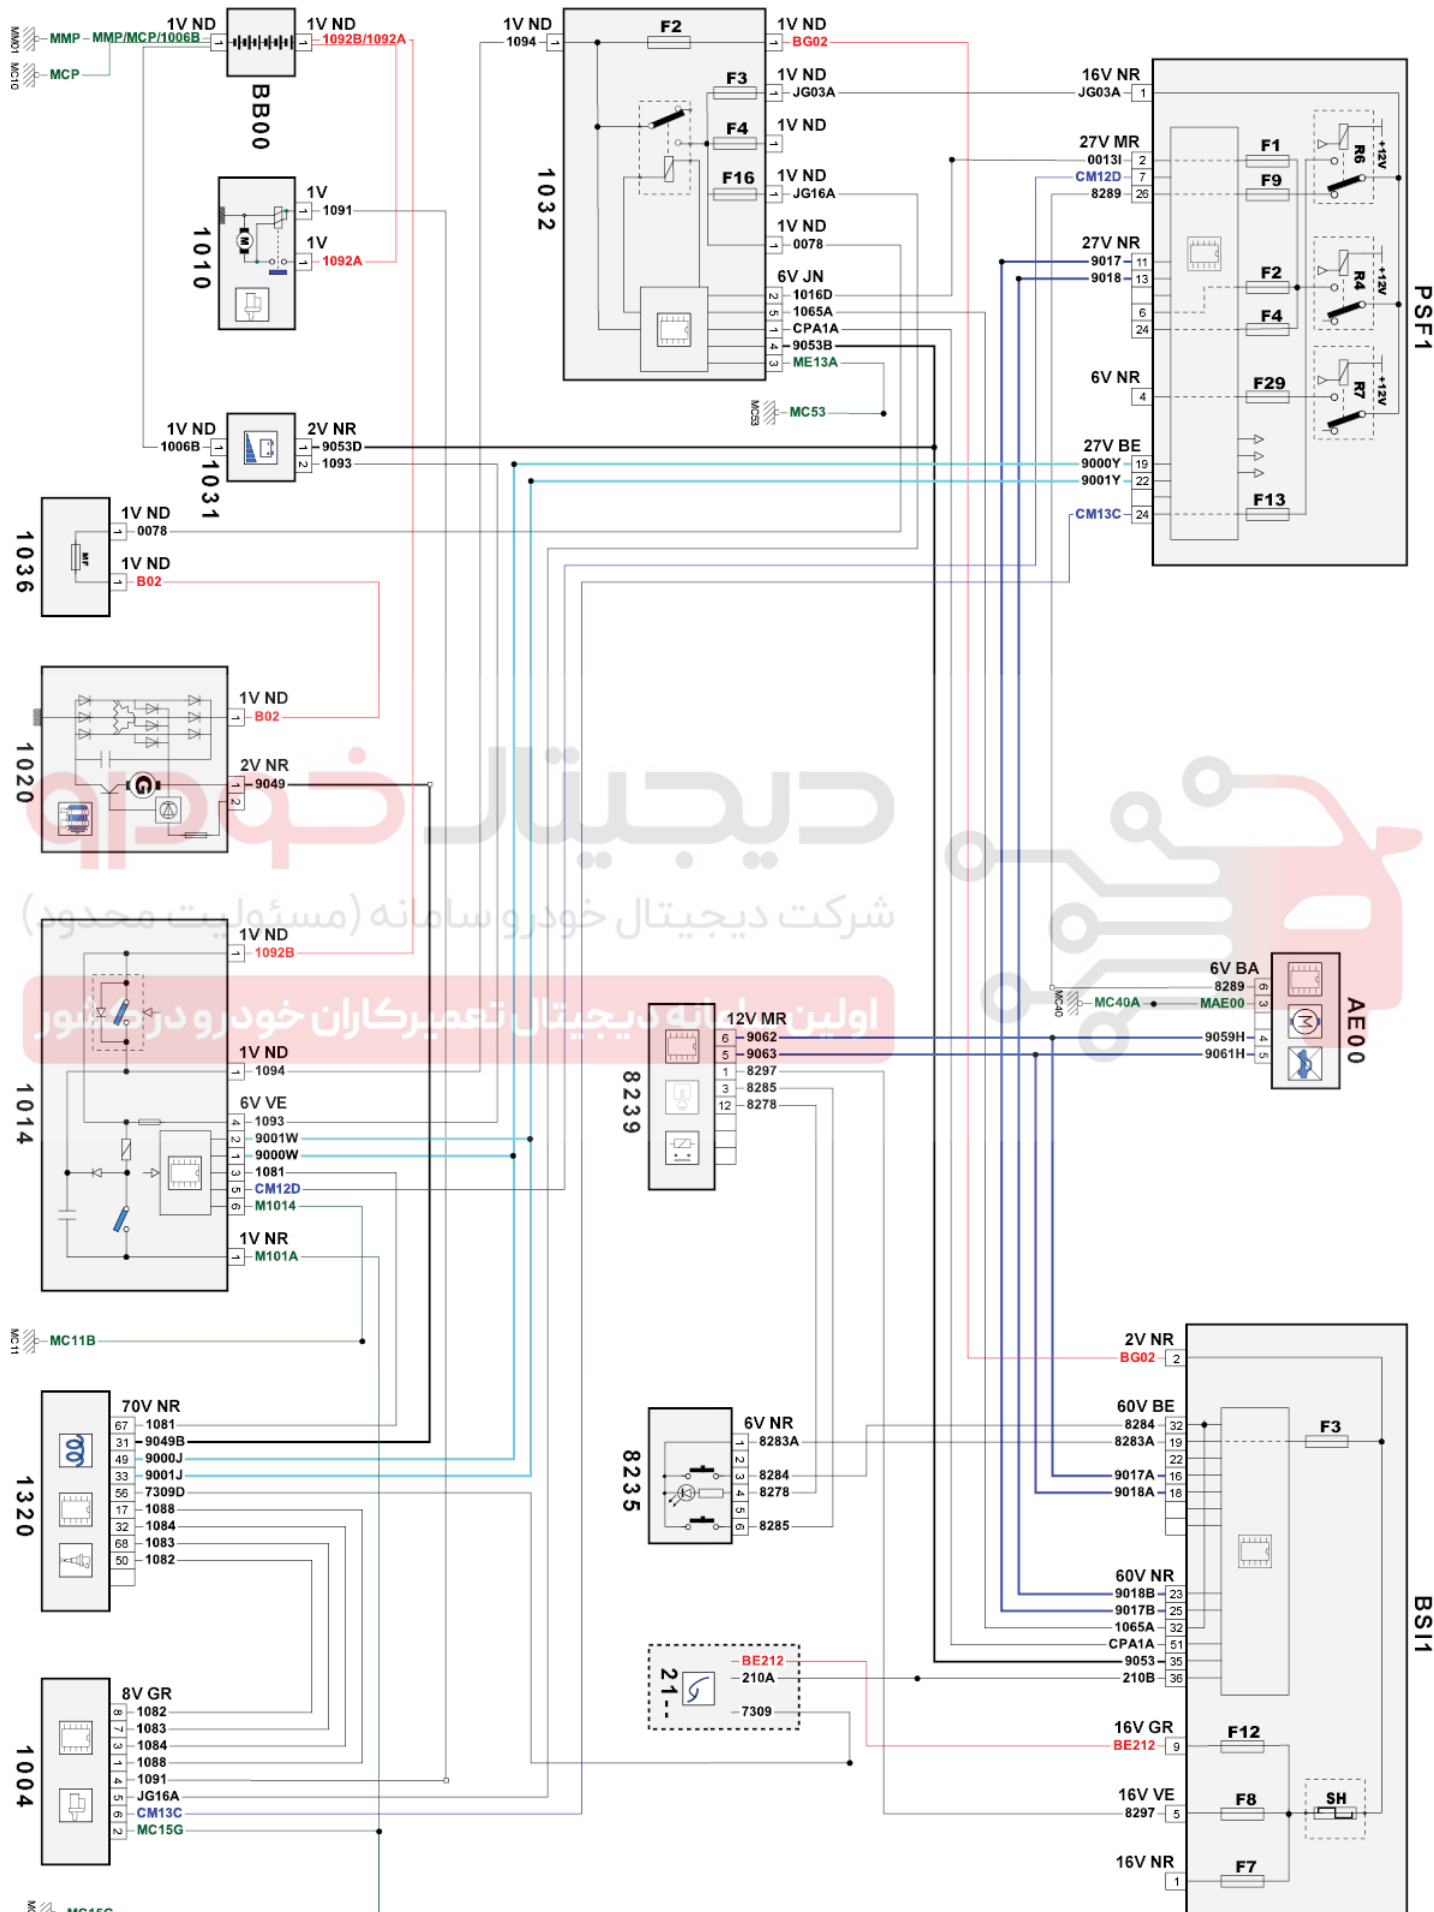

Starter.Alternator.Preheat

item code	description	information
1004	null	starter control interface unit
1010	null	starter motor
1014	null	network voltage maintaining device
1020	null	alternator
1031	null	battery charge status unit
1032	null	electrical supplies protection and management unit
1036	null	direct voltage transformer supply protection fuse
1320	null	engine ECU /
2120	null	dual function brake switch /
8235	null	engine starting switch
8239	null	electronic key reader
AE00	null	electric steering lock
BB00	null	ancillaries battery
BS11	null	built-in systems interface
E013	null	crimp one information (or equipotential 0013) wire
E212	null	crimp one information (or equipotential 212) wire
E739	null	crimp one information (or equipotential 739) wire
E900A	null	crimp one information (or equipotential 276A) wire
E901A	null	crimp one information (or equipotential 901A) wire
E917	null	crimp one information (or equipotential 917) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918	null	crimp one information (or equipotential 918) wire
E918A	null	crimp one information (or equipotential 918A) wire
E953	null	crimp one information (or equipotential 953) wire
EM11B	null	crimp earth (earth point number 11B)
EM40A	null	crimp earth (earth point number 40A)
EM53	null	crimp earth (earth point number 53)
MC10	null	body earth point number 10
MC11B	null	body earth point number 11B
MC15	null	body earth point number 15
MC40B	null	body earth point number 40
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box

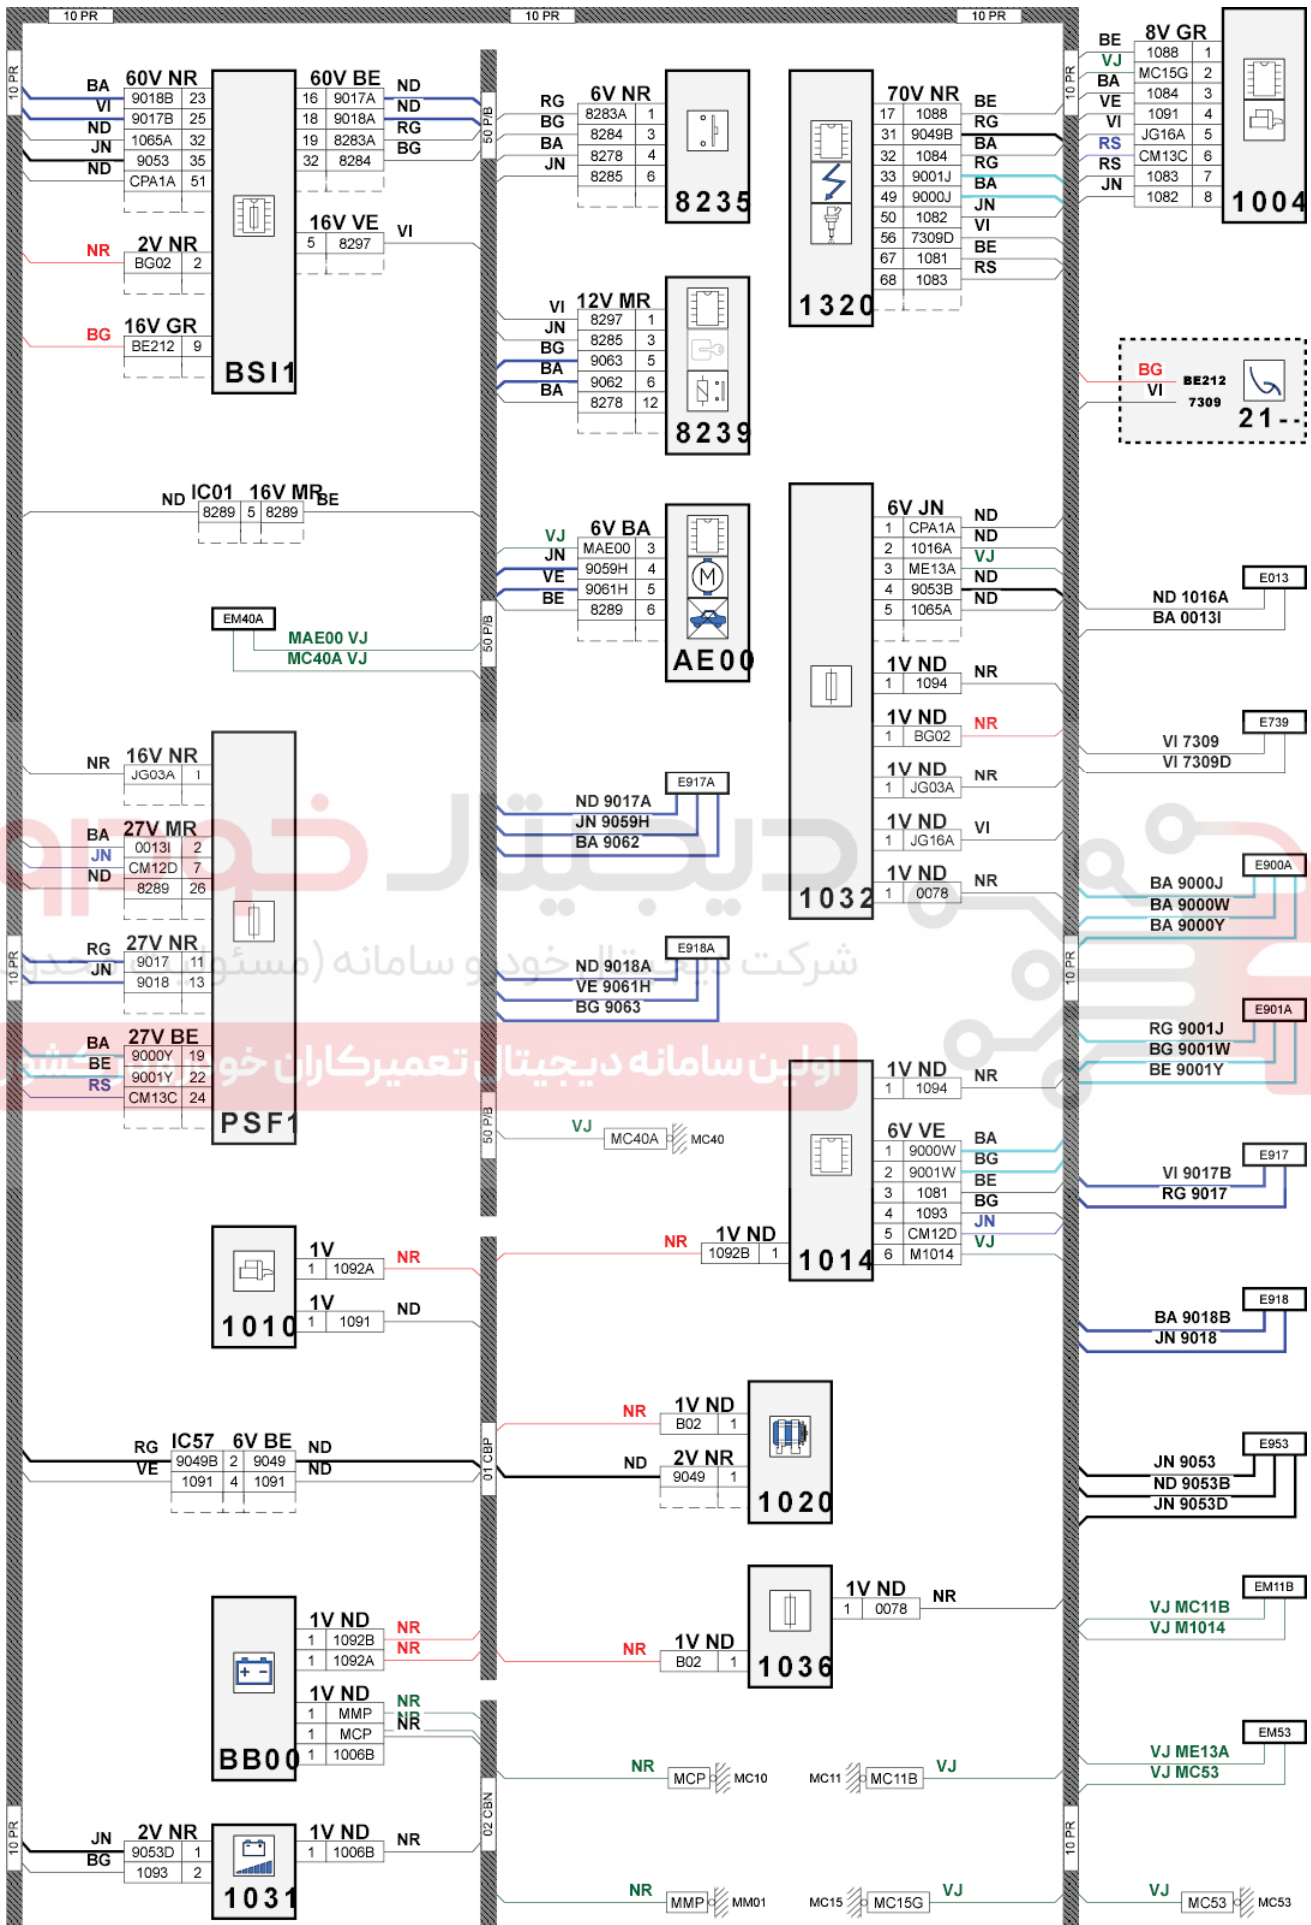

Starter.Alternator.Preheat

item code	description	information
1004	null	starter control interface unit
1010	null	starter motor
1014	null	network voltage maintaining device
1020	null	alternator
1031	null	battery charge status unit
1032	null	electrical supplies protection and management unit
1036	null	direct voltage transformer supply protection fuse
1320	null	engine ECU /
2120	null	dual function brake switch /
8235	null	engine starting switch
8239	null	electronic key reader
AE00	null	electric steering lock
BB00	null	ancillaries battery
BSI1	null	built-in systems interface
E013	null	crimp one information (or equipotential 0013) wire
E739	null	crimp one information (or equipotential 739) wire
E900A	null	crimp one information (or equipotential 276A) wire
E901A	null	crimp one information (or equipotential 901A) wire
E917	null	crimp one information (or equipotential 917) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918	null	crimp one information (or equipotential 918) wire
E918A	null	crimp one information (or equipotential 918A) wire
E953	null	crimp one information (or equipotential 953) wire
EM11B	null	crimp earth (earth point number 11B)
EM40A	null	crimp earth (earth point number 40A)
EM53	null	crimp earth (earth point number 53)
MC10	null	body earth point number 10
MC11B	null	body earth point number 11B
MC15	null	body earth point number 15
MC40B	null	body earth point number 40
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box