


# Audio System

Circuit Diagram (Page 1 of 7)

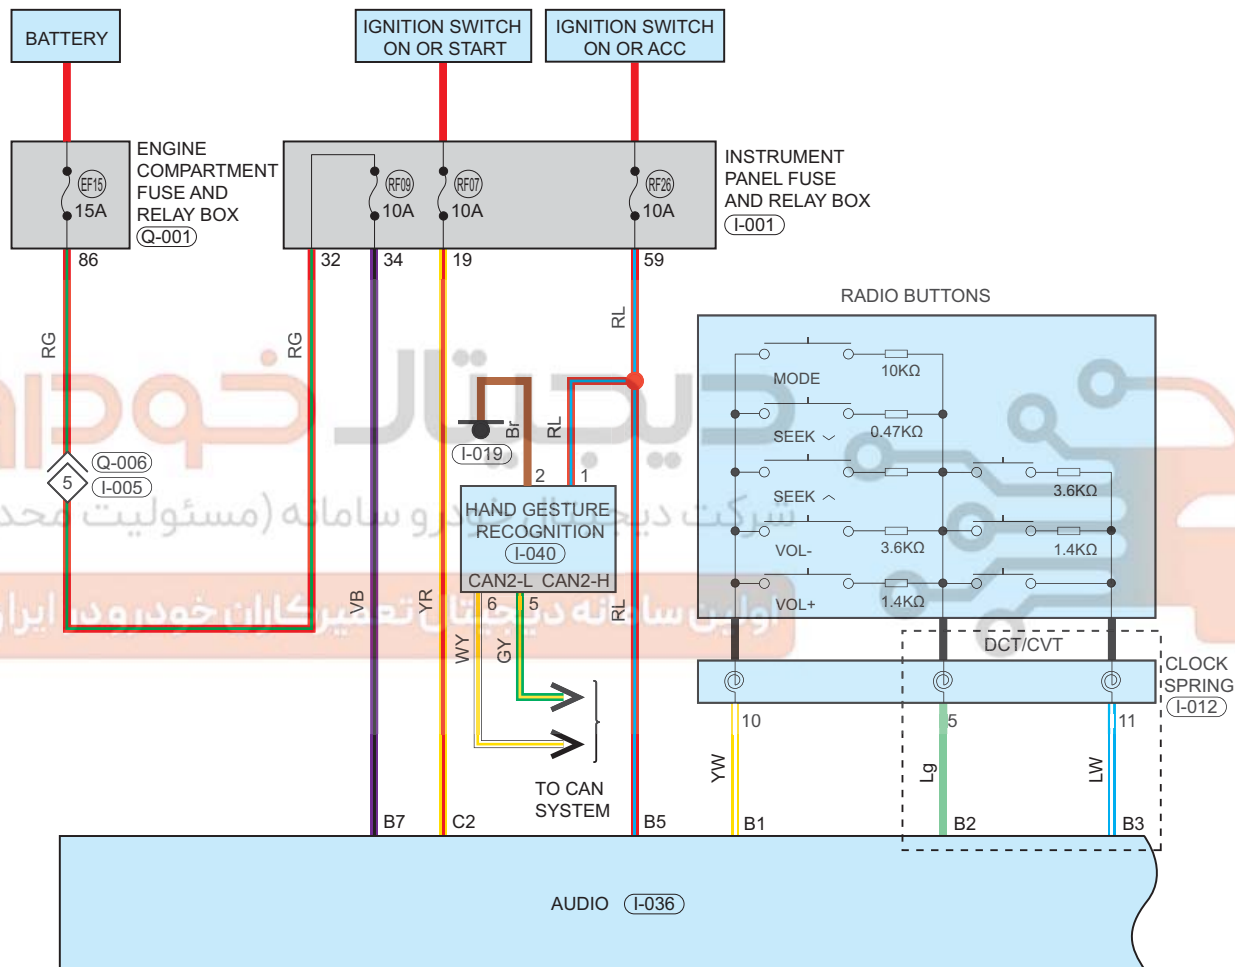

09

**Parts Location**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	I-001	08-23	I-019	08-23
I-040	08-23	I-036	08-23	I-012	08-23

**Fuse and Relay**

Fuse/Relay	See Page	Fuse and Relay Box
EF15	06-2	Engine Compartment Fuse and Relay Box
RF09	06-8	Instrument Panel Fuse and Relay Box
RF07	06-8	Instrument Panel Fuse and Relay Box
RF26	06-8	Instrument Panel Fuse and Relay Box


**Location of Junction Connector**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-006, I-005	08-10, 08-23				

**Form of Connector**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	I-001	12-4	I-019	12-4
I-040	12-4	I-036	12-4	I-012	12-4
Q-006, I-005	12-17, 12-4				

Circuit Diagram (Page 2 of 7)

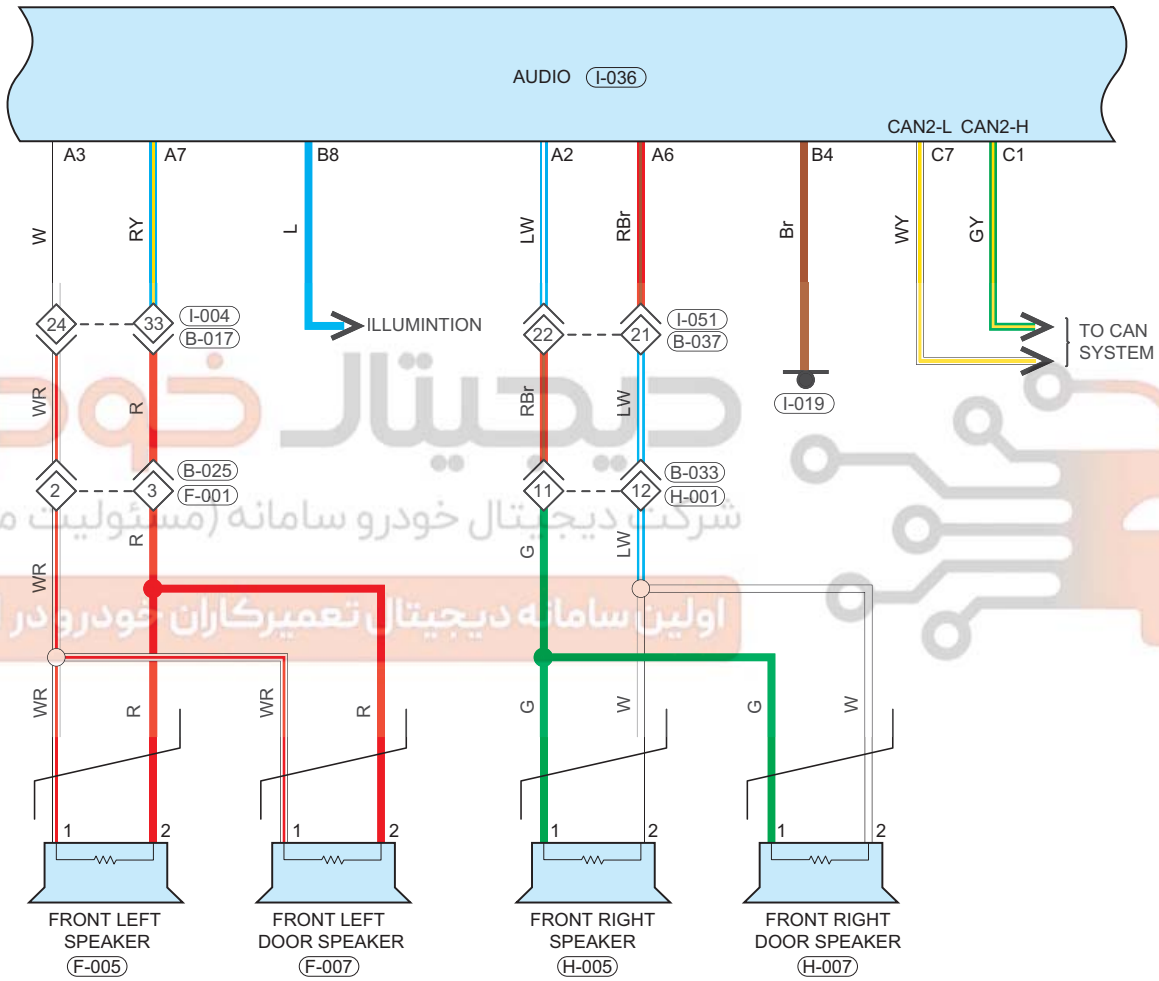

09

AEE002001

**Parts Location**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	08-23	F-005	08-56	F-007	08-56
H-005	08-57	H-007	08-57	I-019	08-23

**Location of Junction Connector**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004, B-017	08-23, 08-36	B-025, F-001	08-36	I-051, B-037	08-23, 08-36
B-033, H-001	08-36, 08-57				

**Form of Connector**


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	12-4	F-005	12-14	F-007	12-14
H-005	12-14	H-007	12-14	I-019	12-4
I-004, B-017	12-4, 12-8	B-025, F-001	12-8, 12-14	I-051, B-037	12-4, 12-8
B-033, H-001	12-8, 12-14				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 7)

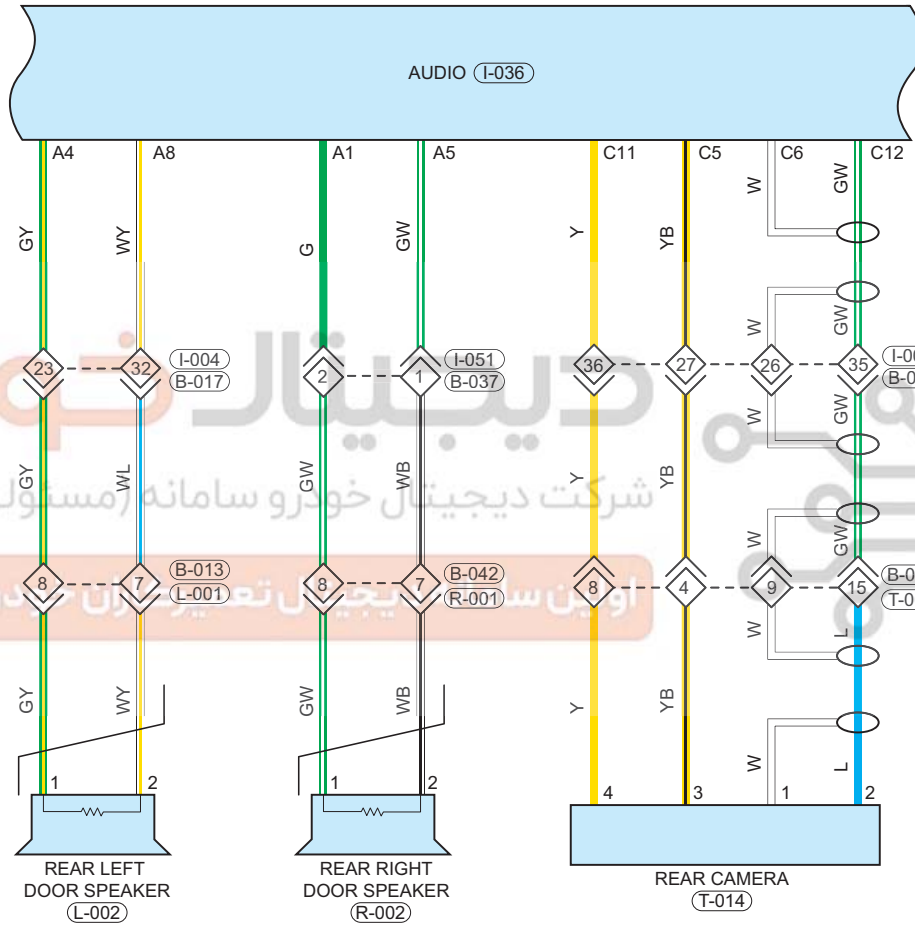

09

AEE003001

**Parts Location**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	08-23	L-002	08-58	R-002	08-59
T-014	08-60				

**Location of Junction Connector**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004, B-017	08-23, 08-36	B-013, L-001	08-36, 08-58	I-051, B-037	08-23, 08-36
B-042, R-001	08-36, 08-59	I-004, B-017	08-23, 08-36	B-005, T-001	08-36, 08-60

**Form of Connector**


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	12-4	L-002	12-15	R-002	12-15
T-014	12-16	I-004, B-017	12-4, 12-8	B-013, L-001	12-8, 12-15
I-051, B-037	12-4, 12-8	B-042, R-001	12-8, 12-15	I-004, B-017	12-4, 12-8
B-005, T-001	12-8, 12-16				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 4 of 7)

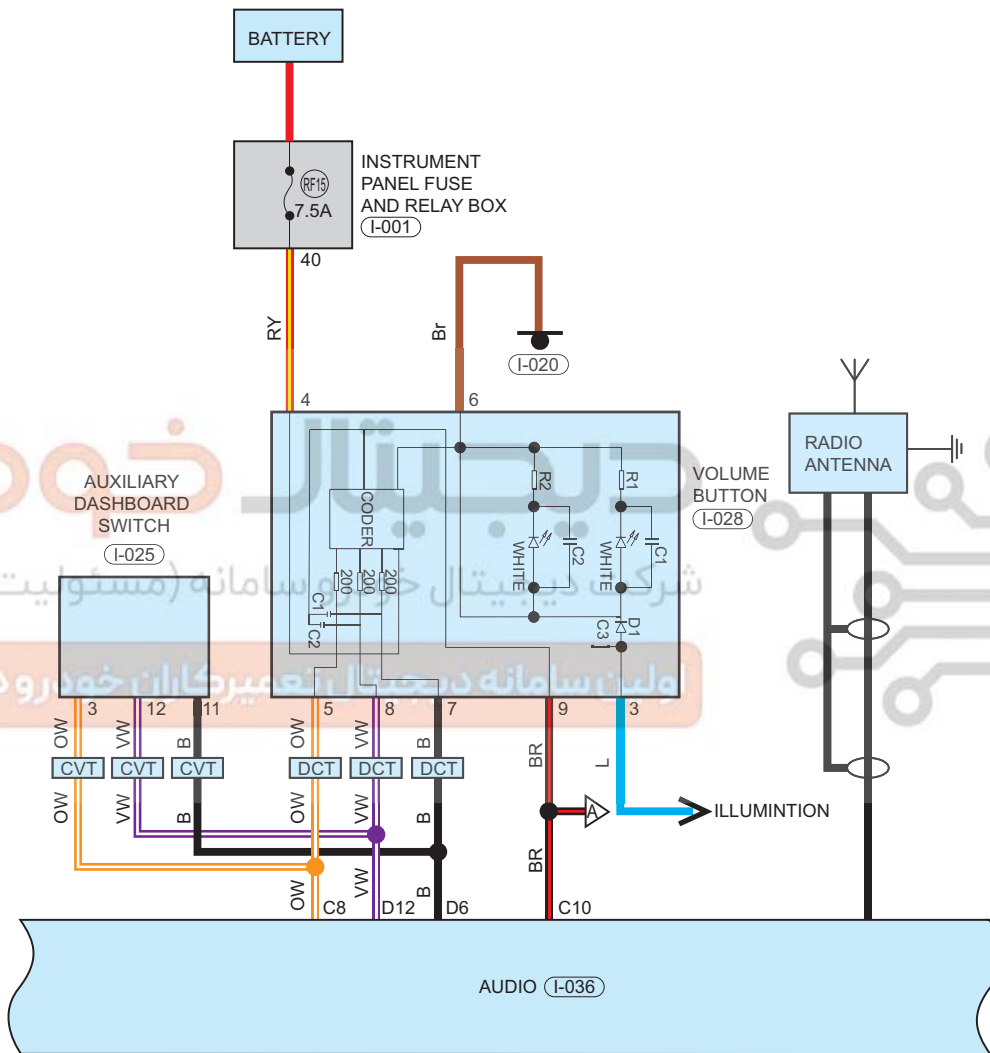

09

AEE004001

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-025	08-23	I-001	08-23	I-020	08-23
I-028	08-23	I-036	08-23		

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF15	06-8	Instrument Panel Fuse and Relay Box

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-025	12-4	I-001	12-4	I-020	12-4
I-028	12-4	I-036	12-4		

# دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران





Circuit Diagram (Page 5 of 7)

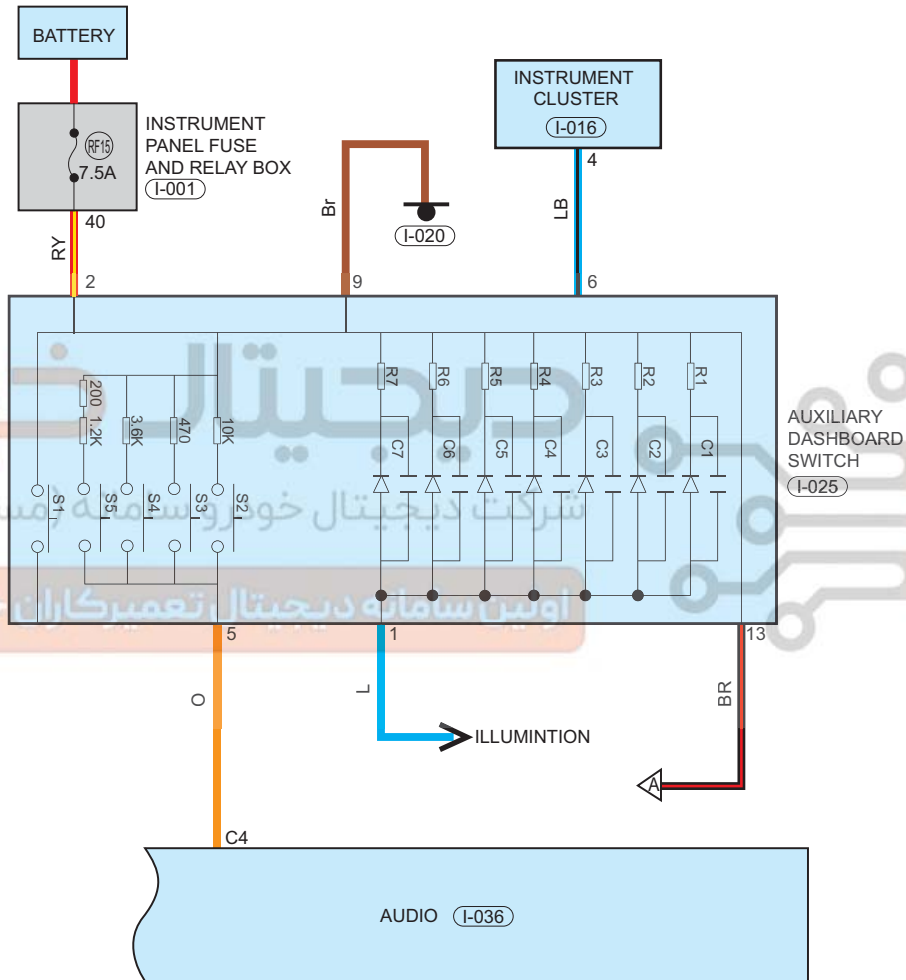

09

AEE005001

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-23	I-020	08-23	I-016	08-23
I-025	08-23	I-036	08-23		

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF15	06-8	Instrument Panel Fuse and Relay Box

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-020	12-4	I-016	12-4
I-025	12-4	I-036	12-4		


# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 6 of 7)

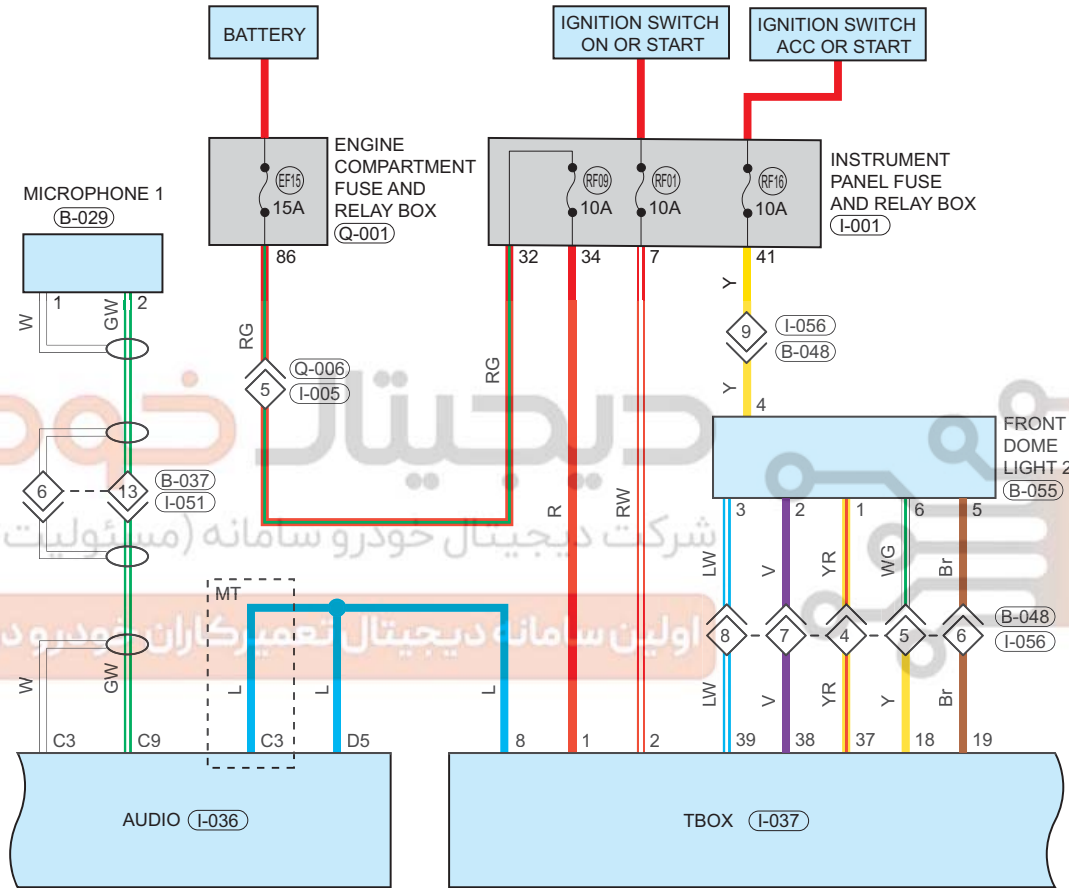

09

AEE006001

**Parts Location**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-029	08-36	Q-001	08-10	I-001	08-23
B-055	08-36	I-036	08-23	I-037	08-23

**Fuse and Relay**

Fuse/Relay	See Page	Fuse and Relay Box
EF15	06-2	Engine Compartment Fuse and Relay Box
RF09	06-8	Instrument Panel Fuse and Relay Box
RF01	06-8	Instrument Panel Fuse and Relay Box
RF16	06-8	Instrument Panel Fuse and Relay Box


**Location of Junction Connector**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-037, I-051	08-36, 08-23	Q-006, I-005	08-10, 08-23	I-056, B-048	08-23, 08-36
B-048, I-056	08-36, 08-23				

**Form of Connector**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-029	12-8	Q-001	12-17	I-001	12-4
B-055	12-8	I-036	12-4	I-037	12-4
B-037, I-051	12-8, 12-4	Q-006, I-005	12-17, 12-4	I-056, B-048	12-4, 12-8
B-048, I-056	12-8, 12-4				

Circuit Diagram (Page 7 of 7)

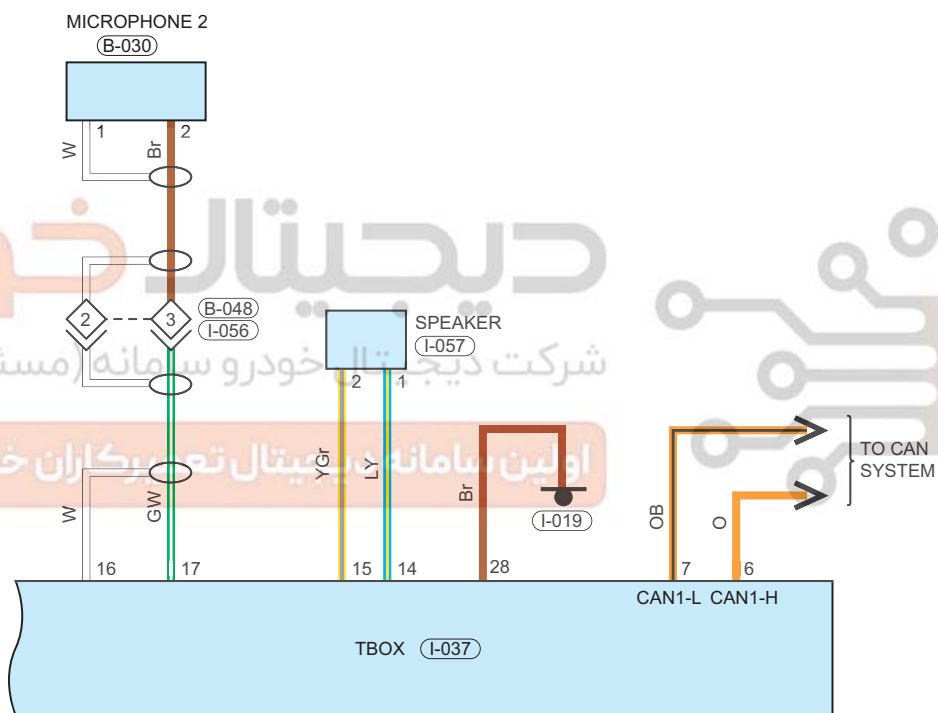

09

AEE007001