


item code	description	information
1004	null	starter control interface unit
1014	null	network voltage maintaining device
1032	null	electrical supplies protection and management unit
1120	null	knock sensor /
1131	null	ignition coil for cylinder N°1
1132	null	ignition coil for cylinder N°2
1133	null	ignition coil for cylinder N°3
1134	null	ignition coil for cylinder N°4
1211	null	fuel pump - gauge assembly
1215	null	purge canister solenoid valve
1261	null	accelerator pedal position sensor /
1262	null	Motorised throttle housing
1295	null	turbocharger discharge electrovalve
12A6	null	coolant outlet housing
12B6	null	inlet camshaft position sensor
12C0	null	turbocharging pressure regulation regulated solenoid valve
12C2	null	inlet camshaft dephaser proportional solenoid valve
12C5	null	oil vapour recirculation circuit heater 1
1312	null	inlet air pressure sensor /
1313	null	engine speed sensor
1320	null	engine ECU /
1325	null	high pressure fuel sensor /
1331	null	no. 1 cylinder injector
1332	null	no. 2 cylinder injector
1333	null	no. 3 cylinder injector
1334	null	no. 4 cylinder injector
1356	null	braking circuit vacuum sensor /
13A3	null	inlet air pressure and temperature sensor
13B8	null	downstream ON/OFF oxygen sensor
13B9	null	upstream ON/OFF oxygen sensor
13C8	null	high pressure fuel regulator /
1522	null	dual-speed fan assembly control ECU
1550	null	turbocharger cooling coolant pump
1552	null	declutchable coolant pump
1559	null	oil pump electrovalve
2120	null	dual function brake switch /
4104	null	engine oil pressure sensor
4120	null	engine oil level sensor /
8007	null	pressure switch/refrigerant pressure sensor
AE00	null	electric steering lock
BB00	null	ancillaries battery
BS11	null	built-in systems interface
CA00	null	ignition switch
E013	null	crimp one information (or equipotential 0013) wire
E018	null	crimp one information (or equipotential 0018) wire
E132A	null	crimp one information (or equipotential 132A) wire
E132B	null	crimp one information (or equipotential 132) wire
E132D	null	crimp one information (or equipotential 132) wire
E132E	null	crimp one information (or equipotential 132) wire
E739	null	crimp one information (or equipotential 739) wire
E784	null	crimp one information (or equipotential 784) wire
E900A	null	crimp one information (or equipotential 276A) wire
E901A	null	crimp one information (or equipotential 901A) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918A	null	crimp one information (or equipotential 918A) wire
E953	null	crimp one information (or equipotential 953) wire
EM01	null	crimp earth (earth point number 01)
EM12	null	crimp earth (earth point number 12)
EM53	null	crimp earth (earth point number 53)
MC10	null	body earth point number 10
MC12	null	body earth point number 12
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
MM01A	null	engine earth point number 01A
PSF1	null	engine compartment connection board-fuse box

item code	description	information
1004	null	starter control interface unit
1014	null	network voltage maintaining device
1032	null	electrical supplies protection and management unit
1120	null	knock sensor /
1131	null	ignition coil for cylinder N°1
1132	null	ignition coil for cylinder N°2
1133	null	ignition coil for cylinder N°3
1134	null	ignition coil for cylinder N°4
1211	null	fuel pump - gauge assembly
1215	null	purge canister solenoid valve
1261	null	accelerator pedal position sensor /
1262	null	Motorised throttle housing
1295	null	turbocharger discharge electrovalve
12A6	null	coolant outlet housing
12B6	null	inlet camshaft position sensor
12C0	null	turbocharging pressure regulation regulated solenoid valve
12C2	null	inlet camshaft dephaser proportional solenoid valve
12C5	null	oil vapour recirculation circuit heater 1
1312	null	inlet air pressure sensor /
1313	null	engine speed sensor
1320	null	engine ECU /
1325	null	high pressure fuel sensor /
1331	null	no. 1 cylinder injector
1332	null	no. 2 cylinder injector
1333	null	no. 3 cylinder injector
1334	null	no. 4 cylinder injector
1356	null	braking circuit vacuum sensor /
13A3	null	inlet air pressure and temperature sensor
13B8	null	downstream ON/OFF oxygen sensor
13B9	null	upstream ON/OFF oxygen sensor
13C8	null	high pressure fuel regulator /
1522	null	dual-speed fan assembly control ECU
1550	null	turbocharger cooling coolant pump
1552	null	declutchable coolant pump
1559	null	oil pump electrovalve
2120	null	dual function brake switch /
4104	null	engine oil pressure sensor
4120	null	engine oil level sensor /
8007	null	pressure switch/refrigerant pressure sensor
AE00	null	electric steering lock
BB00	null	ancillaries battery
BS11	null	built-in systems interface
CA00	null	ignition switch
E013	null	crimp one information (or equipotential 0013) wire
E018	null	crimp one information (or equipotential 0018) wire
E132A	null	crimp one information (or equipotential 132A) wire
E132B	null	crimp one information (or equipotential 132) wire
E132D	null	crimp one information (or equipotential 132) wire
E132E	null	crimp one information (or equipotential 132) wire
E739	null	crimp one information (or equipotential 739) wire
E784	null	crimp one information (or equipotential 784) wire
E900A	null	crimp one information (or equipotential 276A) wire
E901A	null	crimp one information (or equipotential 901A) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918A	null	crimp one information (or equipotential 918A) wire
E953	null	crimp one information (or equipotential 953) wire
EM01	null	crimp earth (earth point number 01)
EM12	null	crimp earth (earth point number 12)
EM53	null	crimp earth (earth point number 53)
MC10	null	body earth point number 10
MC12	null	body earth point number 12
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
MM01A	null	engine earth point number 01A
PSF1	null	engine compartment connection board-fuse box

Fuel Pump & Gauge

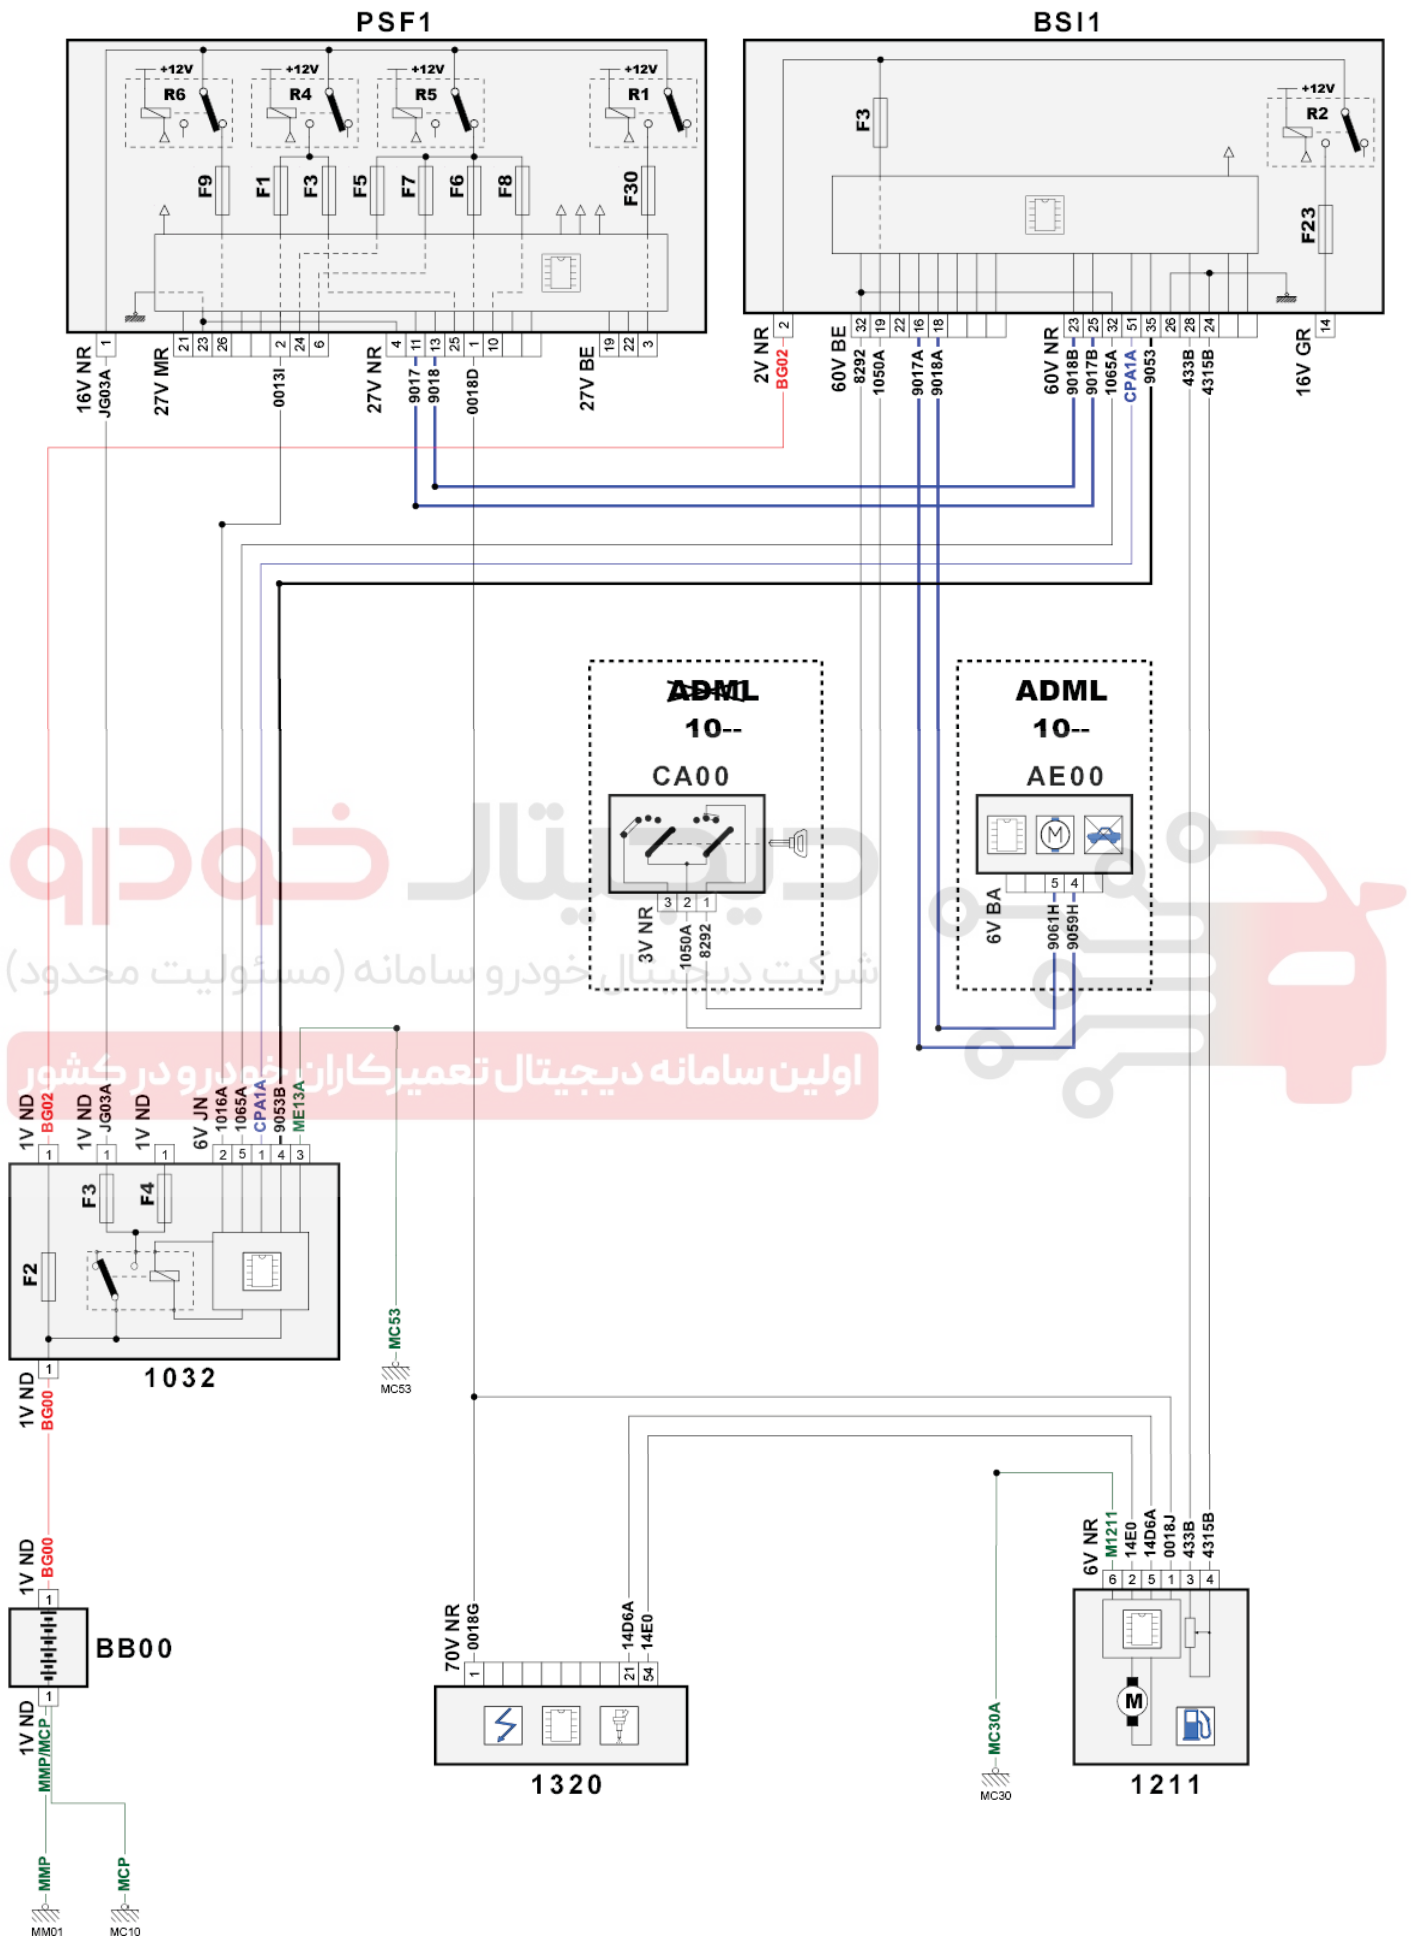

دیجیتال خودرو
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در کشور

