


电动后视镜&喇叭控制单元 Power rearview mirror&horn control unit

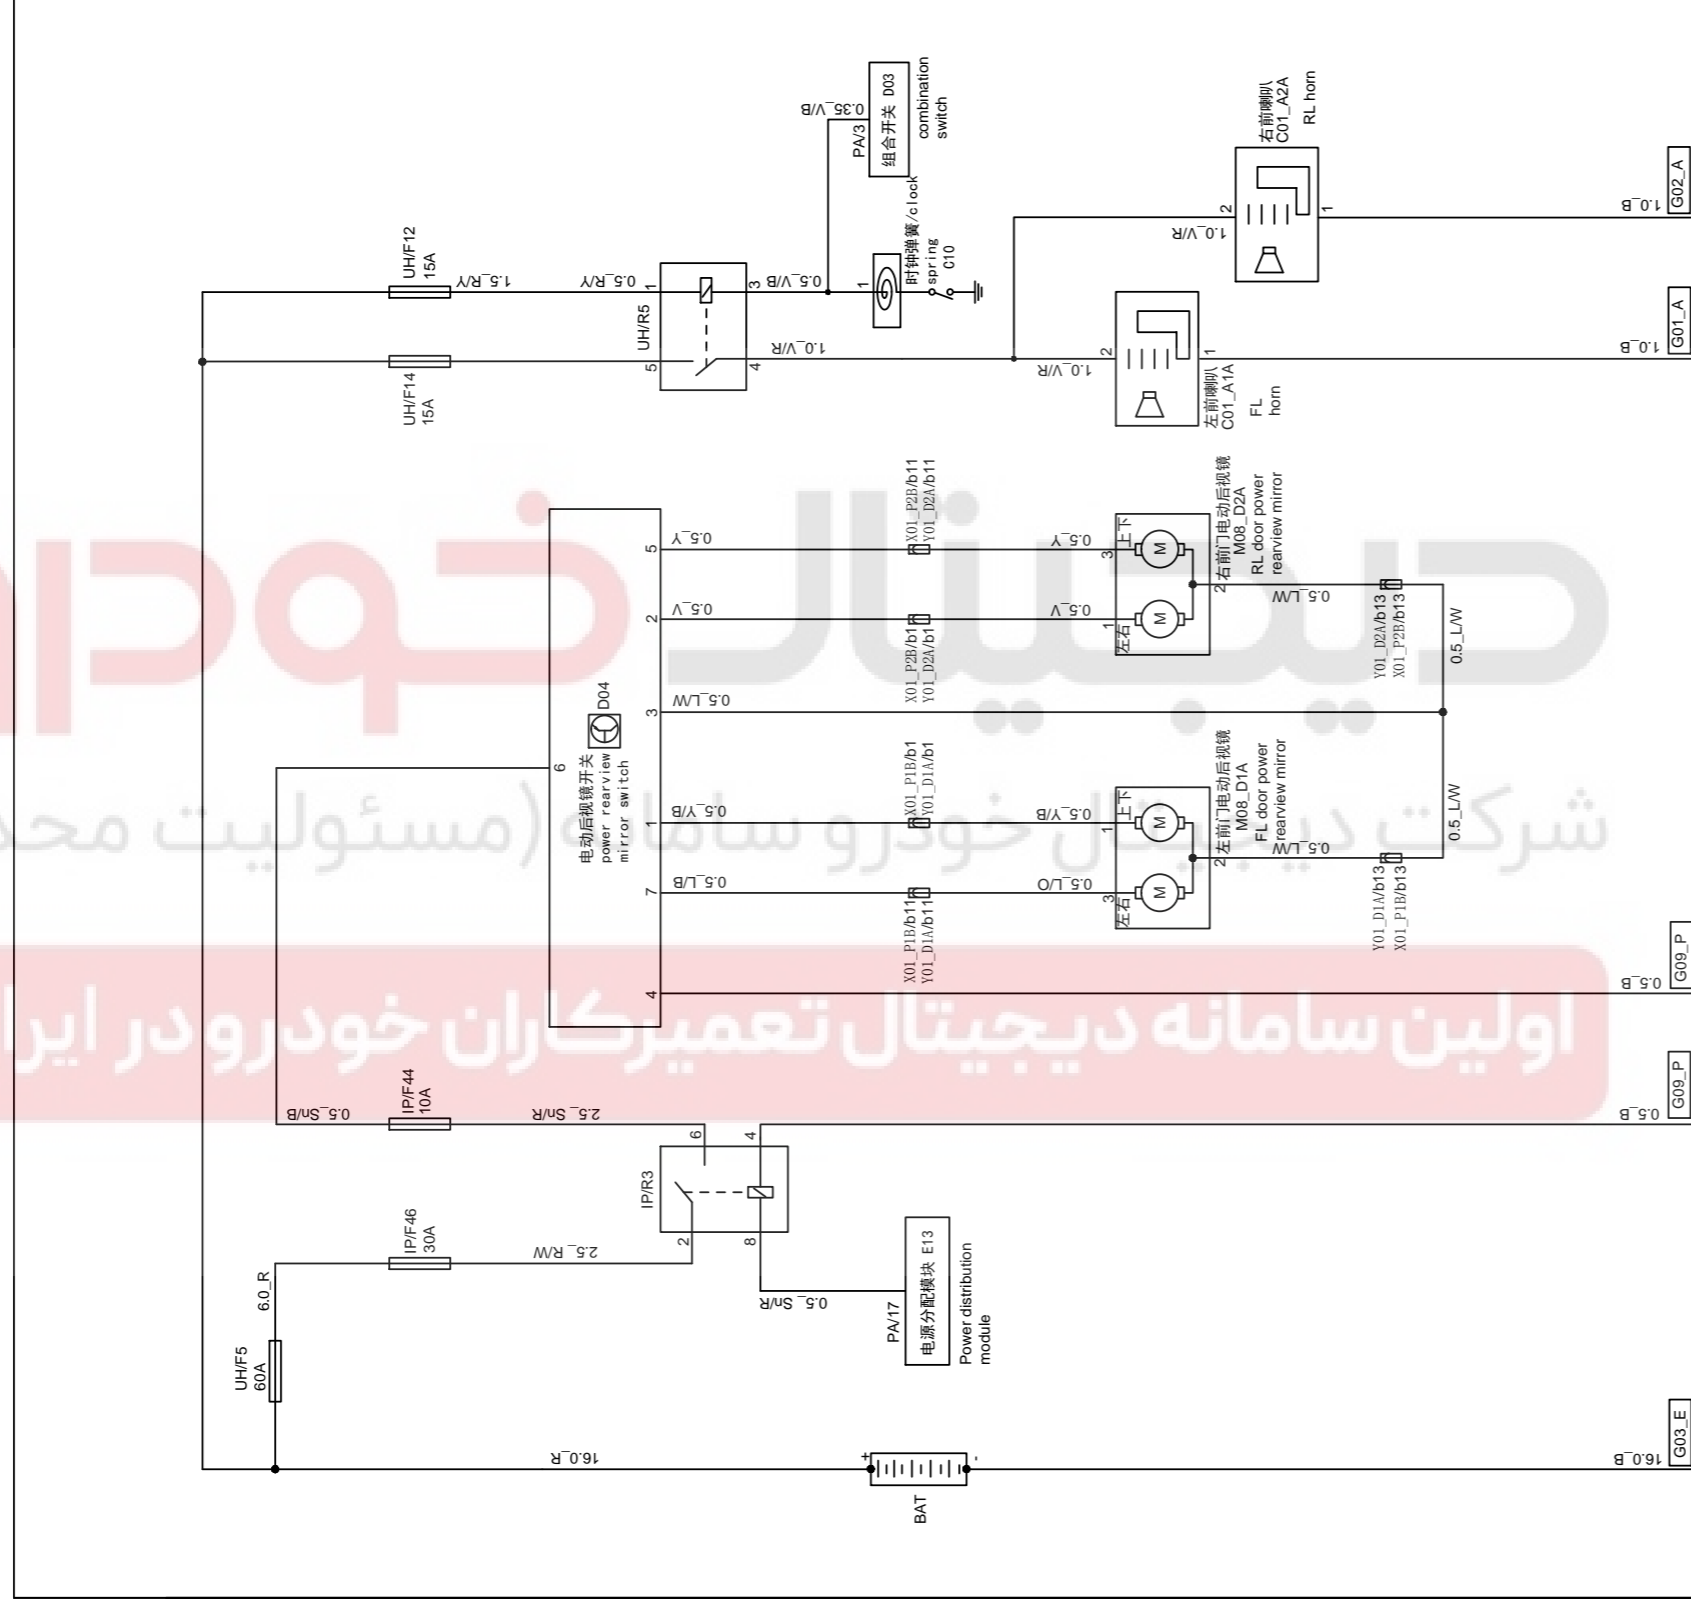

电动后视镜&喇叭控制单元

- | | | |
|-------------------|---------------|-----------------------|
| D04- 电动后视镜开关 | C01_A2A- 右前喇叭 | G01_A- 发动机舱左前搭铁点 |
| M08_D1A- 左前门电动后视镜 | E13- 电源分配模块 | G02_A- 发动机舱右前搭铁点 |
| M08_D2A- 右前门电动后视镜 | D03- 组合开关 | G03_E- 蓄电池负极到车身搭铁点 |
| C01_A1A- 左前喇叭 | C10- 时钟弹簧 | G09_P- 主线束左侧A 立柱下搭铁点2 |
-
- | | | |
|---|--|--|
| Power rearview mirror&horn control unit | | |
| D04- power rearview mirror switch | G01_A- The engine compartment FL ground point | |
| M08_D1A- FL door power rearview mirror | G02_A- The engine compartment RL ground point | |
| M08_D2A- RL door power rearview mirror | G03_E- The negative terminal of the battery to the body ground point | |
| C01_A1A- FL horn | G09_P- The main wire harness L A pillar under ground point 2 | |