


手动空调控制单元、鼓风机、后除霜电路图  
Manual A/C control unit, blower, rear defogger circuit diagram

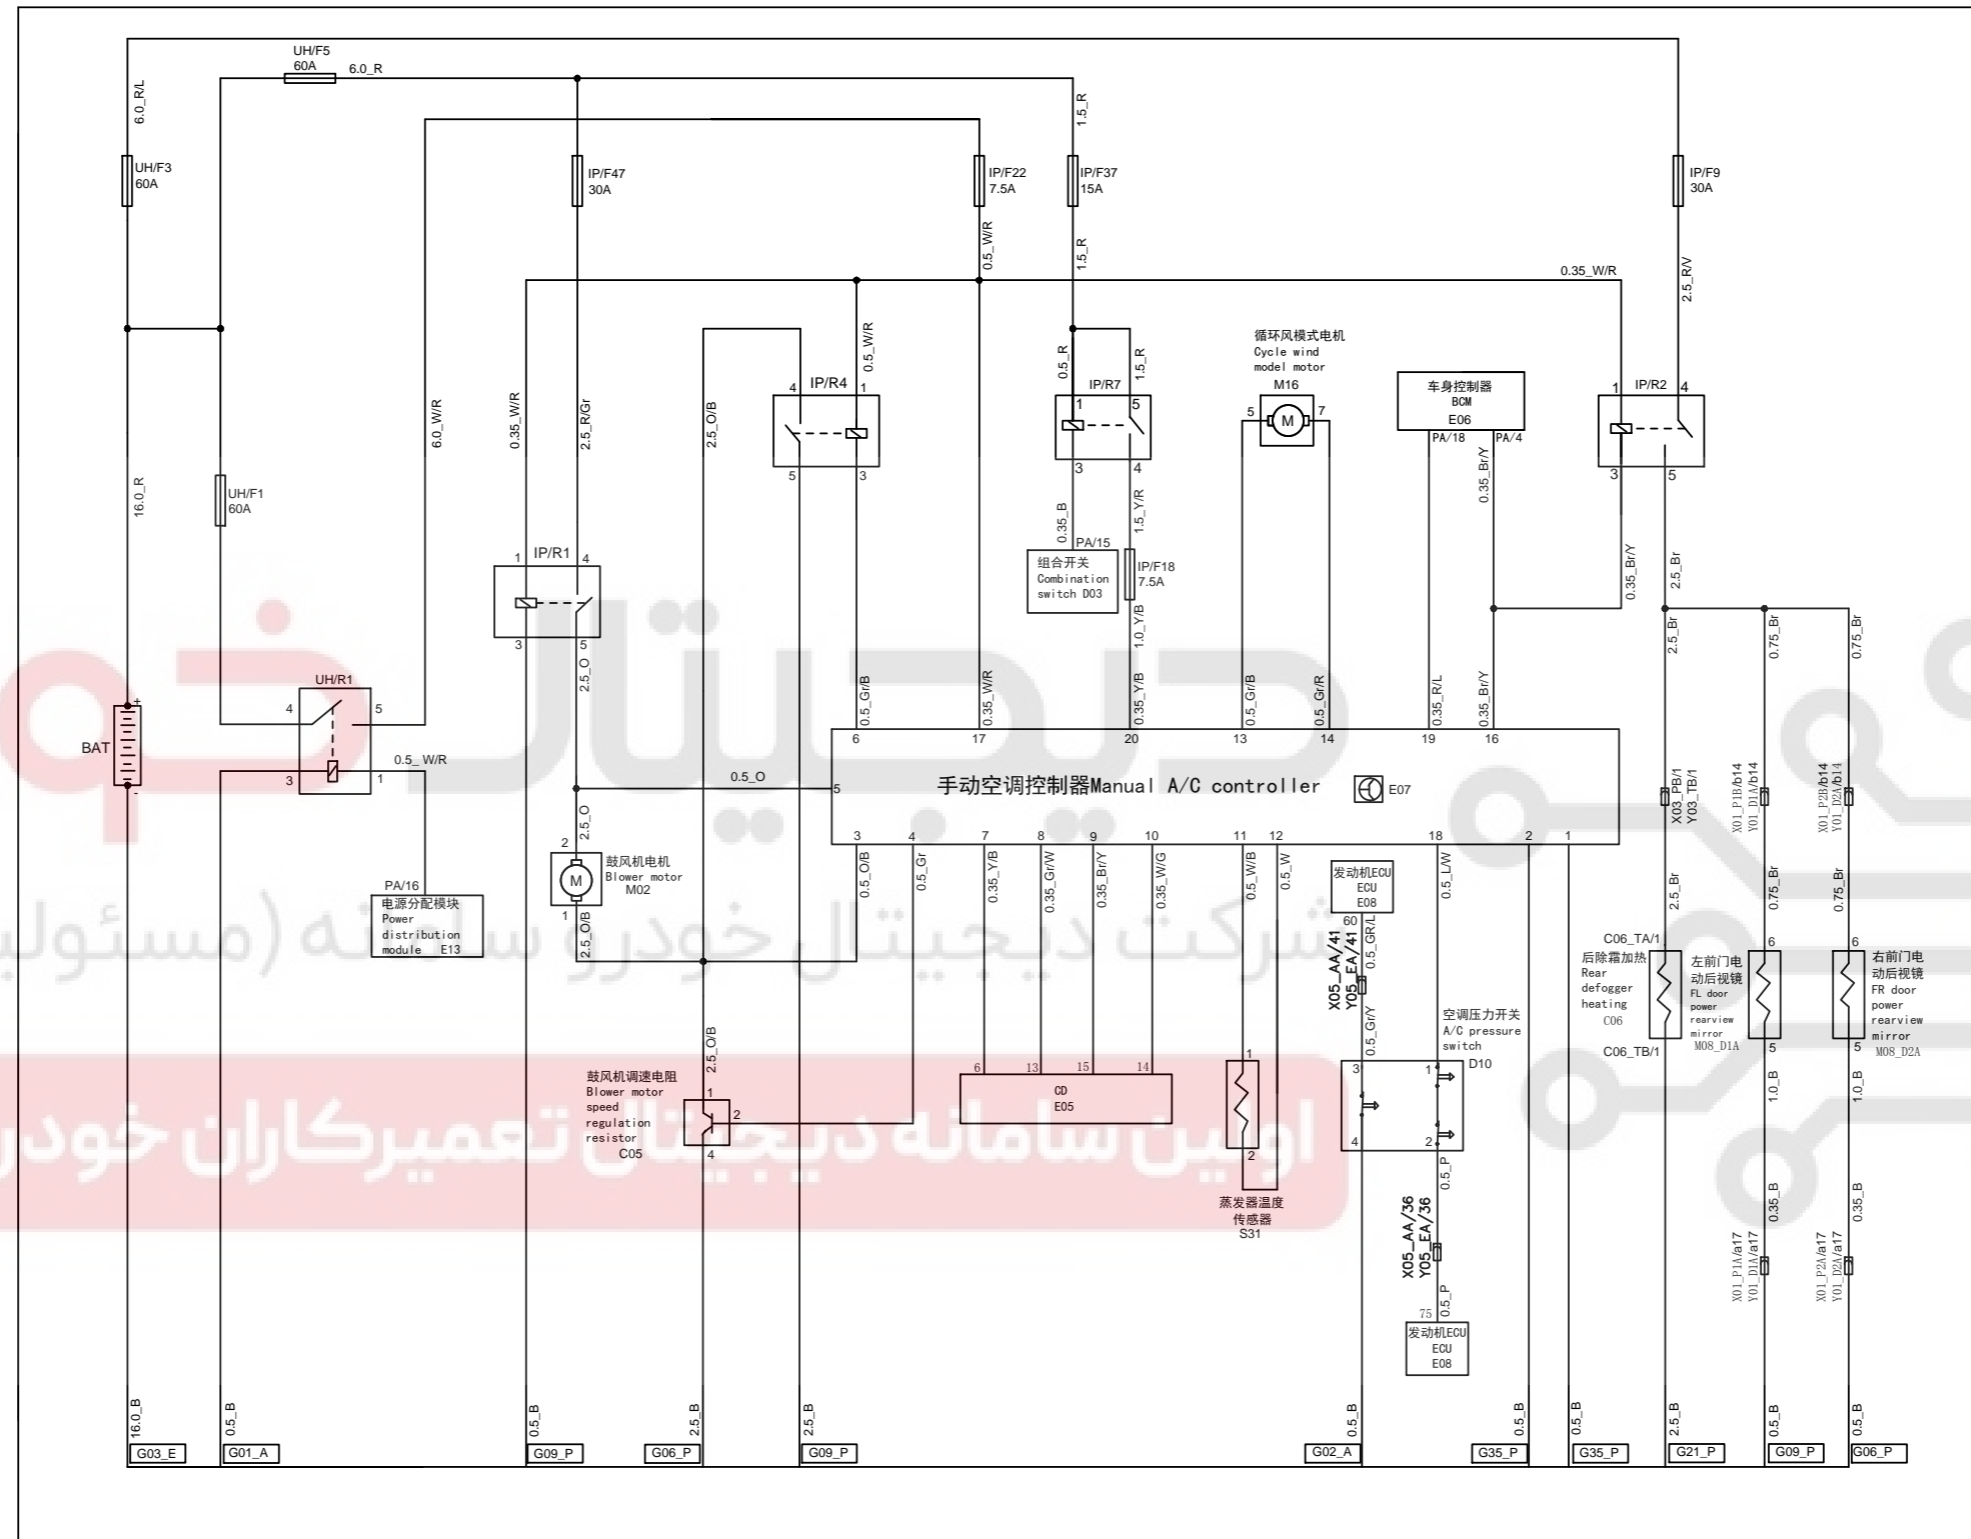

手动空调控制单元、鼓风机、后除霜电路图

Manual A/C control unit, blower, rear defogger circuit diagram

- E07-手动空调控制单元
- D10-空调压力开关
- M02-鼓风机电机
- M16-循环风模式电机
- C06-后除霜加热
- S31-蒸发器温度传感器
- C05-鼓风机调速电阻
- E13-电源分配模块
- D03-组合开关
- E08-发动机ECU
- E06-车身控制器
- E05-CD
- M08\_D1A-左前门电动后视镜
- M08\_D2A-右前门电动后视镜
- G01\_A-发动机舱左前搭铁点
- G02\_A-发动机舱右前搭铁点
- G03\_E-蓄电池负极到车身搭铁点
- G06\_P-主线束右侧A立柱下搭铁点
- G09\_P-主线束左侧A立柱下搭铁点2
- G21\_P-主线束与尾门线对接处搭铁点
- G35\_P-中控台处搭铁点

- E07-manual A/C controller
- D10-A/C pressure switch
- M02-Blower motor
- M16-cycle wind mode motor
- C06-rear defogger heating
- S31-evaporator temperature sensor
- C05-Blower motor speed regulation resistor
- E13-Power distribution module
- D03-combination switch
- E08-engine ECU
- E06-vehicle body controller
- M08\_D1A-FL door power rearview mirror
- M08\_D2A-FR door power rearview mirror
- G01\_A-The engine compartment left front ground point
- G02\_A-The engine compartment right front ground point
- G03\_E-The negative terminal of the battery to the body ground point
- G06\_P-Main wire harness R side A pillar under ground point
- G09\_P-Main wire harness L side A pillar under ground point2
- G21\_P-main wire harness and tail door wire joint ground point
- G35\_P-central control desk ground point