



ABS system circuit diagram

UHC-engine compartment fuse box

IP-dashboard fuse box

E01-ABS ECU connector 38 holes black

S32\_A1A-left front wheel speed sensor

S32\_A2A-right front wheel speed sensor

S32\_P1A-left rear wheel speed sensor

S32\_P2A-right rear wheel speed sensor

X06\_AA Y06\_PA-dashboard splicing to engine compartment connector 20 holes blue

X06\_AB Y06\_PB-dashboard splicing to engine compartment connector 20 holes white

G07\_A-ground point 1 on the right shock absorber