


# Dipped & Main Beam Head Lamp

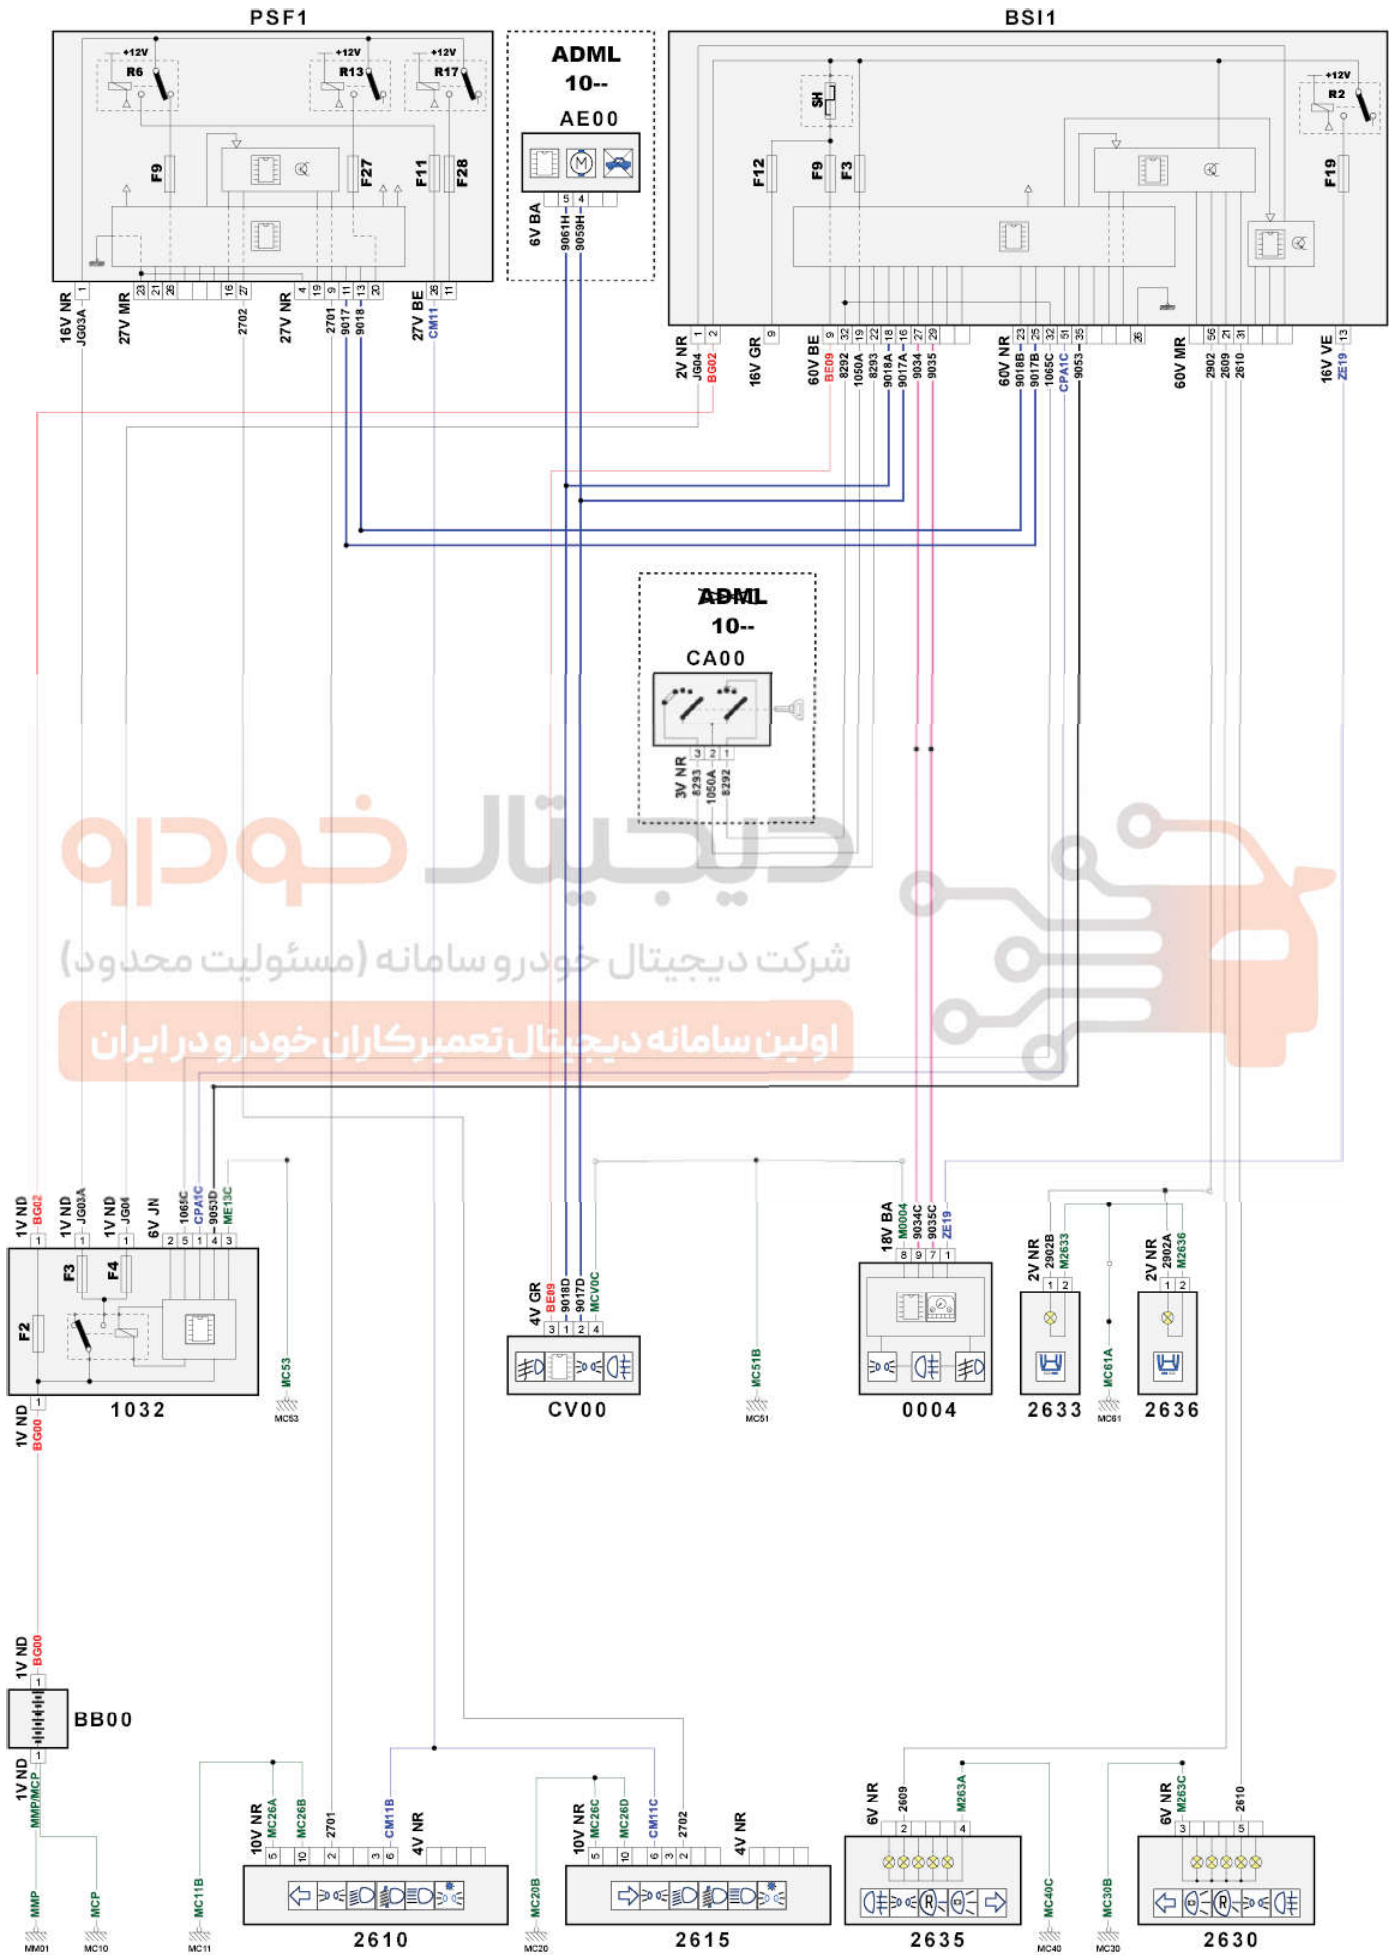

## Dipped & Main Beam Head Lamp

item code	description	information
0004	null	/ instrument panel
1032	null	electrical supplies protection and management unit
2610	null	left-hand headlamp
2615	null	right-hand headlamp
2630	null	rear left lamp on body
2633	null	right-hand number plate lamp
2635	null	rear right lamp on body
2636	null	left-hand number plate lamp
AE00	null	electric steering lock
BB00	null	ancillaries battery
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E290	null	crimp one information (or equipotential 290) wire
E917	null	crimp one information (or equipotential 917) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918	null	crimp one information (or equipotential 918) wire
E918A	null	crimp one information (or equipotential 918A) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E953	null	crimp one information (or equipotential 953) wire
EC11A	null	splice of an "ignition +" protected by fuse no. 11A
EM11B	null	crimp earth (earth point number 11B)
EM20B	null	crimp earth (earth point number 20B)
EM29	null	crimp earth (earth point number 29)
EM30A	null	crimp earth (earth point number 30A)
EM40C	null	crimp earth (earth point number 40C)
EM51B	null	crimp earth (earth point number 51B)
EM53	null	crimp earth (earth point number 53)
EM61B	null	crimp earth (earth point number 61B)
MC10	null	body earth point number 10
MC11B	null	body earth point number 11B
MC20B	null	body earth point number 20
MC30B	null	body earth point number 30B
MC40C	null	body earth point 40C
MC51B	null	body earth point number 51
MC53B	null	body earth point number 53B
MC61B	null	body earth point number 61B
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box