



Battery, ignition lock power distribution circuit diagram

UHC-engine compartment fuse box
 UHB(BAT)-connection, engine compartment fuse box connecting to positive pole of battery
 IP-dashboard fuse box terminal
 AT-battery
 X06-AD Y06-PD connector of main cable and engine compartment cable, 20-hole, blue
 X06-AC Y06-PC connector of main cable and engine compartment cable, 10-hole, black

D02_PA-ignition lock connector
 G05_A-negative pole of battery to ground point of vehicle body
 G01_P-ground point on pillar-A at the left of main wiring harness
 G13_P-ground point on pillar-A at the left of main wiring harness