


Windshield/Window Glass

Circuit Diagram (Page 1 of 6)

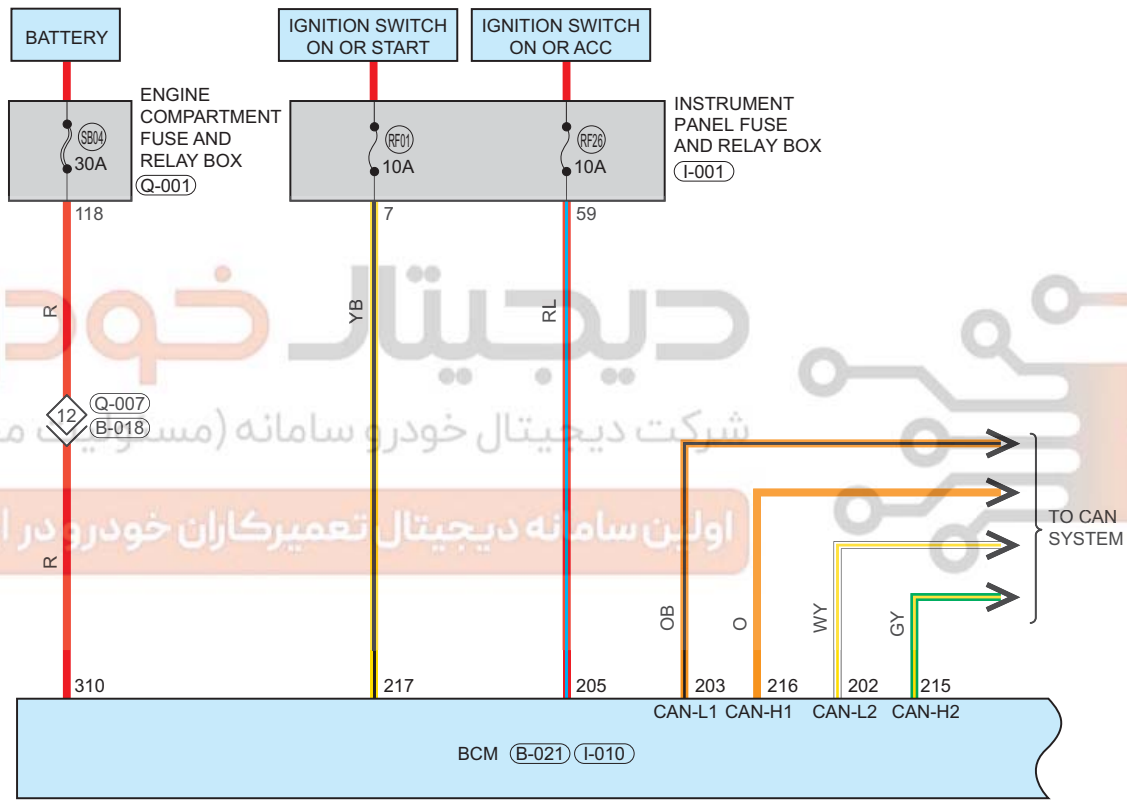

دیجیتال خودرو
 شرکت دیجیتال خودرو سامانه (مستویات محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| Q-001 | 08-10 | I-001 | 08-23 | B-021 | 08-36 |
| I-010 | 08-23 | | | | |

Fuse and Relay

| Fuse/Relay | See Page | Fuse and Relay Box |
|------------|----------|-------------------------------------|
| RF01 | 06-8 | Instrument Panel Fuse and Relay Box |
| RF26 | 06-8 | Instrument Panel Fuse and Relay Box |


Location of Junction Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|--------------|----------------|----------|----------------|----------|
| Q-007, B-018 | 08-10, 08-36 | | | | |

Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|-------------|----------------|----------|
| Q-001 | 12-17 | I-001 | 12-4 | B-021 | 12-8 |
| I-010 | 12-4 | Q-007, B-018 | 12-17, 12-8 | | |

Circuit Diagram (Page 2 of 6)

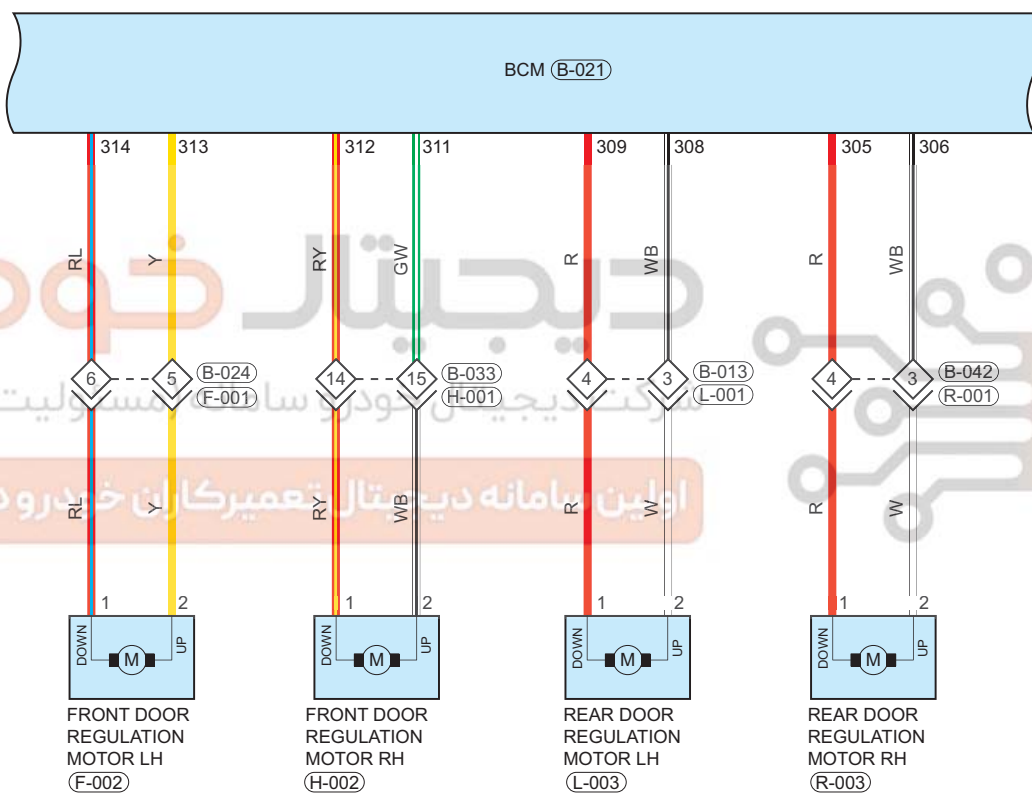

09

WSE002001

Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| B-021 | 08-36 | F-002 | 08-56 | H-002 | 08-57 |
| L-003 | 08-58 | | | | |

Location of Junction Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|--------------|----------------|--------------|----------------|--------------|
| B-024, F-001 | 08-36, 08-56 | B-033, H-001 | 08-36, 08-57 | B-013, L-001 | 08-36, 08-58 |
| B-042, R-001 | 08-36, 08-59 | | | | |


Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|-------------|----------------|-------------|----------------|-------------|
| B-021 | 12-8 | F-002 | 12-14 | H-002 | 12-14 |
| L-003 | 12-15 | B-024, F-001 | 12-8, 12-14 | B-033, H-001 | 12-8, 12-14 |
| B-013, L-001 | 12-8, 12-15 | B-042, R-001 | 12-8, 12-15 | | |


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

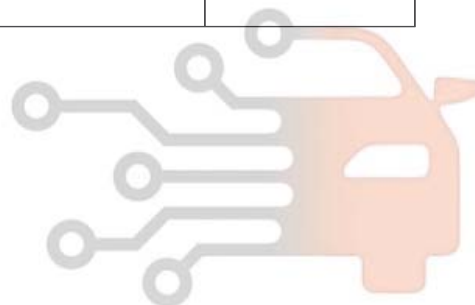

Circuit Diagram (Page 3 of 6)

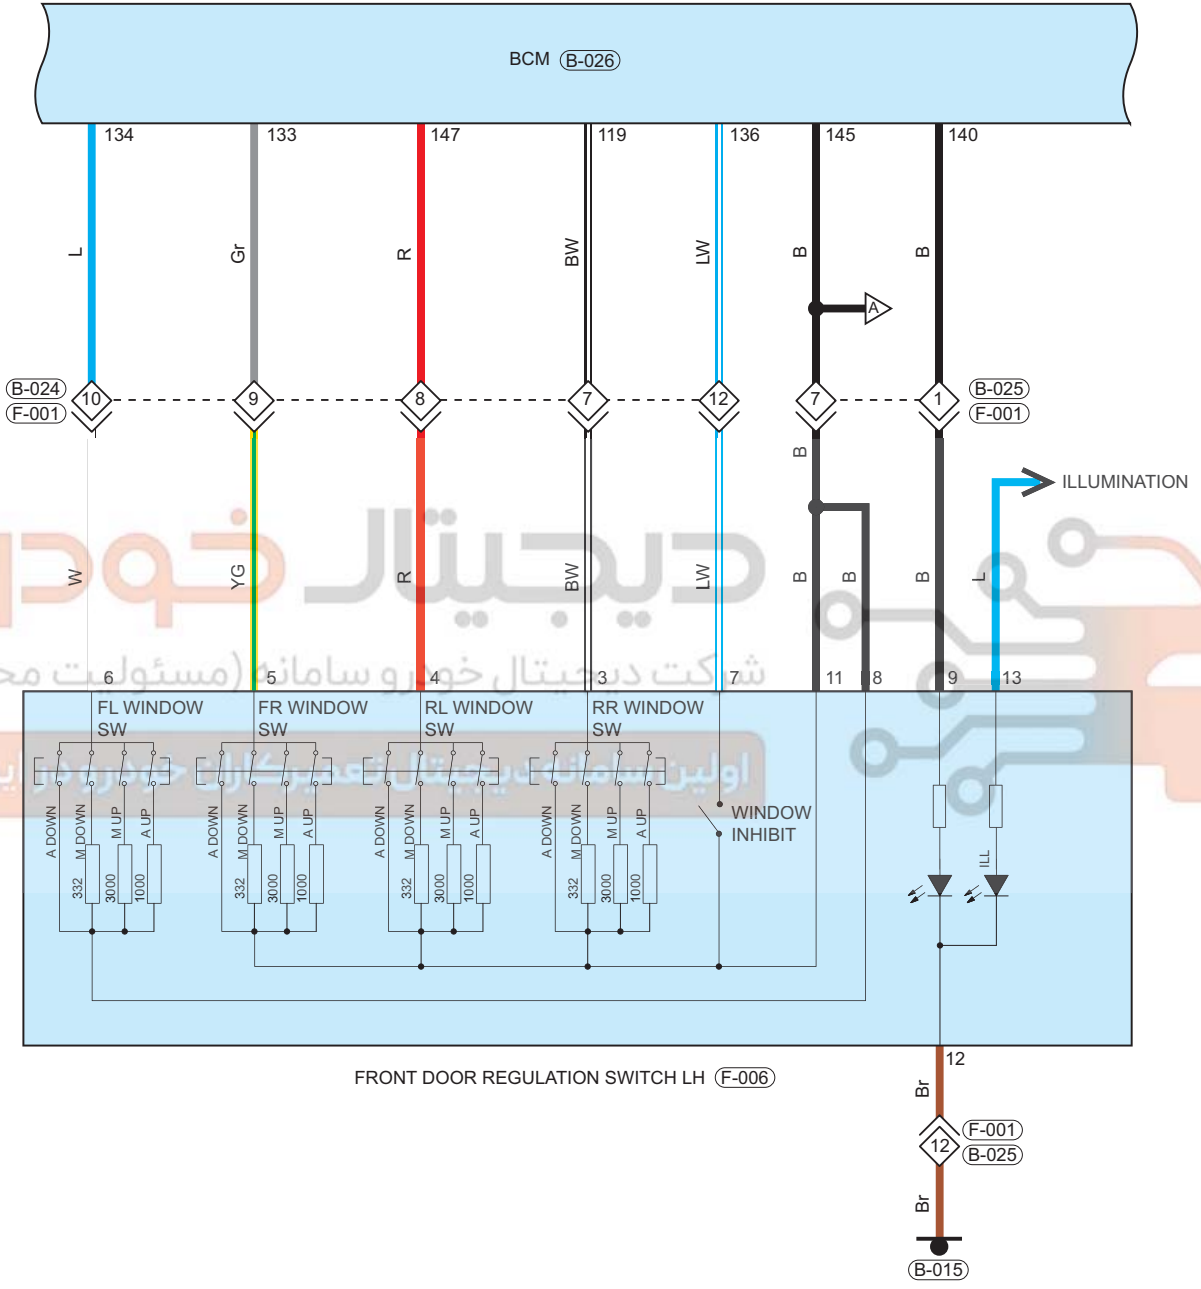

09

WSE003001

Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| B-026 | 08-36 | F-006 | 08-56 | B-015 | 08-36 |

Location of Junction Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|--------------|----------------|--------------|
| B-024, F-001 | 08-36 | B-025, F-001 | 08-36, 08-56 | F-001, B-025 | 08-56, 08-36 |

Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|-------------|----------------|-------------|----------------|-------------|
| B-026 | 12-8 | F-006 | 12-14 | B-015 | 12-8 |
| B-024, F-001 | 12-8, 12-14 | B-025, F-001 | 12-8, 12-14 | F-001, B-025 | 12-14, 12-8 |


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 4 of 6)

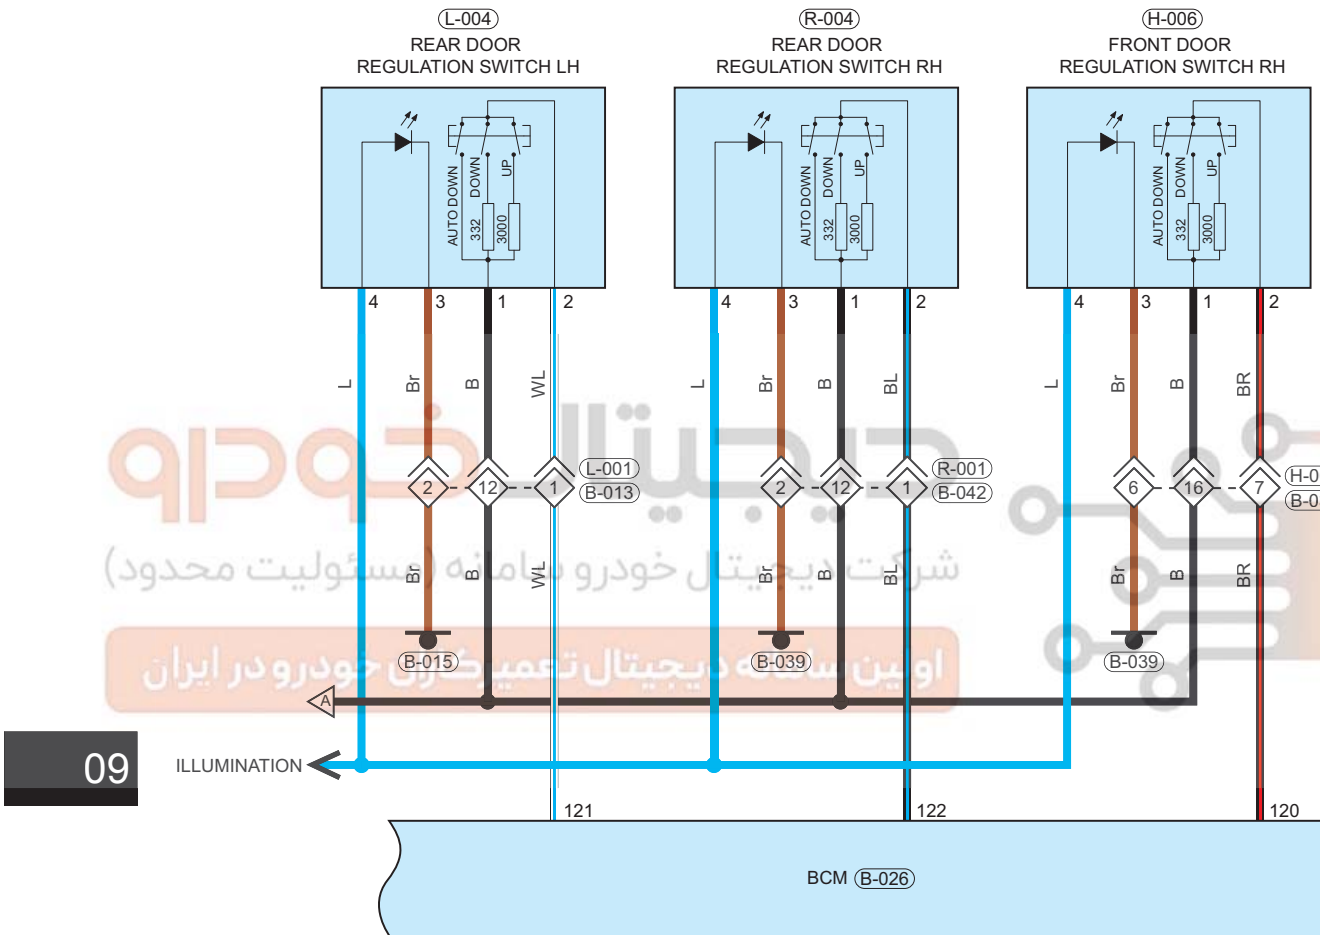

WSE004001

Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| L-004 | 08-58 | R-004 | 08-59 | H-006 | 08-57 |
| B-015 | 08-36 | B-039 | 08-36 | B-026 | 08-36 |

Location of Junction Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|--------------|----------------|--------------|----------------|--------------|
| L-001, B-013 | 08-58, 08-36 | R-001, B-042 | 08-59, 08-36 | H-001, B-033 | 08-57, 08-36 |

Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|-------------|----------------|-------------|
| L-004 | 12-15 | R-004 | 12-15 | H-006 | 12-14 |
| B-015 | 12-8 | B-039 | 12-8 | B-026 | 12-8 |
| L-001, B-013 | 12-15 | R-001, B-042 | 12-15, 12-8 | H-001, B-033 | 12-14, 12-8 |


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 5 of 6)

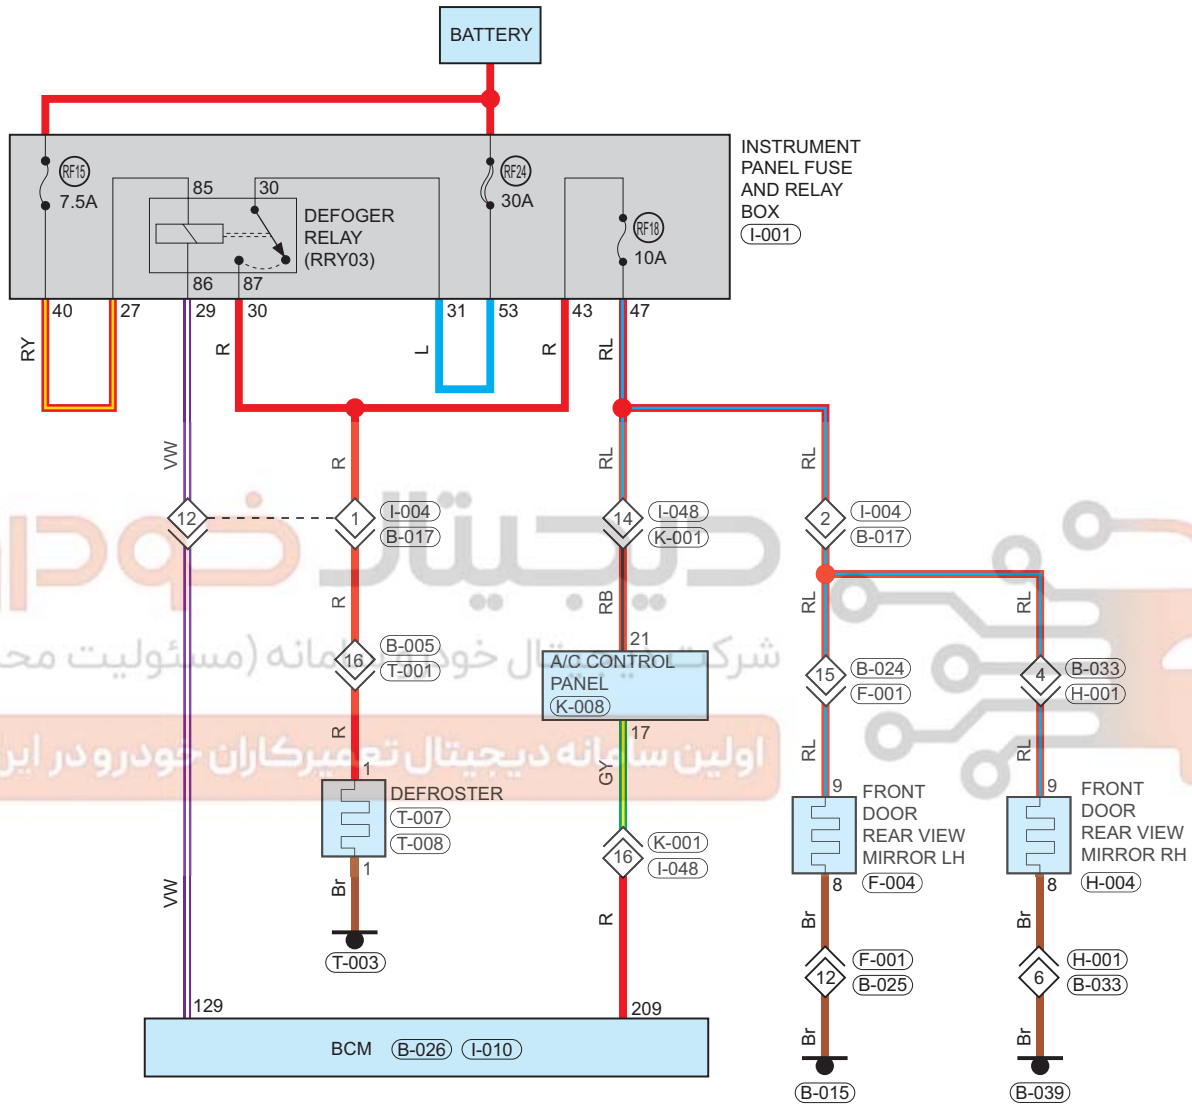

09

WSE005001

Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| I-001 | 08-23 | T-003 | 08-60 | B-026 | 08-36 |
| I-010 | 08-23 | F-004 | 08-56 | H-004 | 08-57 |
| B-015 | 08-36 | B-039 | 08-36 | | |

Fuse and Relay

| Fuse/Relay | See Page | Fuse and Relay Box |
|------------------------|----------|-------------------------------------|
| RF15 | 06-8 | Instrument Panel Fuse and Relay Box |
| RF24 | 06-8 | Instrument Panel Fuse and Relay Box |
| RF18 | 06-8 | Instrument Panel Fuse and Relay Box |
| Defogger Relay (RRY03) | 06-8 | Instrument Panel Fuse and Relay Box |


Location of Junction Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|--------------|----------------|--------------|----------------|--------------|
| I-004, B-017 | 08-23 | B-005, T-001 | 08-36, 08-60 | I-048, K-011 | 08-23, 08-62 |
| B-024, F-001 | 08-36, 08-56 | F-001, B-025 | 08-56, 08-36 | B-033, H-001 | 08-36, 08-57 |

Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|-------------|----------------|-------------|----------------|-------------|
| I-001 | 12-4 | T-003 | 12-16 | B-026 | 12-8 |
| I-010 | 12-4 | F-004 | 12-14 | H-004 | 12-14 |
| B-015 | 12-8 | B-039 | 12-8 | I-004, B-017 | 12-4, 12-8 |
| B-005, T-001 | 12-8, 12-16 | I-048, K-011 | 12-4, 12-13 | B-024, F-001 | 12-8, 12-14 |
| F-001, B-025 | 12-14, 12-8 | B-033, H-001 | 12-8, 12-14 | | |

Circuit Diagram (Page 6 of 6)

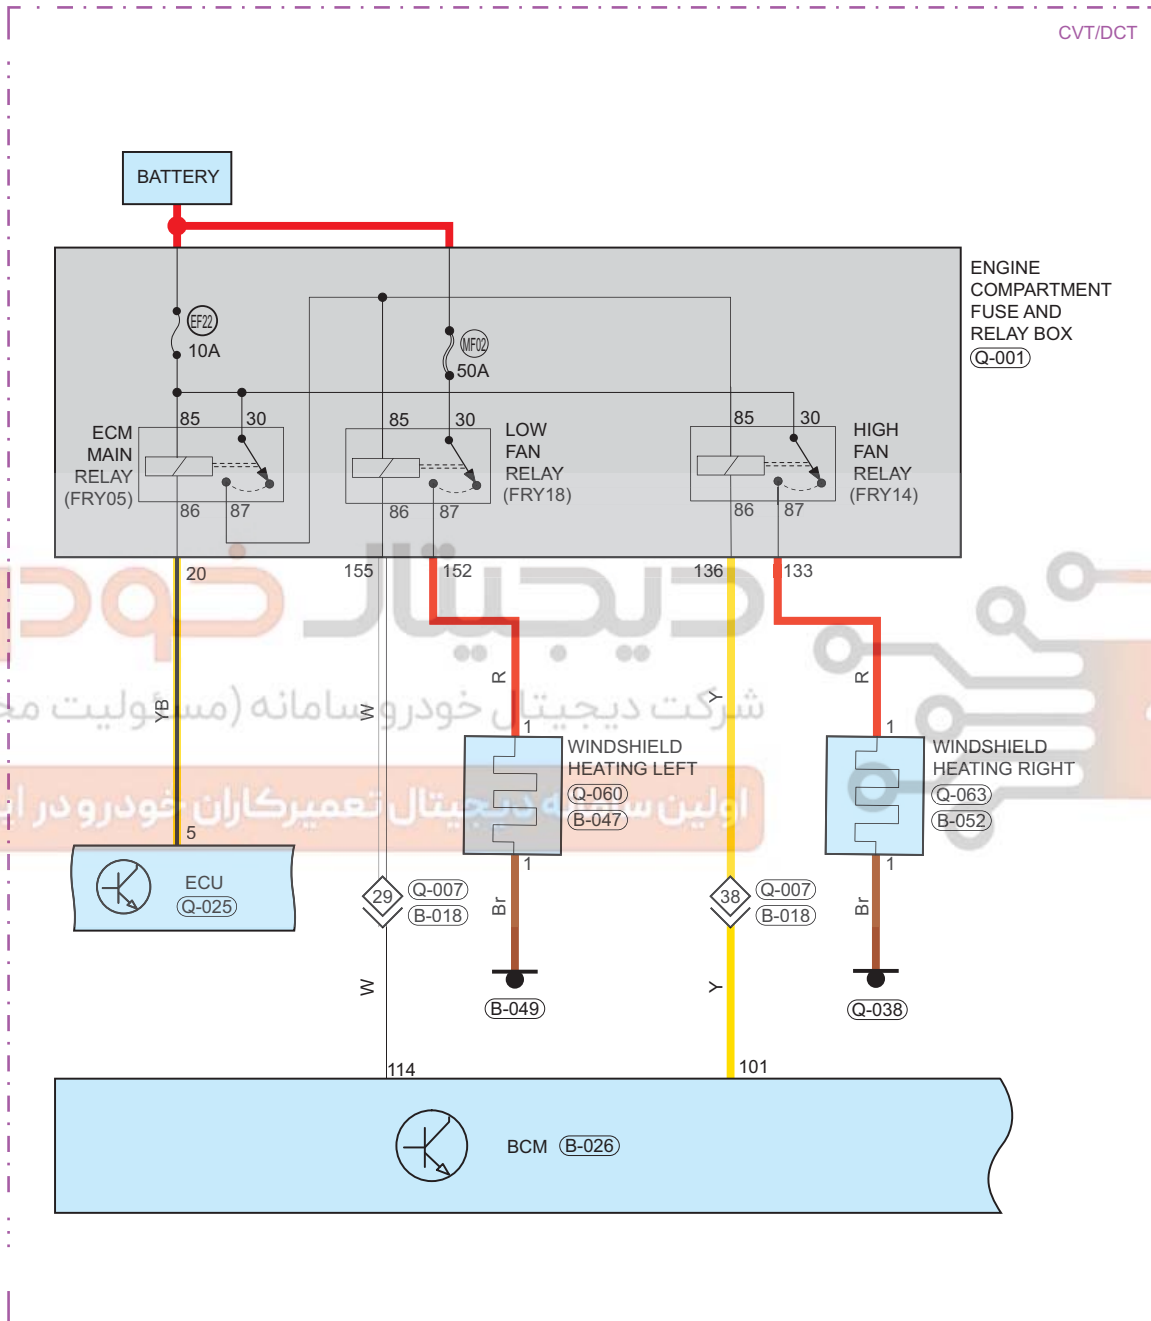

09

WSE006001