


1.4, Meter Fuse and Relay Box Layout, Fuse Function Description

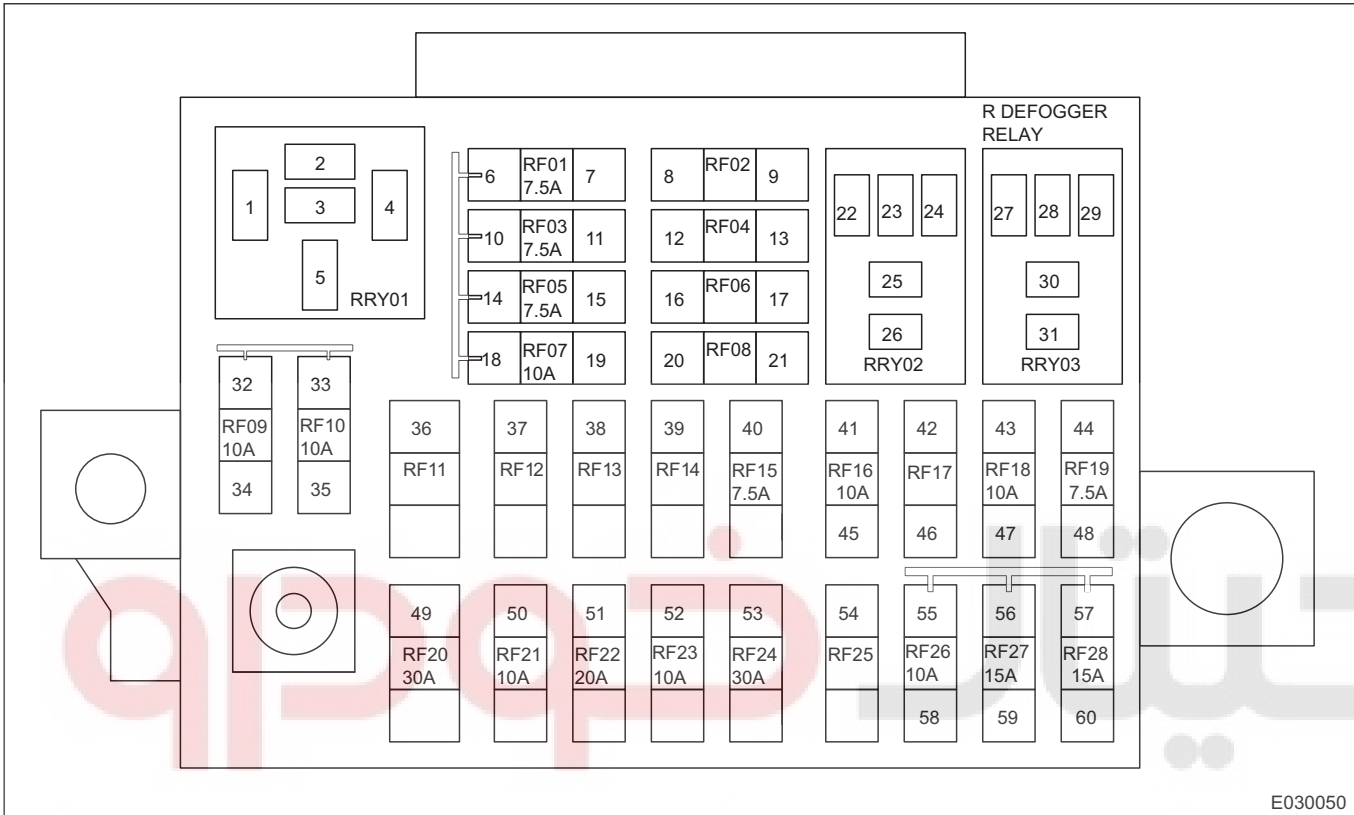

No.	Fuse Name	Fuse Load (A)	Function
1	RF01	7.5A	BCM 2-17#/ Instrument Cluster 13#
2	RF02	-	-
3	RF03	7.5A	Electronic Power Steering EPS B1#/ Angle Sensor 3#
4	RF04	-	-
5	RF05	7.5A	Airbag Control Module 5#
6	RF06	-	-
7	RF07	10A	TBOX Module 1#/ Audio C2#/Automatic Shift Control Mechanism 11#/ Headlight Adjusting Switch 6#/ Air Conditioning Control Panel 31#/ Inner/Outer Circulation Motor 2#/ Right Mix Damper Motor 2#/ Mode Damper Motor 2#/ ESP Integrated Switch 8#
8	RF08	-	-
9	RF09	10A	TBOX Module 20#/ Audio B7#/ A/C Control Panel 5#
10	RF10	10A	Instrument Cluster 11#

No.	Fuse Name	Fuse Load (A)	Function
11	RF11	-	-
12	RF12	-	-
13	RF13	-	-
14	RF14	-	-
15	RF15	7.5A	Rear Defroster Relay/Keyhole Lighting 1#/EPB Switch 12#/Volume Knob Switch 4#/Auxiliary Fascia Console Switch 2#/Panoramic View Monitor Module 20#/Diagnostic Interface 16#
16	RF16	10A	USB Charging Module 2#
17	RF17	-	-
18	RF18	10A	Rear Defroster Power Source / Front Left Door Rear View Mirror 9#/ Front Right Door Rear View Mirror 9#/ A/C Control Panel 21#
19	RF19	7.5A	PEPS Module J1-11#
20	RF20	30A	Seat Adjustment 1#
21	RF21	10A	Ignition switch 2#
22	RF22	20A	Ignition switch 4#
23	RF23	-	-
24	RF24	30A	Rear Defroster Relay
25	RF25	-	-
26	RF26	10A	BCM 2-05#/ Audio B5#/Gesture Recognition 1#/ Front Dome Light 8#/ Power Rear View Mirror Switch 7#
27	RF27	15A	Cigarette Lighter 2#
28	RF28	15A	Backup Power Source 1#

1.5, Meter Fuse and Relay Box Internal Diagram

