



## Heated Seats

item code	description	information
1032	null	electrical supplies protection and management unit
8327	null	driver's seat cushion heated pad
8328	null	driver 's seat backrest heating element
8329	null	passenger's seat cushion heated pad
8330	null	passenger 's seat backrest heating element
8331	null	driver 's heated seat control unit
8332	null	passenger 's heated seat control unit
8346	null	front right heated seat switch
8347	null	front LH heated seat switch
AE00	null	electric steering lock
BB00	null	ancillaries battery
BFH3	null	cabin relay fusebox 1
BSI1	null	built-in systems interface
CA00	null	ignition switch
E637A	null	crimp one information (or equipotential 637A) wire
E917	null	crimp one information (or equipotential 917) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918	null	crimp one information (or equipotential 918) wire
E918A	null	crimp one information (or equipotential 918A) wire
E953	null	crimp one information (or equipotential 953) wire
EB07A	null	splice of a "battery +" protected by fuse no. 07A
EM30A	null	crimp earth (earth point number 30A)
EM40C	null	crimp earth (earth point number 40C)
EM51A	null	crimp earth (earth point number 51A)
EM53	null	crimp earth (earth point number 53)
EV01	null	splice of a "side lamp +" protected by fuse number 01
MC10	null	body earth point number 10
MC30B	null	body earth point number 30B
MC40C	null	body earth point 40C
MC51A	null	body earth point number 51
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box