


brake lamps

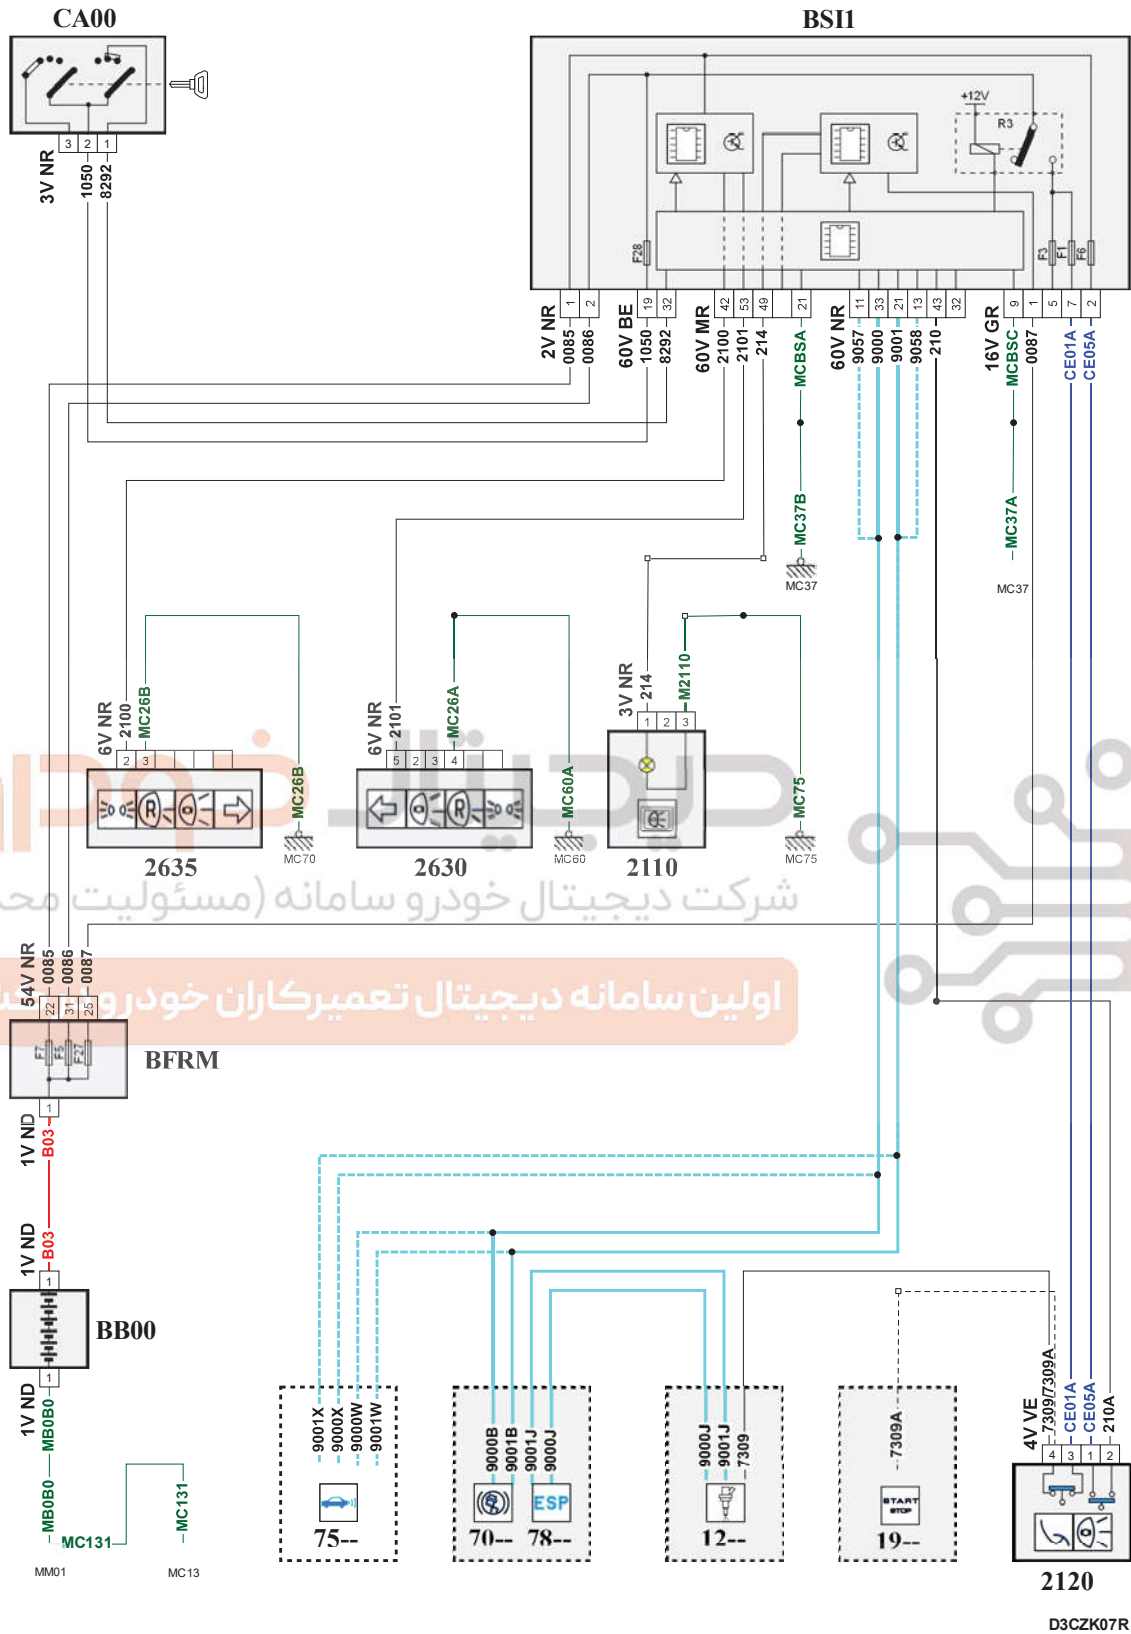

brake lamps

item code	description	information
1021	null	reversible alternator
1320	null	engine management ECU /
2110	null	additional brake lamp
2120	null	dual function brake switch /
2630	null	rear left lamp on body
2635	null	rear right lamp on body
7500	null	Parking assistance ECU
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E210	null	crimp one information (or equipotential 210) wire
E900C	null	crimp one information (or equipotential 900C) wire
E900G	null	crimp one information (or equipotential 900G) wire
E901C	null	crimp one information (or equipotential 901C) wire
E901G	null	crimp one information (or equipotential 901) wire
EM37A	null	crimp earth (earth point number 37A)
EM37C	null	crimp earth (earth point number 37C)
EM60	null	crimp earth (earth point number 60)
EM75A	null	crimp earth (earth point number 75A)
MC13	null	body earth point number 13
MC37A	null	body earth point number 37A
MC37B	null	body earth point number 37B
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MC75A	null	body earth point number 75
MM01	null	engine earth point number 01