


Cruise Control System

Circuit Diagram (Page 1 of 2)

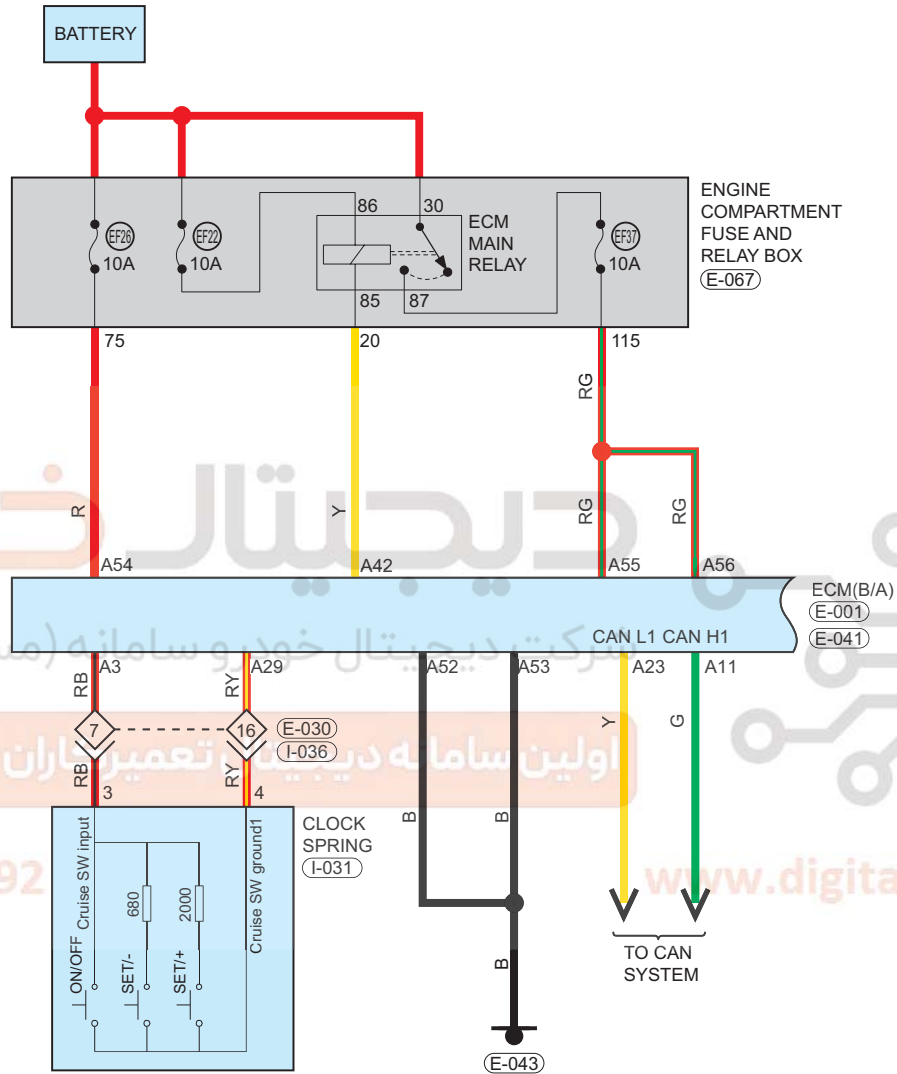

02 09

EA13T090400

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	E-001	08-3	E-041	08-5 (MT) 08-7 (AT)
I-031	08-10	E-043	08-5 (MT) 08-7 (AT)		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF22	06-2	Engine Compartment Fuse and Relay Box
EF26	06-2	Engine Compartment Fuse and Relay Box
EF37	06-2	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-030, I-036	08-5, 08-10 (MT) 08-7, 08-10 (AT)				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-001	12-2	E-041	12-4
I-031	12-8	E-043	12-4	E-030, I-036	12-3

Circuit Diagram (Page 2 of 2)

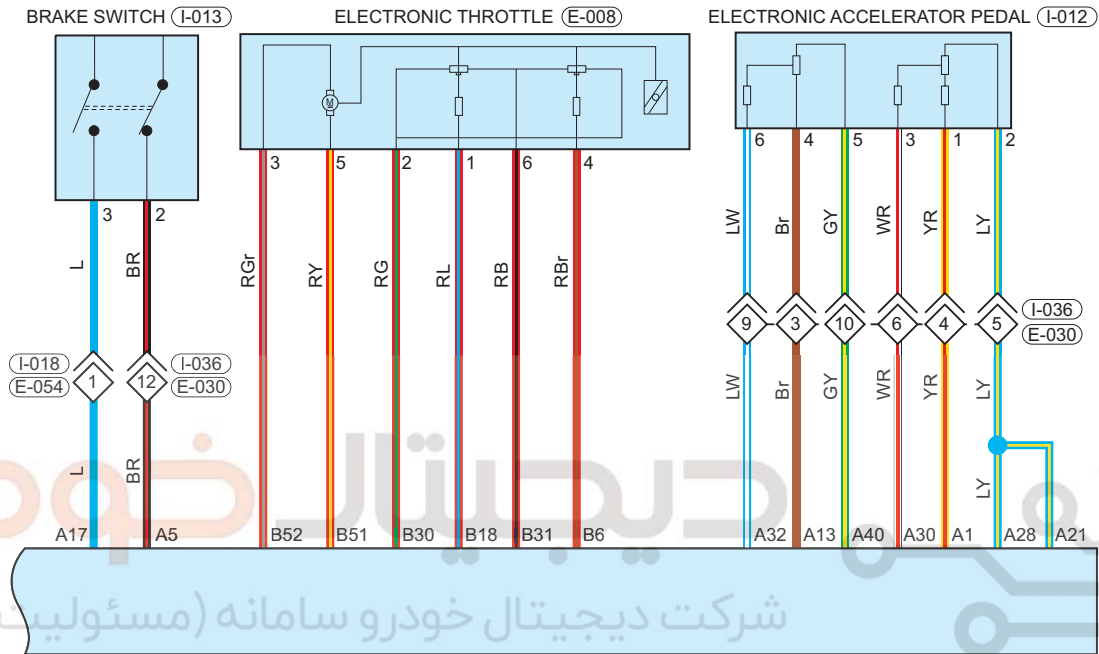

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

02 09 52 99 92 92

www.digitalkhodro.com