


< COMPONENT DIAGNOSIS >

# INTERIOR ROOM LAMP CONTROL SYSTEM

## Wiring Diagram - INTERIOR ROOM LAMP (For Australia) -


INFOID:000000004897854

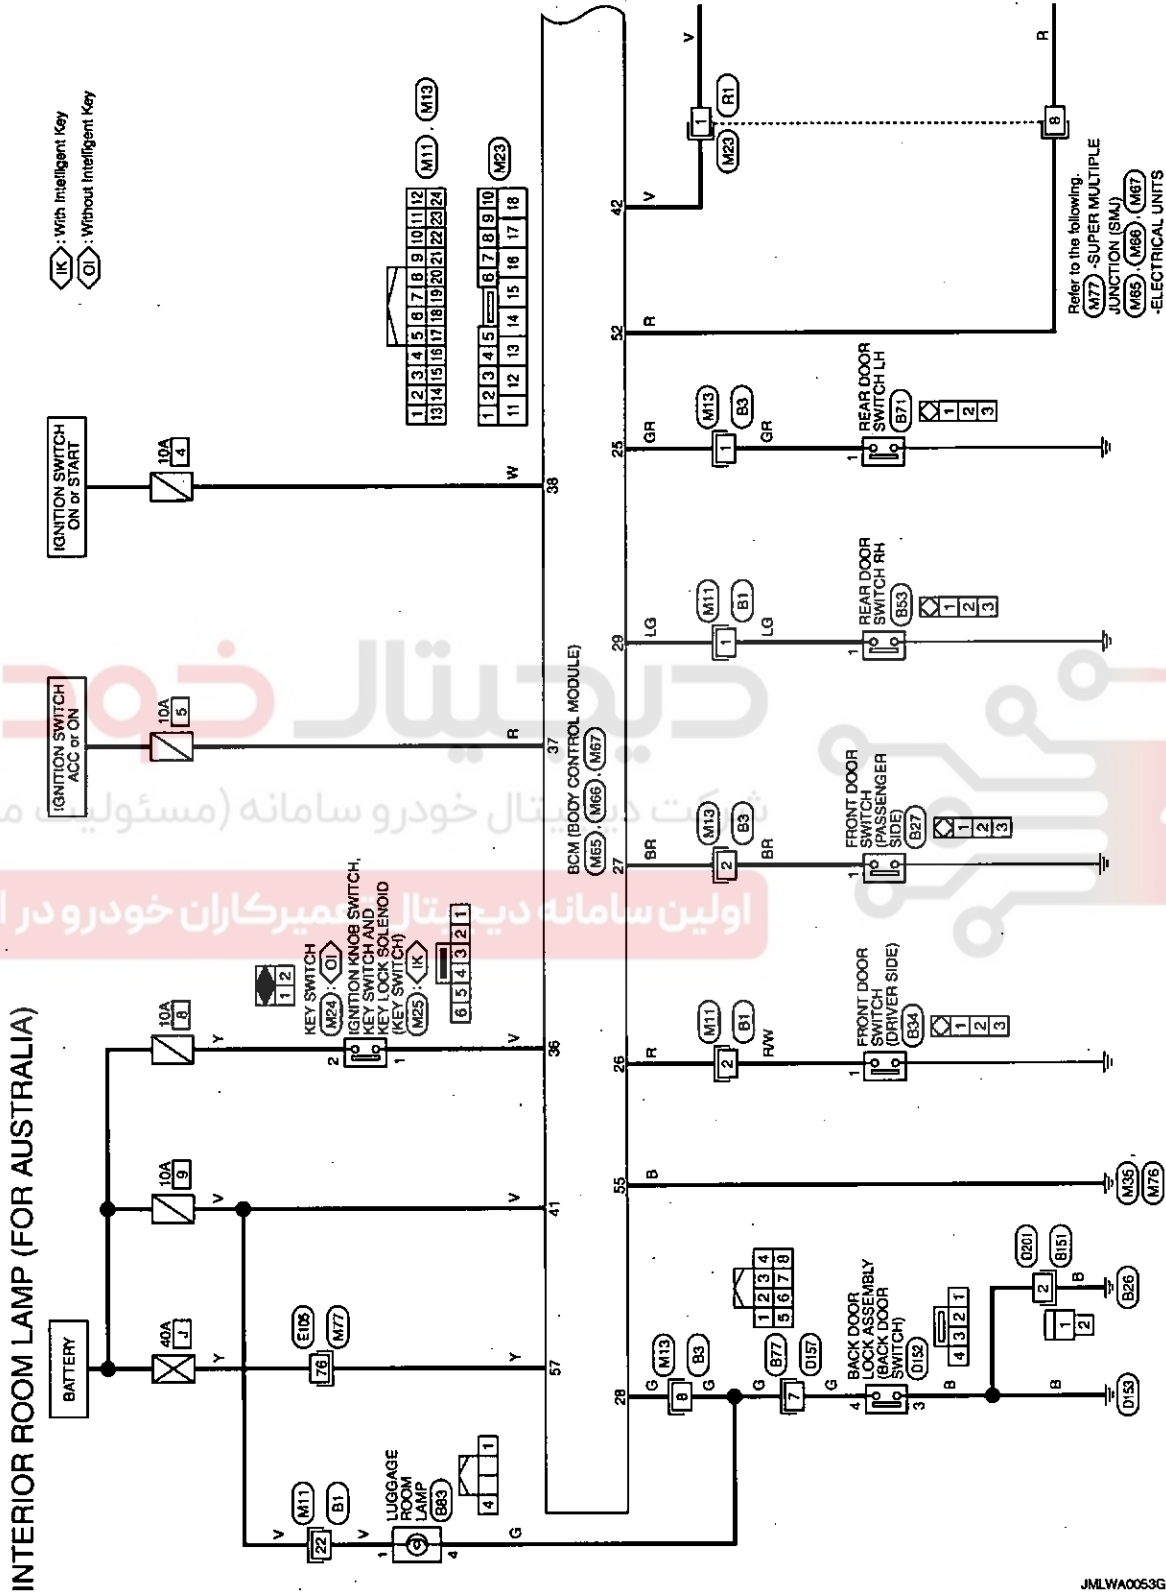

JMLWA0053GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

< COMPONENT DIAGNOSIS >

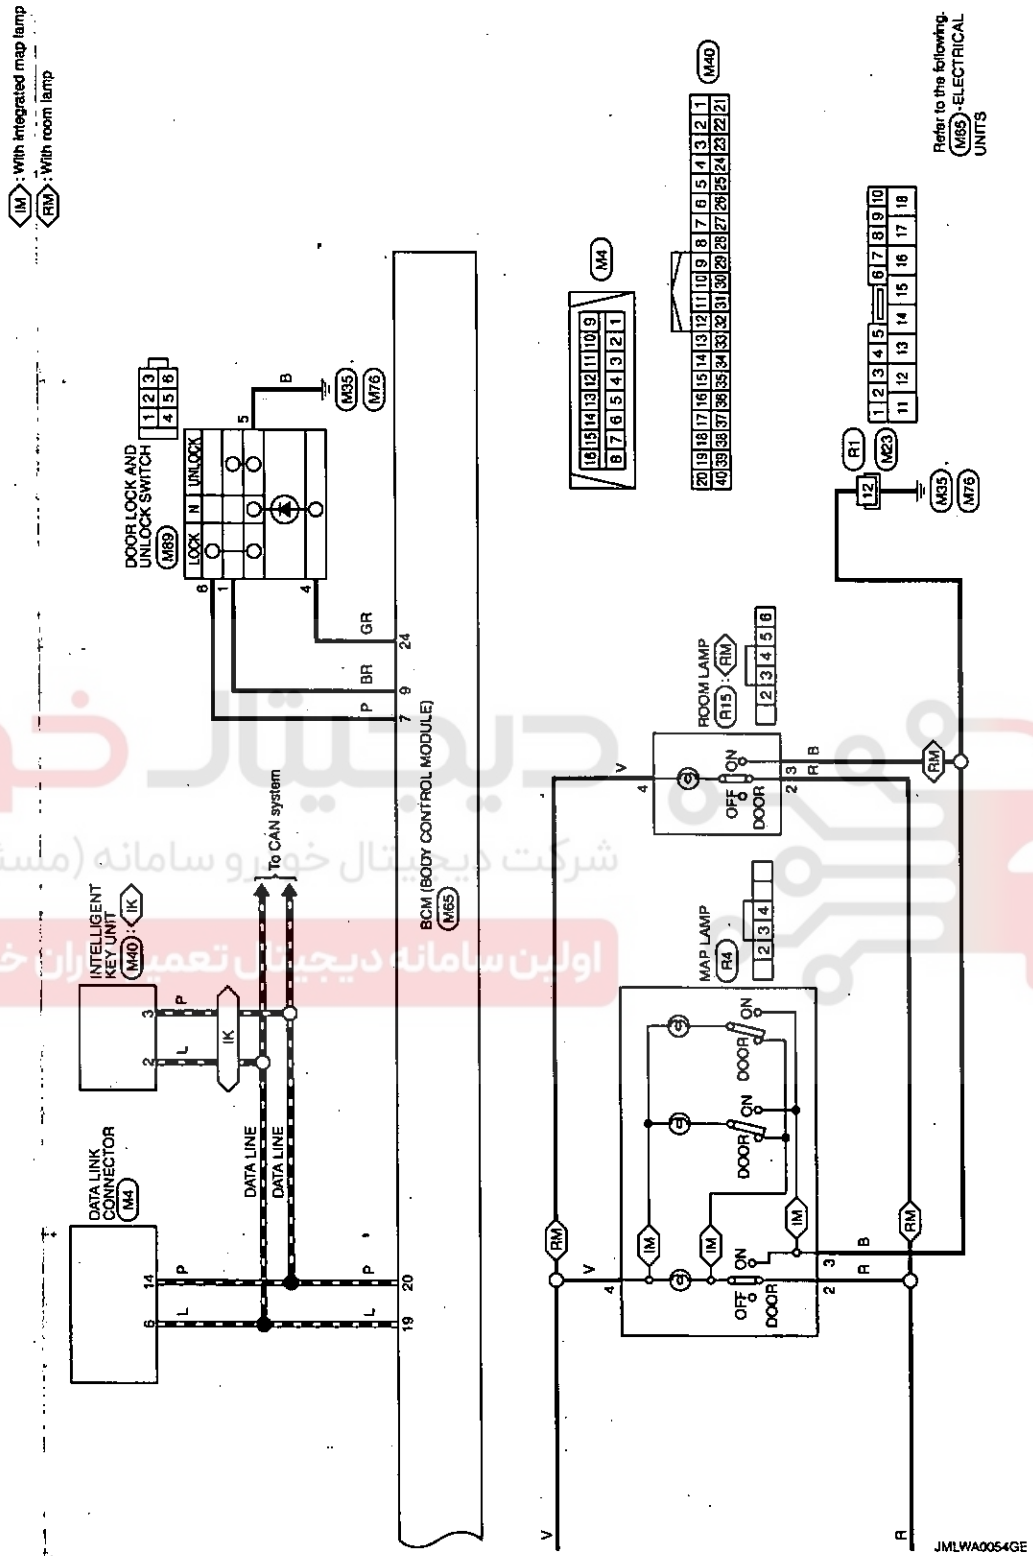


< COMPONENT DIAGNOSIS >

Wiring Diagram - INTERIOR ROOM LAMP (Except for Australia) -

INFOID:000000004897955

INTERIOR ROOM LAMP (EXCEPT FOR AUSTRALIA)

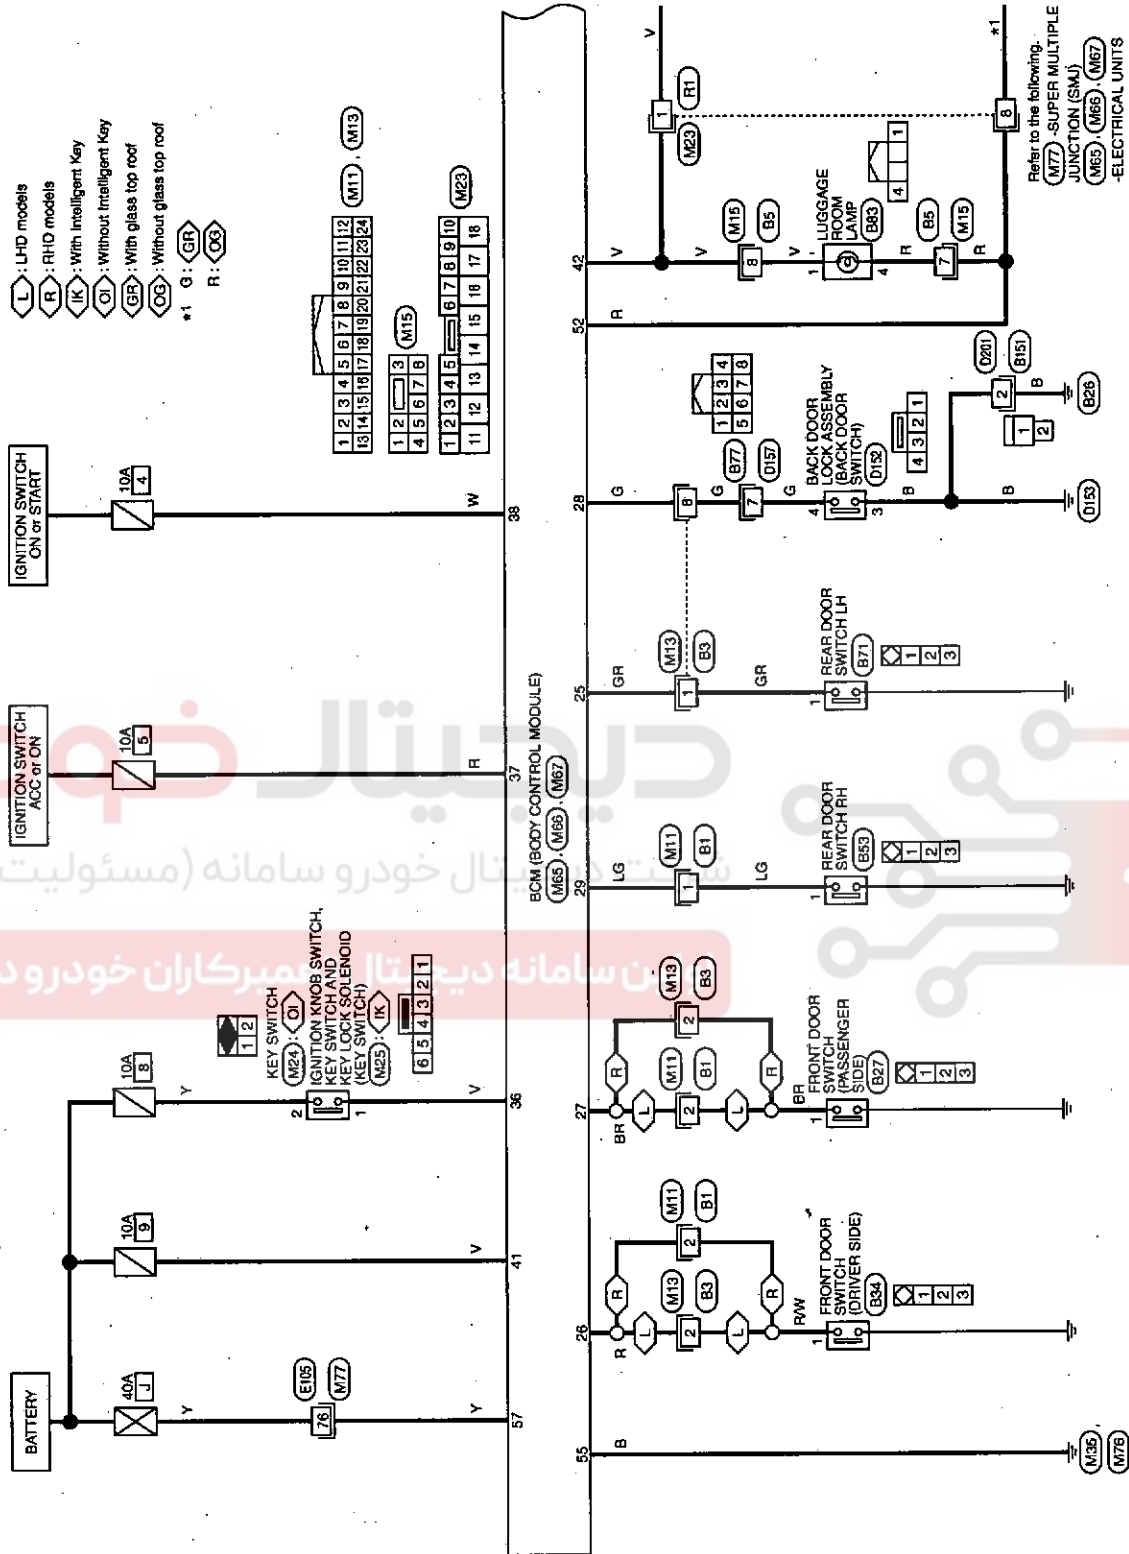


JMLWA0055GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

< COMPONENT DIAGNOSIS >

- IM : With integrated map lamp
  - GR : With glass top roof
  - OG : Without glass top roof
  - ME : For the Middle East
  - XM : Except for the Middle East
- \*1 G: GR R: OG

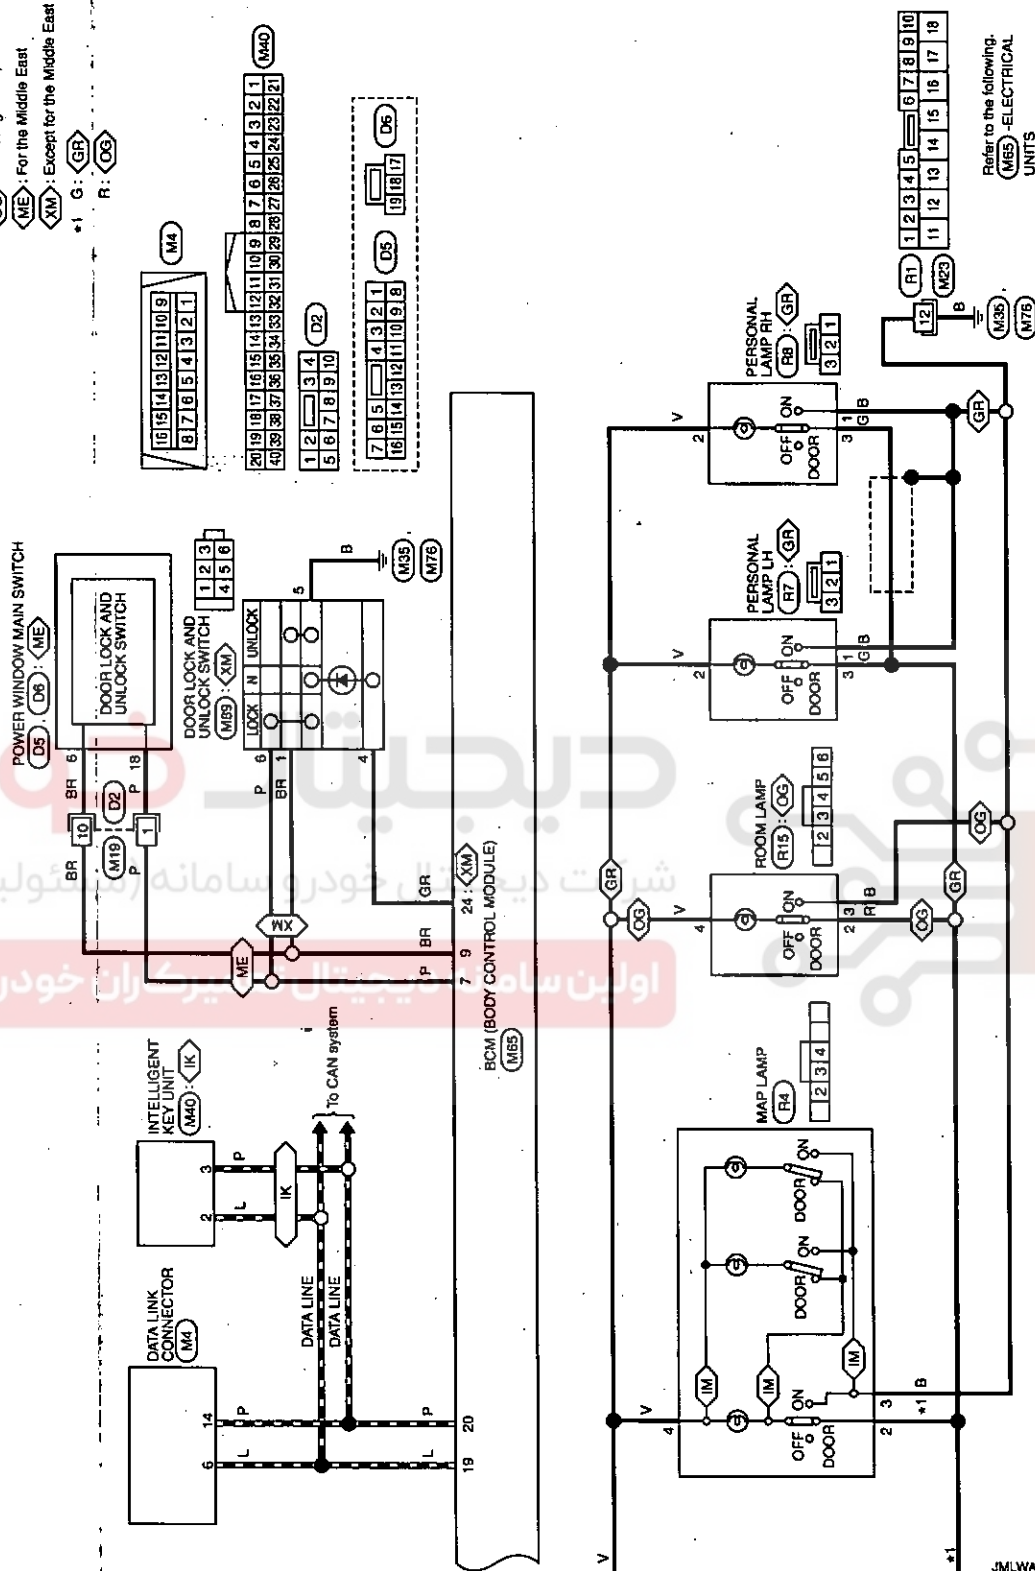


Refer to the following.  
 (M35) - ELECTRICAL  
 UNITS

< COMPONENT DIAGNOSIS >

ILLUMINATION

Wiring Diagram - ILLUMINATION -

INFOID:000000004897956

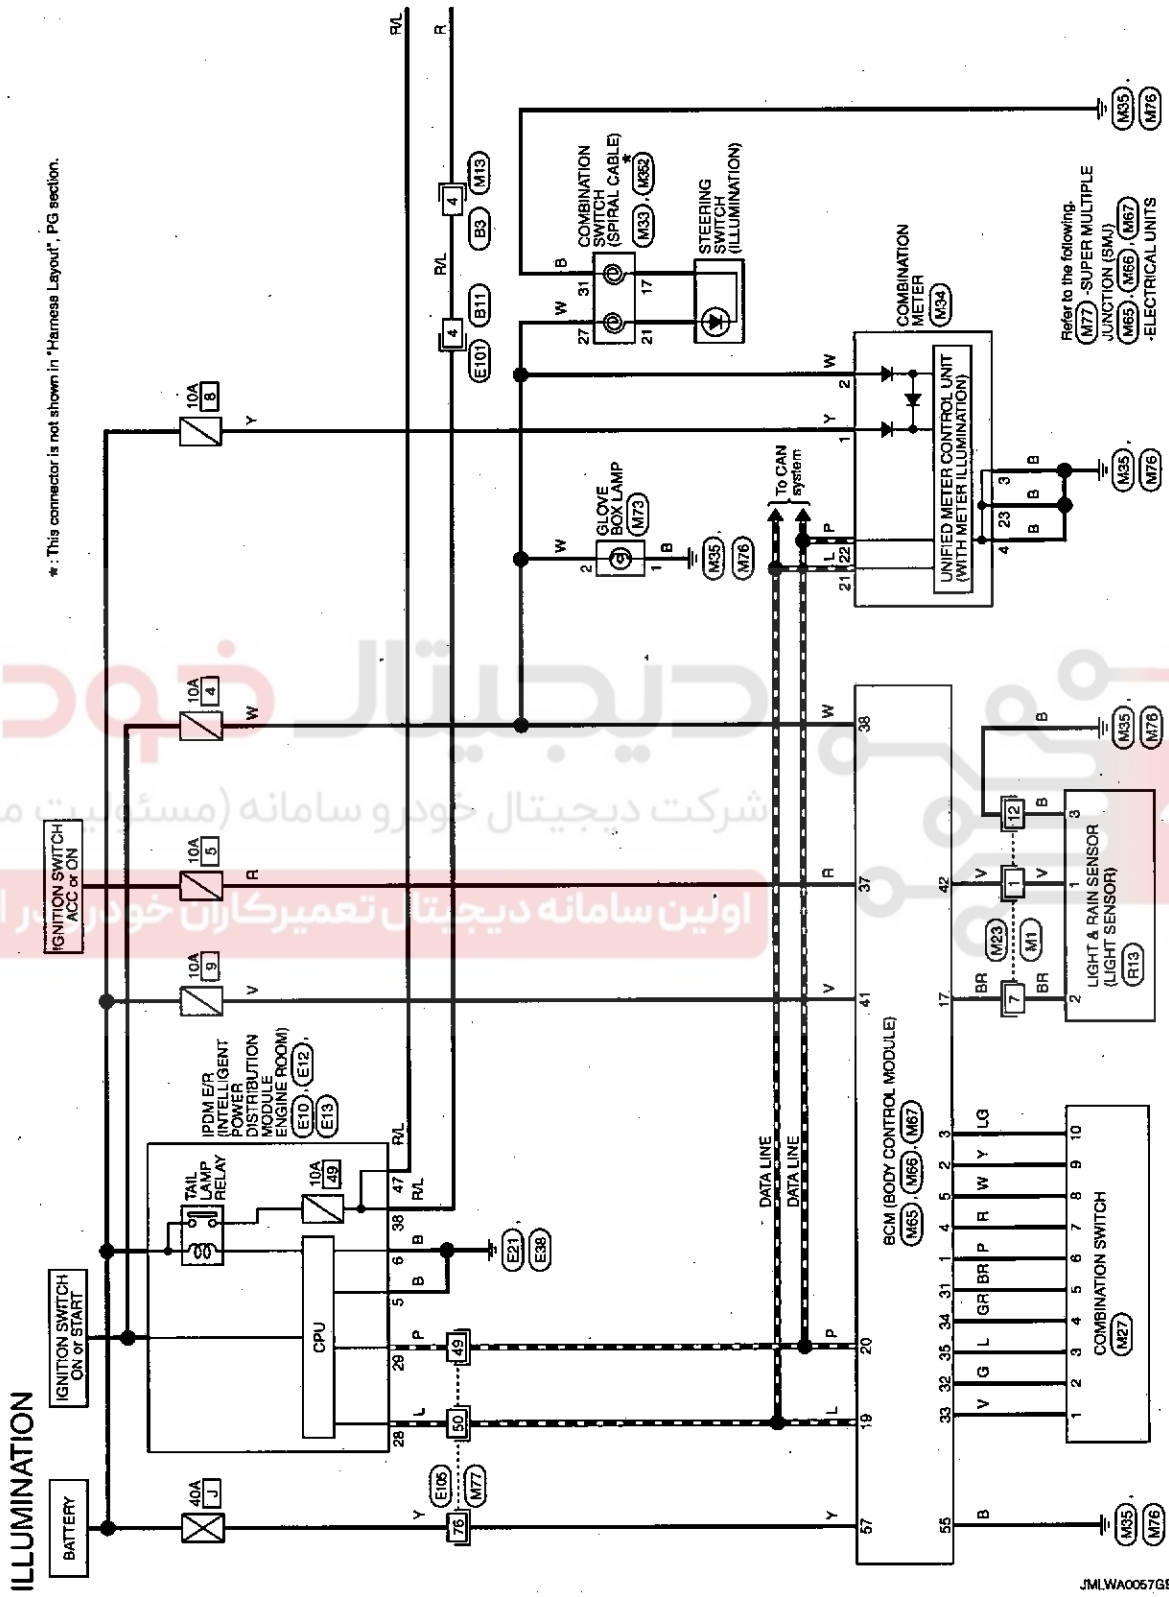


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

JMLWA00576E

< COMPONENT DIAGNOSIS >


- ME: For the Middle East
- XM: Except for the Middle East
- 4W: 4WD models
- VD: With VDC
- HS: With heated seat

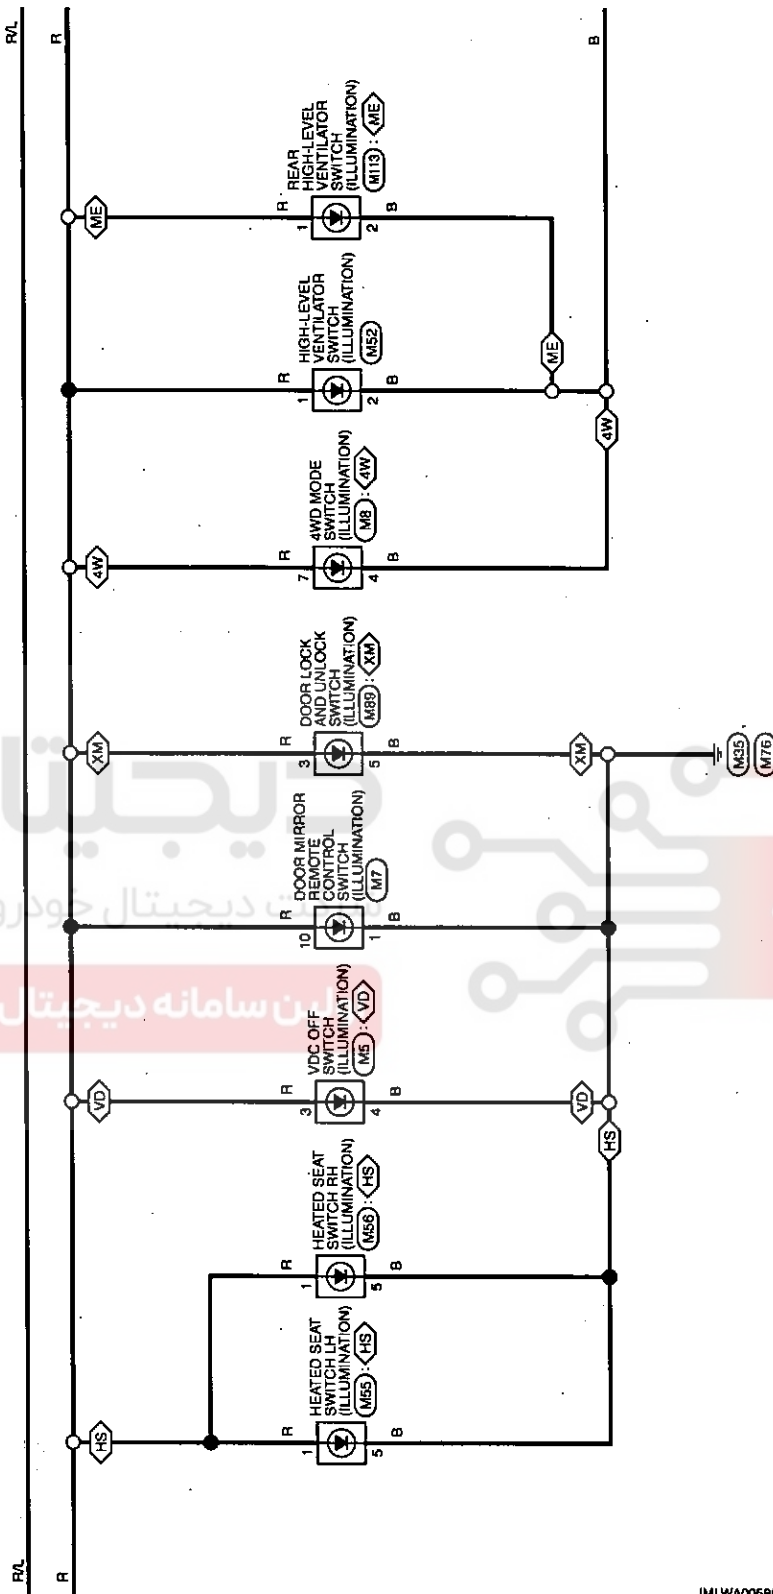

JMLWA0058GE

< COMPONENT DIAGNOSIS >

- : With CVT
- : With auto A/C
- : With manual A/C
- : With headlamp manual aiming
- : With 1DIN radio
- : With 2DIN radio

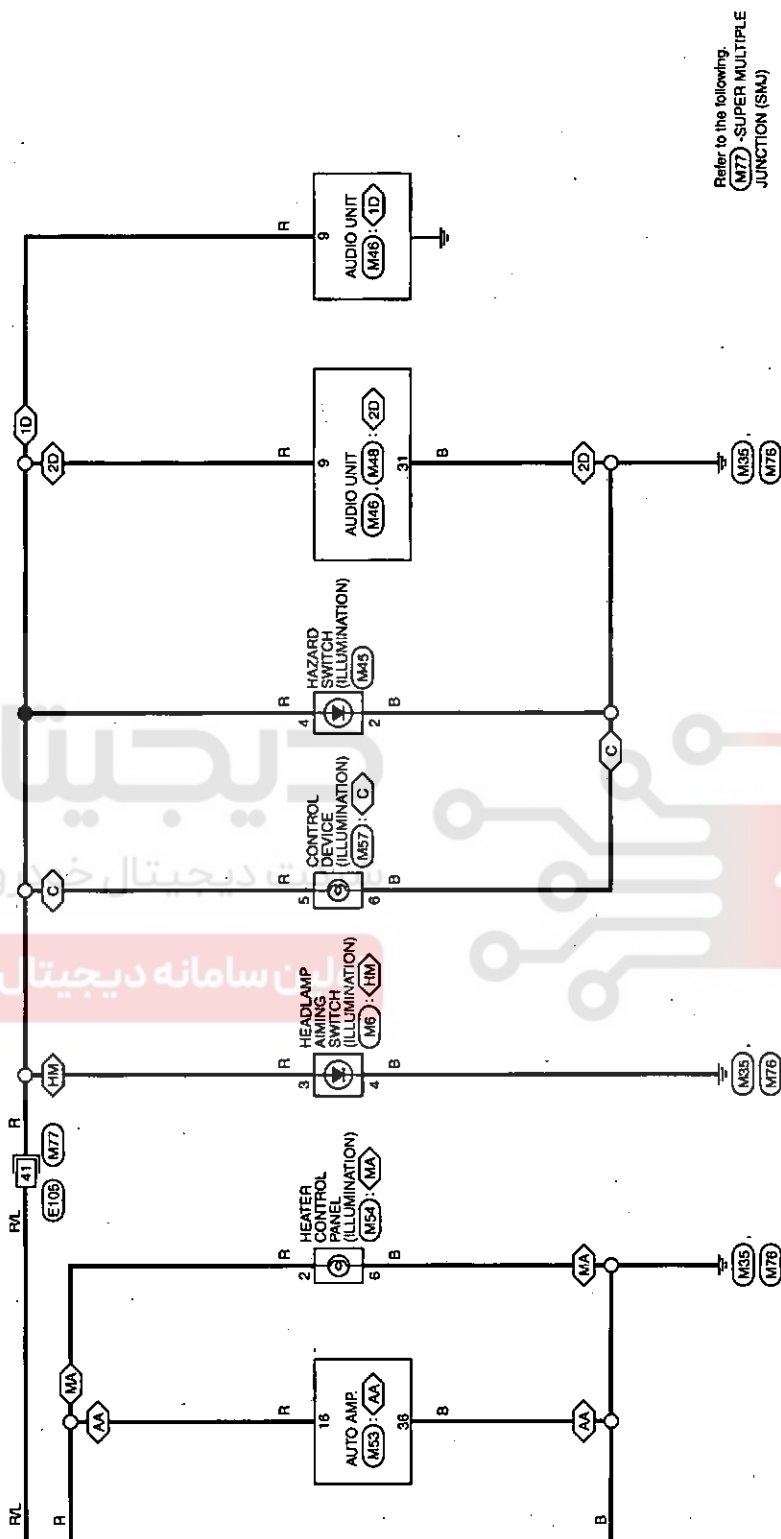

J.MLWA0059GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

