


Engine Control System (EMS)

B-1

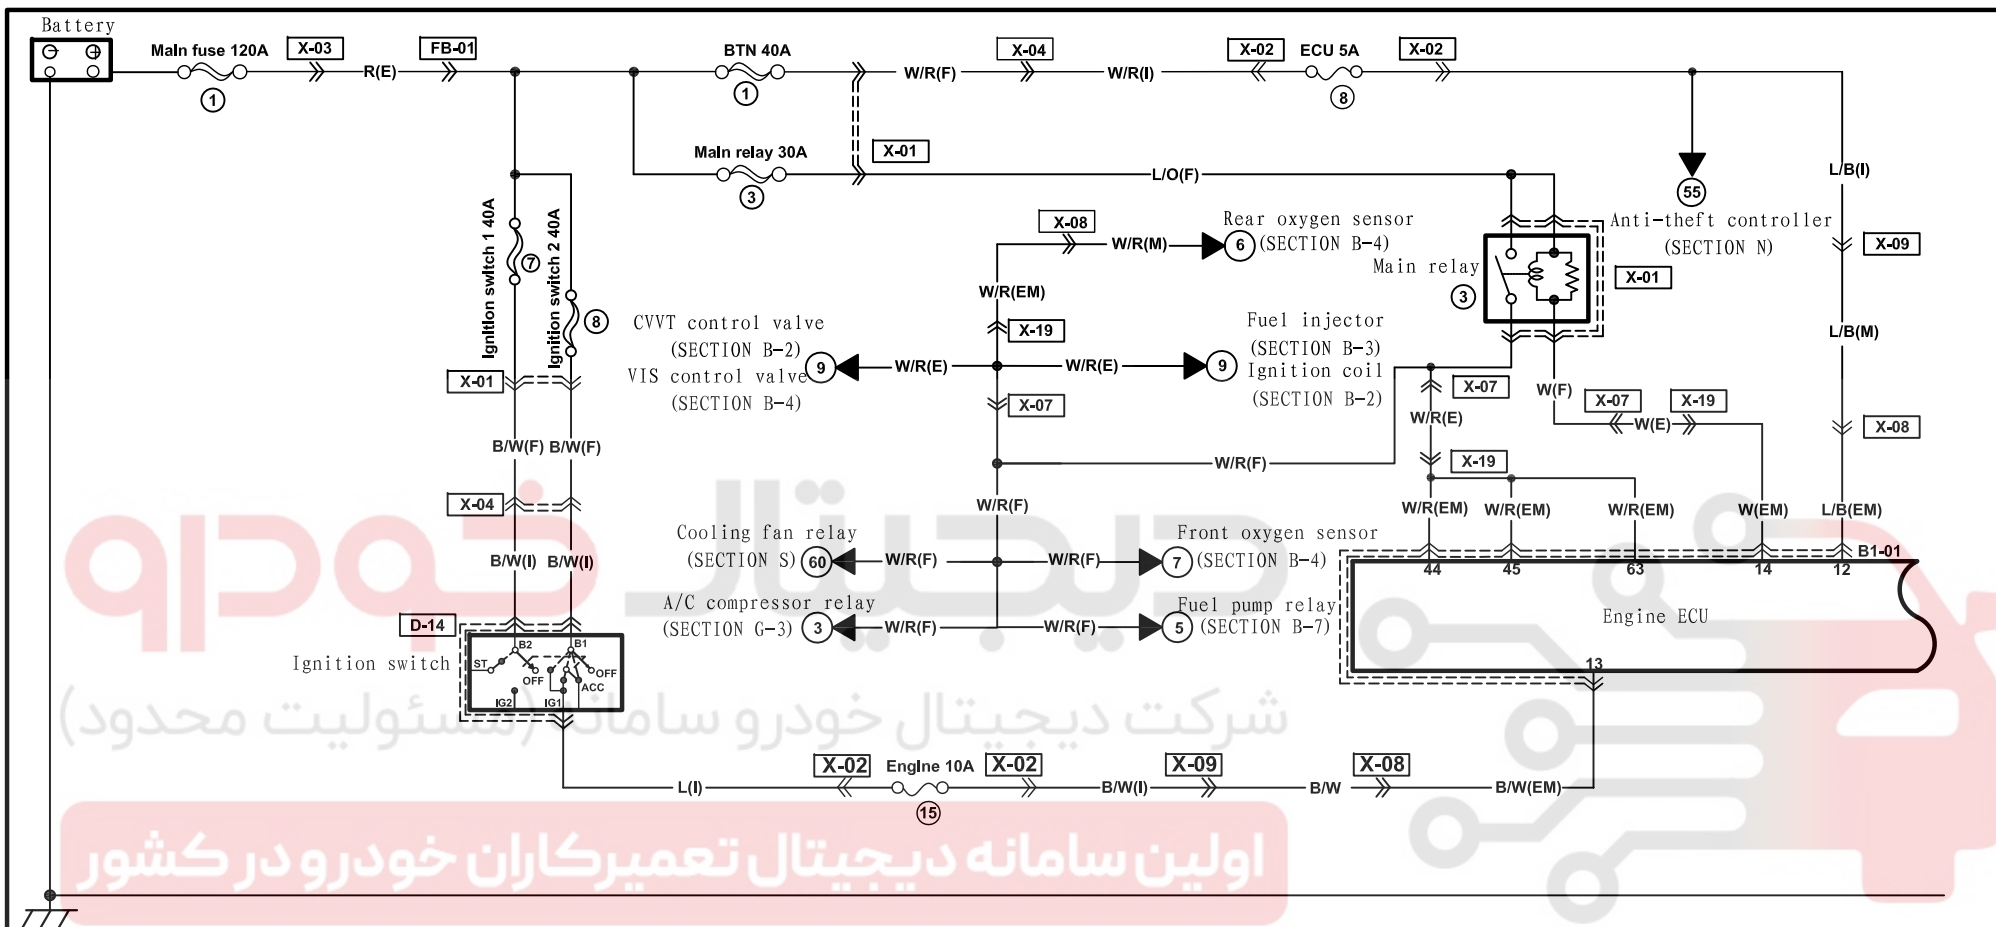


B1-01 Engine ECU (EM)

	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63
<input type="checkbox"/> A *	<input type="checkbox"/> F *	<input type="checkbox"/> J *	<input type="checkbox"/> N *	<input type="checkbox"/> R *	<input type="checkbox"/> V *	<input type="checkbox"/> Z *	<input type="checkbox"/> AD *	<input type="checkbox"/> AH *	<input type="checkbox"/> AL *	<input type="checkbox"/> AP *	<input type="checkbox"/> AT *	<input type="checkbox"/> AX *	<input type="checkbox"/> BB *	<input type="checkbox"/> BF *	<input type="checkbox"/> BJ *	<input type="checkbox"/> BN *	<input type="checkbox"/> BR *	<input type="checkbox"/> BV *	<input type="checkbox"/> BZ
<input type="checkbox"/> C *	<input type="checkbox"/> G *	<input type="checkbox"/> K *	<input type="checkbox"/> O *	<input type="checkbox"/> S *	<input type="checkbox"/> W *	<input type="checkbox"/> AA *	<input type="checkbox"/> AE *	<input type="checkbox"/> AI *	<input type="checkbox"/> AM *	<input type="checkbox"/> AQ *	<input type="checkbox"/> AU *	<input type="checkbox"/> AY *	<input type="checkbox"/> BC *	<input type="checkbox"/> BG *	<input type="checkbox"/> BK *	<input type="checkbox"/> BO *	<input type="checkbox"/> BS *	<input type="checkbox"/> CA	<input type="checkbox"/> CB
<input type="checkbox"/> D *	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44
<input type="checkbox"/> E *	<input type="checkbox"/> H *	<input type="checkbox"/> L *	<input type="checkbox"/> P *	<input type="checkbox"/> T *	<input type="checkbox"/> X *	<input type="checkbox"/> AB *	<input type="checkbox"/> AF *	<input type="checkbox"/> AJ *	<input type="checkbox"/> AN *	<input type="checkbox"/> AR *	<input type="checkbox"/> AV *	<input type="checkbox"/> AZ *	<input type="checkbox"/> BD *	<input type="checkbox"/> BH *	<input type="checkbox"/> BL *	<input type="checkbox"/> BP *	<input type="checkbox"/> BT *	<input type="checkbox"/> BX *	<input type="checkbox"/> CB *
	<input type="checkbox"/> I *	<input type="checkbox"/> M *	<input type="checkbox"/> Q *	<input type="checkbox"/> U *	<input type="checkbox"/> Y *	<input type="checkbox"/> AC *	<input type="checkbox"/> AG *	<input type="checkbox"/> AK *	<input type="checkbox"/> AO *	<input type="checkbox"/> AS *	<input type="checkbox"/> AW *	<input type="checkbox"/> BA *	<input type="checkbox"/> BE *	<input type="checkbox"/> BI *	<input type="checkbox"/> BM *	<input type="checkbox"/> BQ *	<input type="checkbox"/> BU *	<input type="checkbox"/> BY *	<input type="checkbox"/> CD *
	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06

Engine Management System


B-1

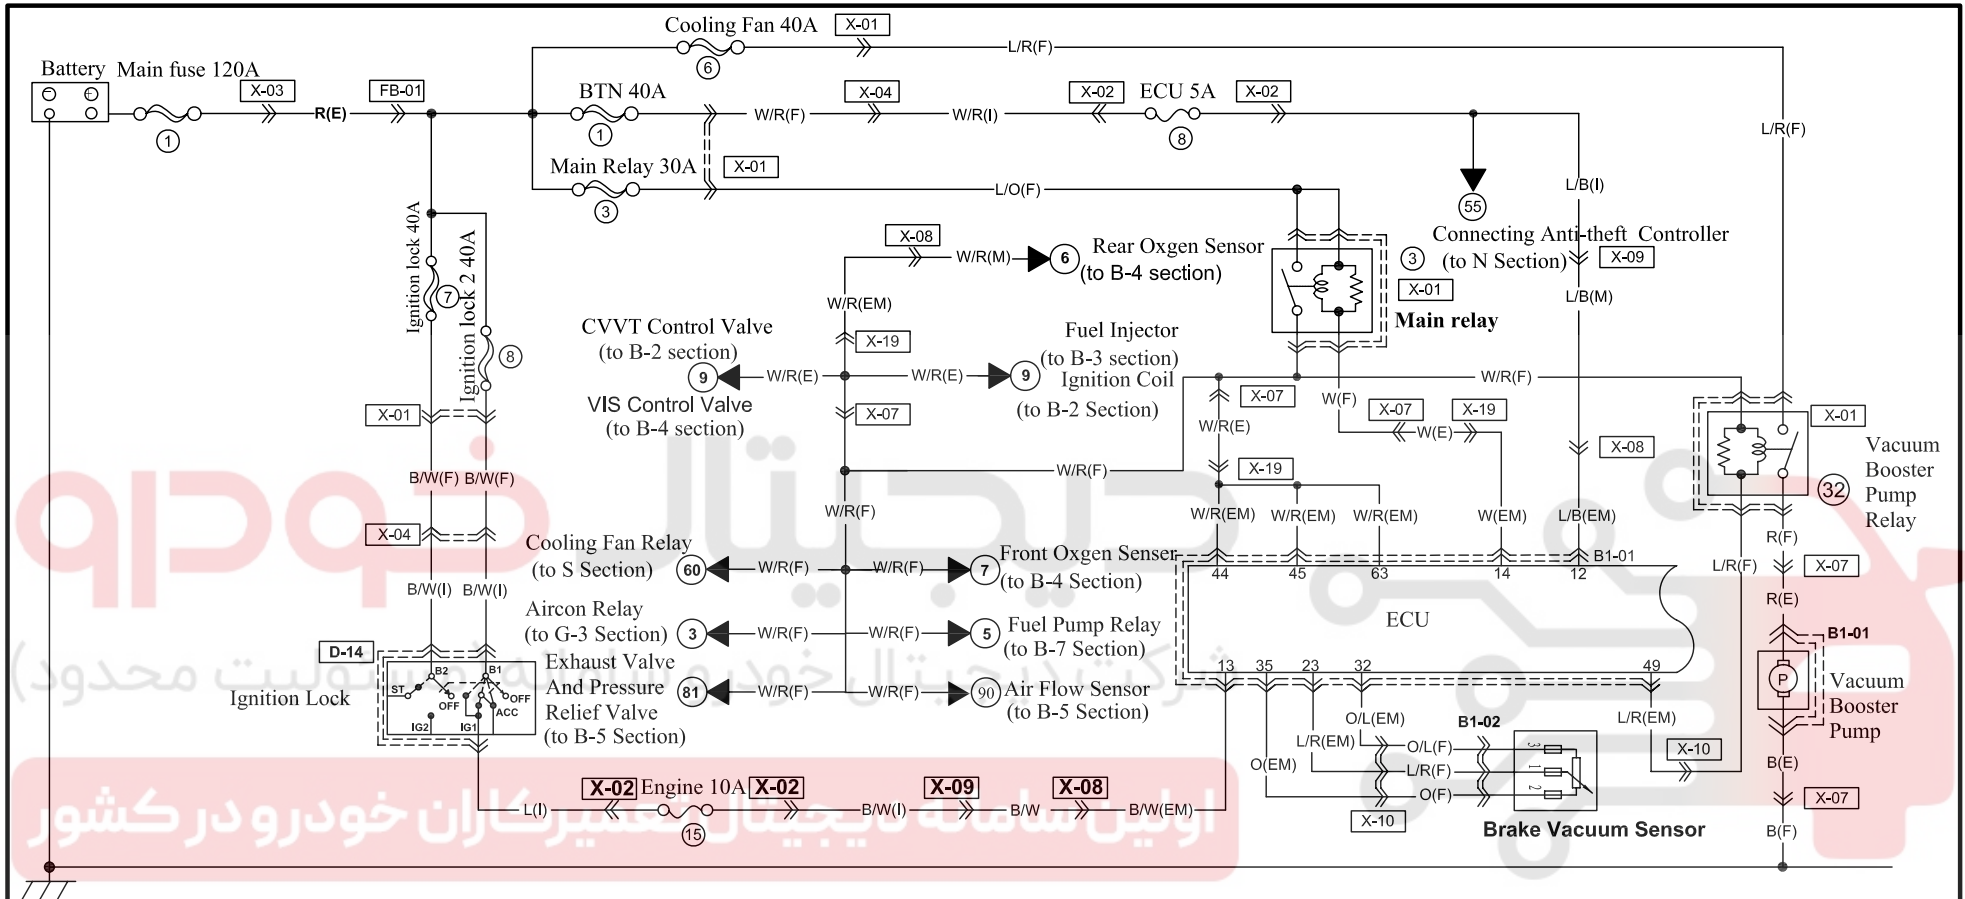


B1-01 ECU(EM)

	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63
A	F	N	R	V	Z	AD	AH	AL	AP	AT	AX	BB	BF	BJ	BN	BR	BV	BZ	W/R
C	G	O	S	W	XA	AE	AI	AM	AO	AU	AY	BC	BG	BK	BO	BS	BW	CA	W/R
D	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44
E	H	P	T	X	AB	AF	AJ	AN	AR	AV	AZ	BD	BH	BL	BP	BT	BX	CB	*
B	I	M	Q	U	Y	AC	AG	AK	AO	AS	AW	BA	BE	BI	BM	BO	BU	BY	CD
	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06

 
B1-01 Vaccum Booster Pump



B1-02 Brake Vacuum Sensor

 

Engine Control System (EMS)

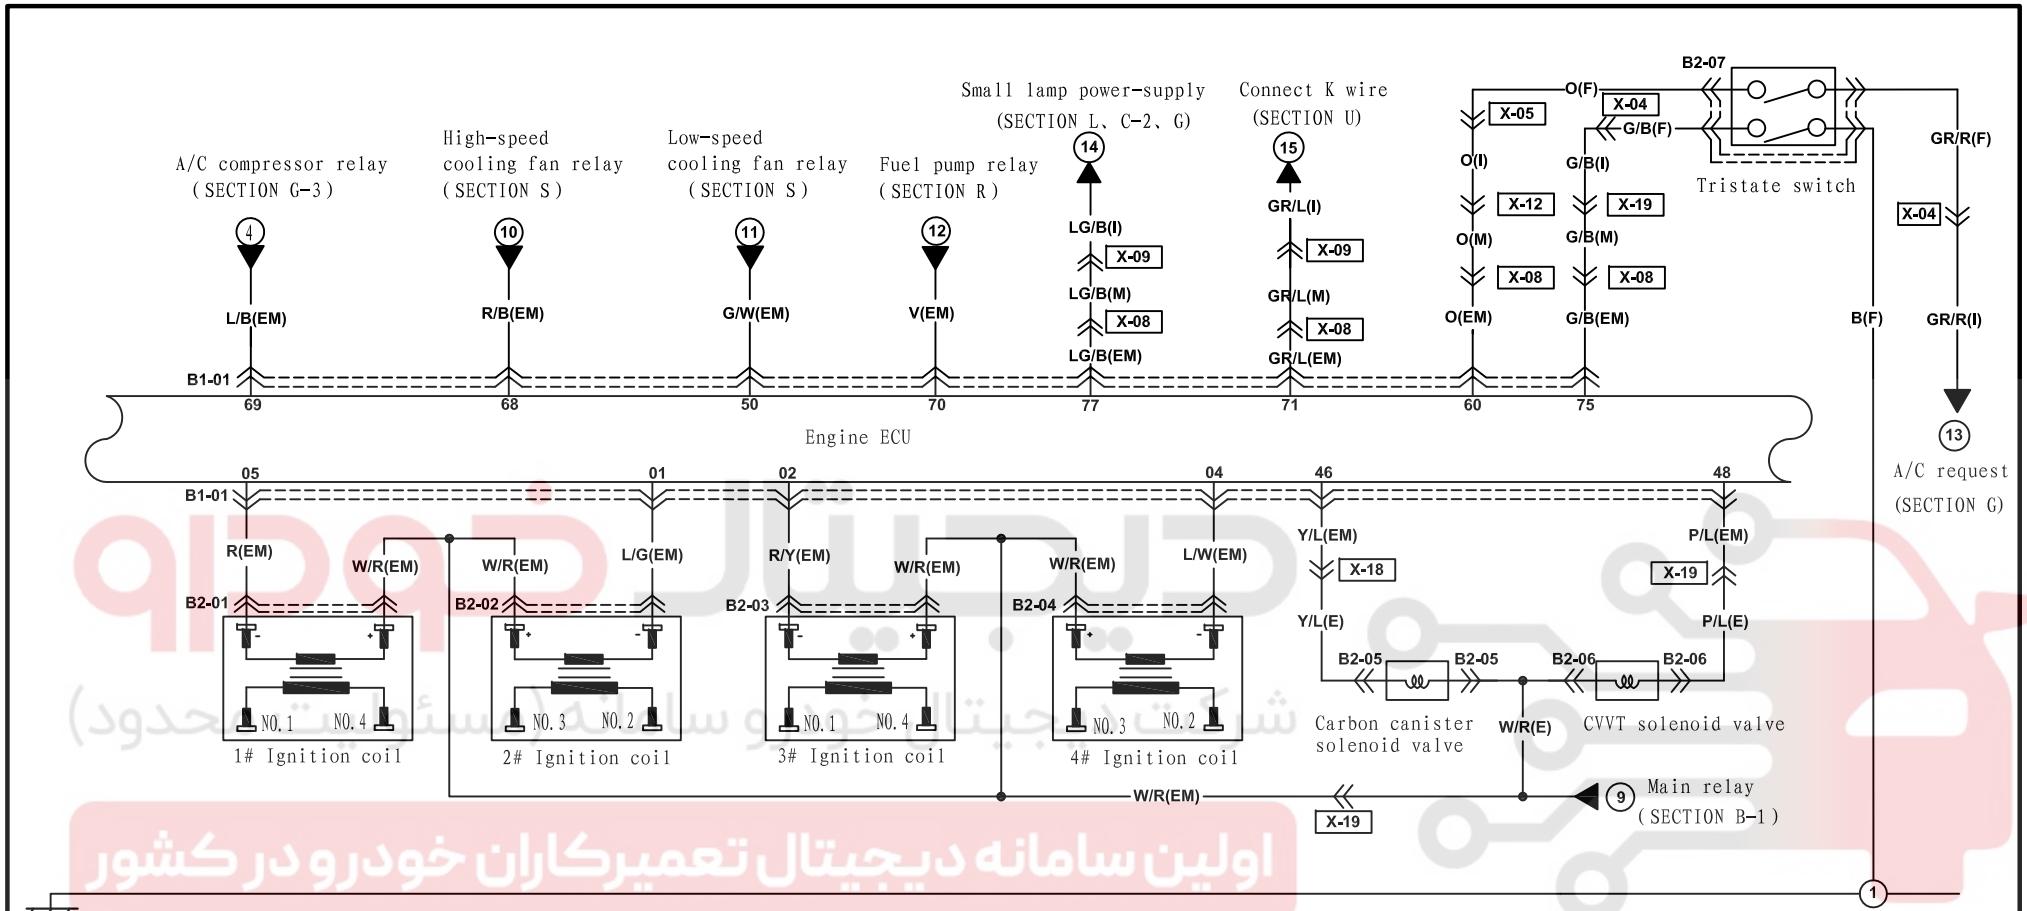

اولین سامانه دیجیتال تعمیرکاران خودرو در کشور


B1-01 ECU(EM)

	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63
A	*	*	*	*	V	LG/B	G/B	AD	AH	AL	AP	AT	AX	BB	BF	BJ	BN	BR	Bv
C	*	*	*	*	W	AA	AE	AJ	AM	AQ	AU	AY	BC	BG	BK	BO	BS	Bw	CA
D	*	*	*	*	W	AA	AE	AJ	AM	AQ	AU	AY	BC	BG	BK	BO	BS	Bw	CA
E	*	*	*	*	W	AA	AE	AJ	AM	AQ	AU	AY	BC	BG	BK	BO	BS	Bw	CA
L/G																			
R/Y																			
L/W																			
R																			

B2-01 1# Ignition coil	B2-02 2# Ignition coil	B2-03 3# Ignition coil
B2-04 4# Ignition coil	B2-05 Carbon canister solenoid valve	B2-06 CVVT solenoid valve
B2-07 Tristate switch		

EMS

B-5

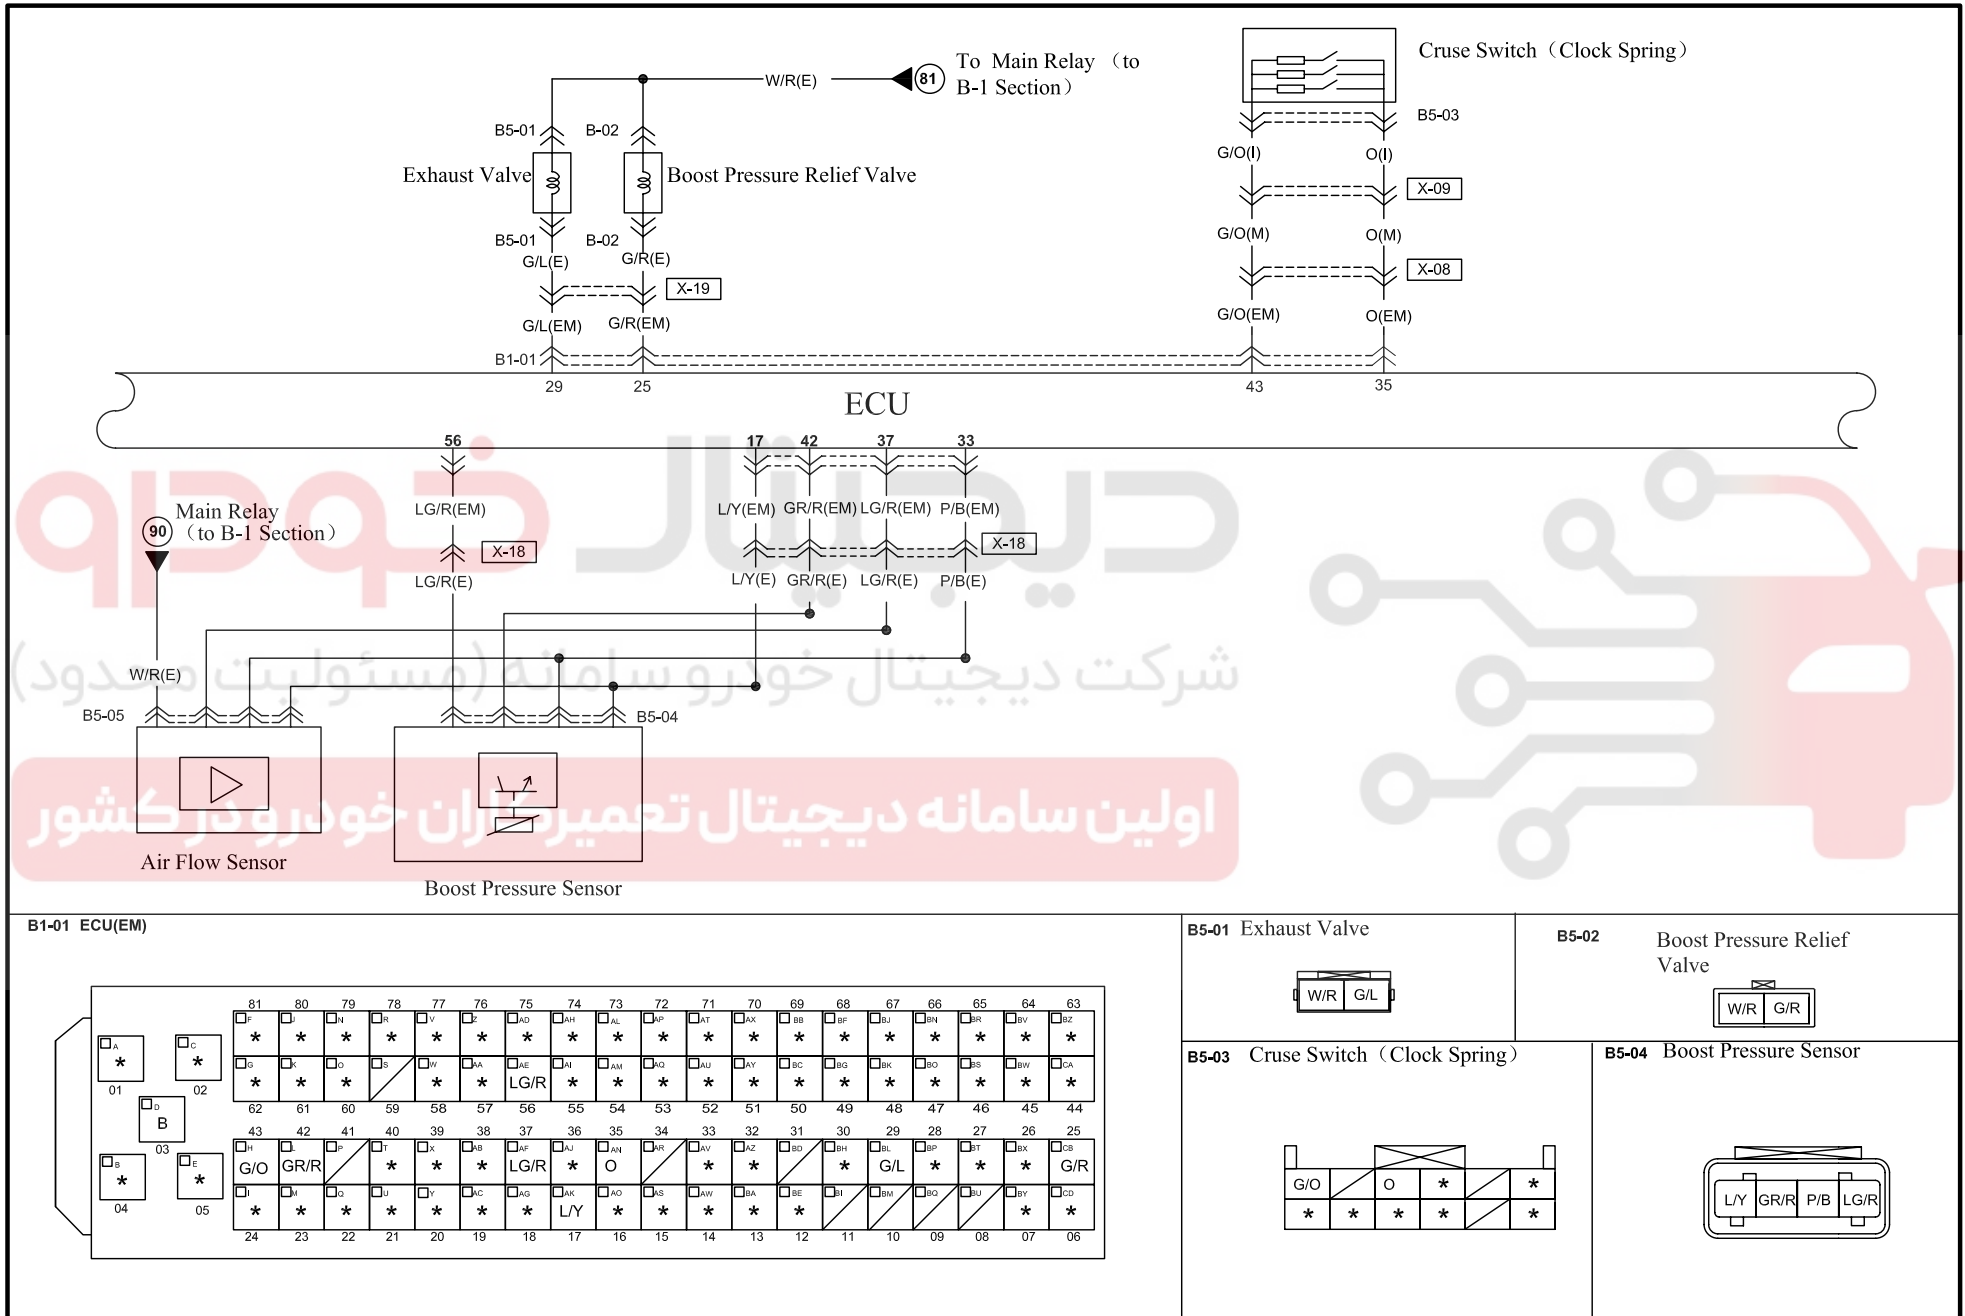

B1-01 ECU(EM)

	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	
A	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
C	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
01																				
B	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
02																				
D	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
03																				
E	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
04																				
05																				
	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06	
	G/O	GR/R		*	*	*	LG/R	*	O	*	*	*	*	G/L	*	*	*	*	G/R	
	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	

 
B5-01 Exhaust Valve




B5-02 Boost Pressure Relief Valve



B5-03 Cruse Switch (Clock Spring)



B5-04 Boost Pressure Sensor

 

1.5T+CVT

