



Power Seat

Service Hints

From Power Source System (See pg. 78)

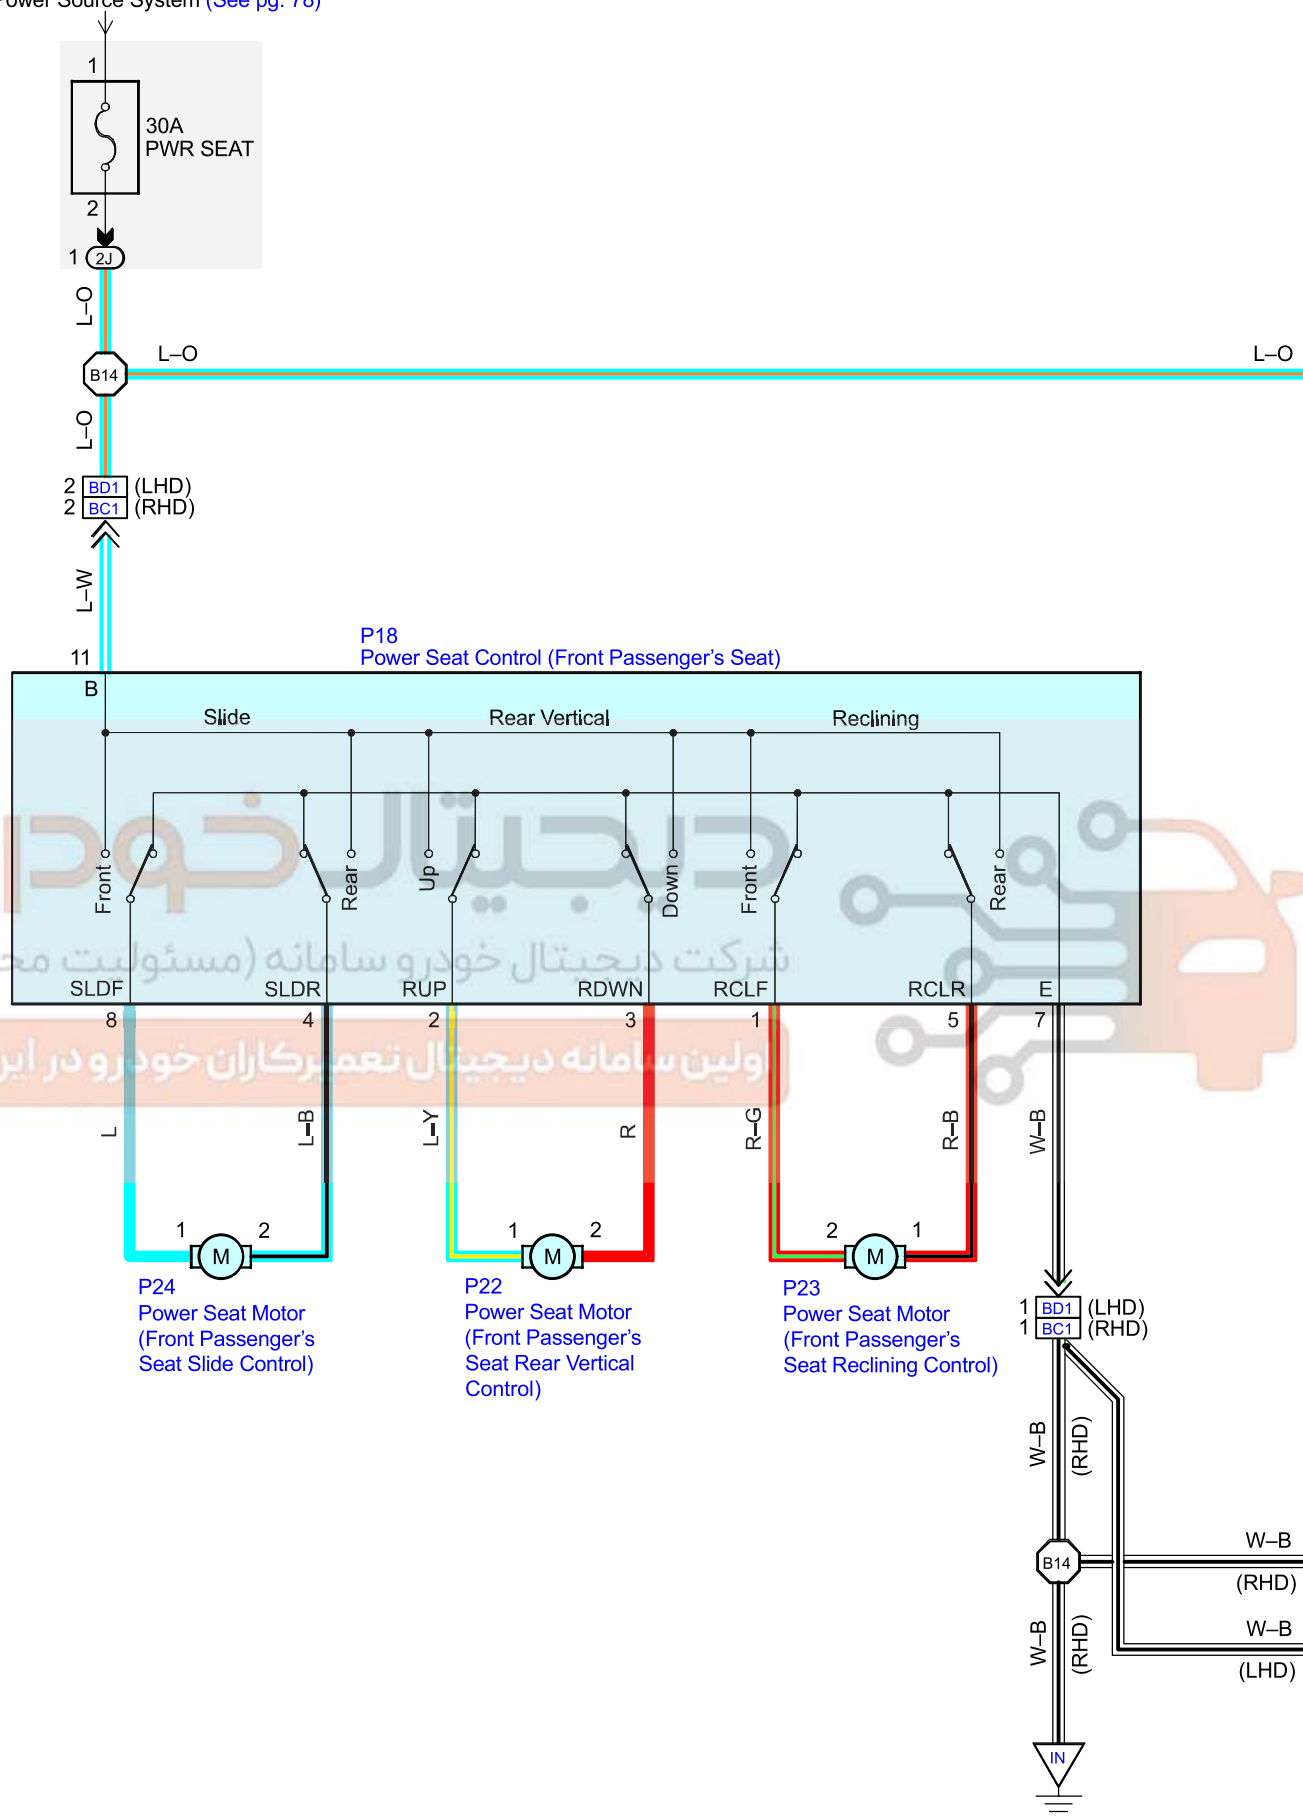

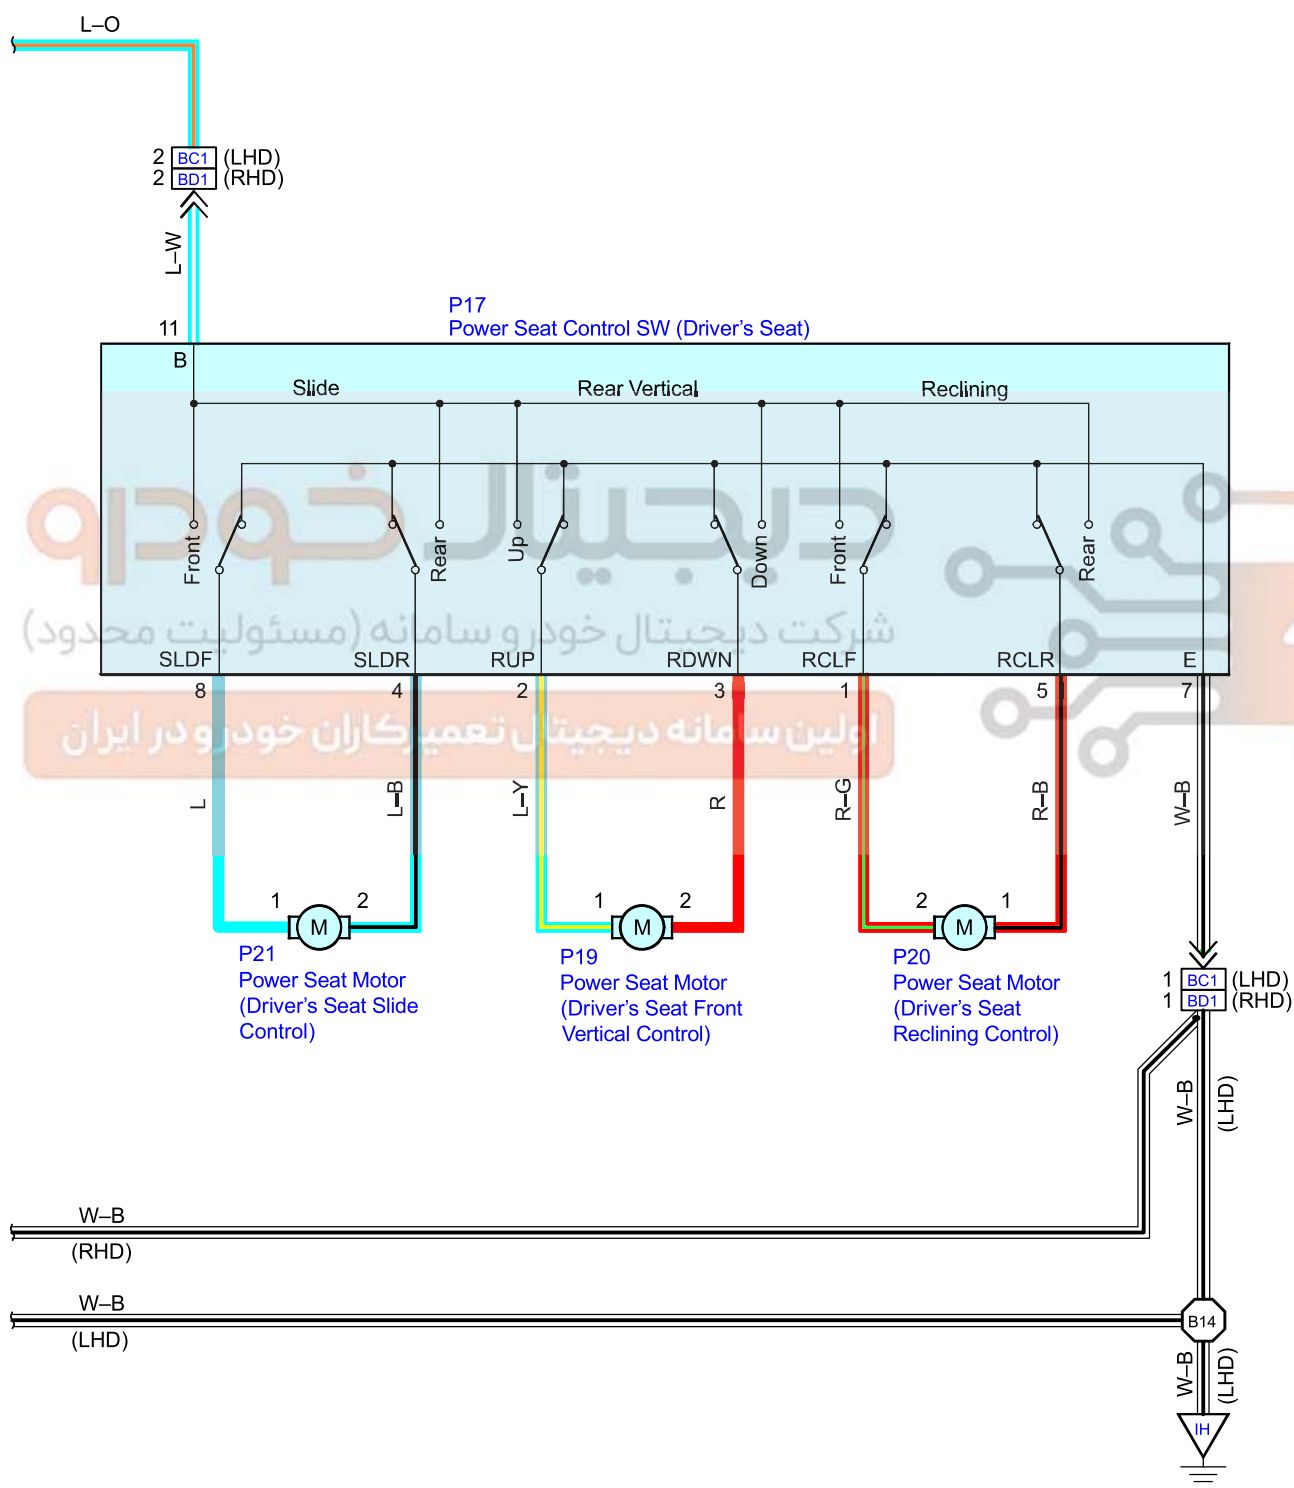

Power Seat

Service Hints

P17 Power Seat Control SW (Driver's Seat)

11-Ground : Always approx. 12 volts

7-Ground : Always continuity

P18 Power Seat Control SW (Front Passenger's Seat)

11-Ground : Always approx. 12 volts

7-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
P17	40 (LHD)	P20	40 (LHD)	P23	40 (LHD)
	50 (RHD)		50 (RHD)		50 (RHD)
P18	40 (LHD)	P21	40 (LHD)	P24	40 (LHD)
	50 (RHD)		50 (RHD)		50 (RHD)
P19	40 (LHD)	P22	40 (LHD)		
	50 (RHD)		50 (RHD)		

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2J	26	Floor Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BD1	62 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
	74 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
BC1	62 (LHD)	Floor Wire and Front Seat LH Wire (Under the Driver's Seat)
	74 (RHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
IH	55 (LHD)	Left Kick Panel
IN	67 (RHD)	Right Kick Panel

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B14	60 (LHD)	Floor wire			
	72 (RHD)				