


BAT

R01

R02

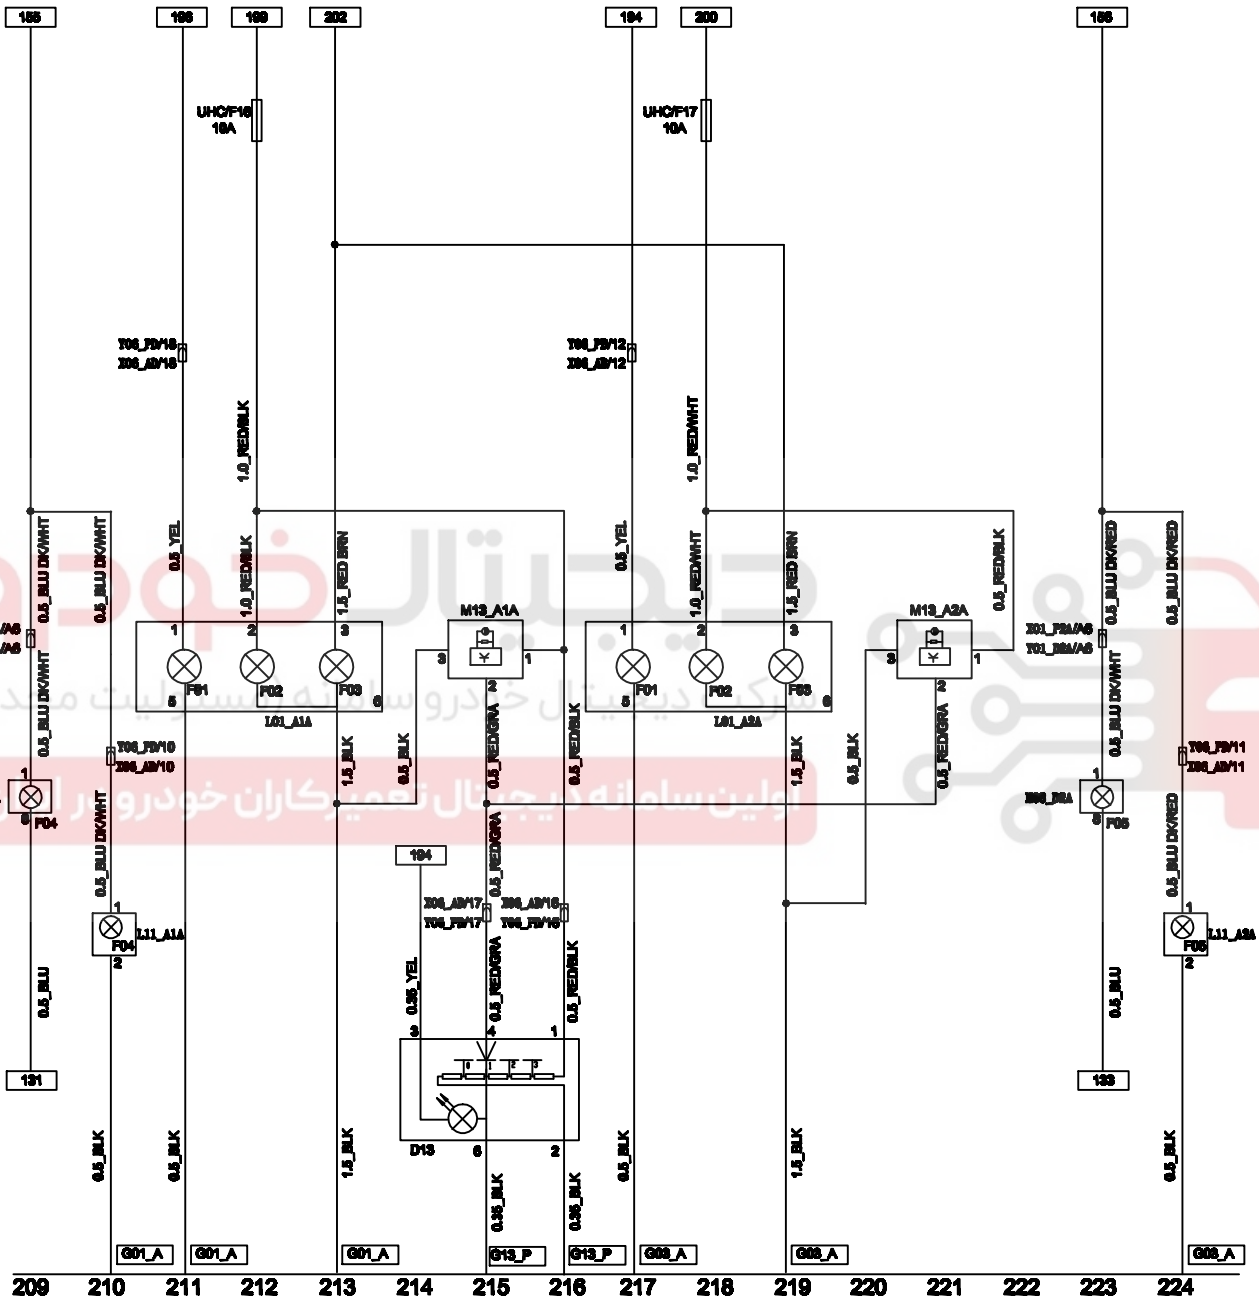

Headlamp, side turn lamp circuit diagram

UHC-engine compartment fuse box

F01-position lamp

F02-low beam

F03-high beam

F04-left turning lamp

F05-right turning lamp

D13-headlamp adjustment switch

M13_A1A-left headlamp electric adjustment

motor connector 3 holes black

M13_A2A-right headlamp electric adjustment

motor connector 3 holes black

M08_D1A-LF door electric rear mirror 8

holes black

M08_D2A-RF door electric rear mirror 8

holes black

L11_A1A-LF turning lamp connector 2 holes

L11_A2A-RF turning lamp connector 2 holes

L01_A1A-left headlamp connector 6 holes black

L01_A2A-right headlamp connector 6 holes black

X01_P1A Y01_D1A-dashboard main wiring harness and LF door

wiring harness connector 18 holes black

X01_P2A Y01_D2A-dashboard main wiring harness and RF door

wiring harness connector 18 holes black

X06_AD Y06_PD dashboard main wiring harness splicing to

engine compartment wiring harness 20 holes blue

X06_AB Y06_PB dashboard main wiring harness splicing to

engine compartment wiring harness 20 holes white

G01_A-ground point in the left of the engine compartment

G03_A-ground point in the right of the engine compartment

G13_P-ground point on the pillar-A at the left of main wiring harness