


天窗 Sunroof

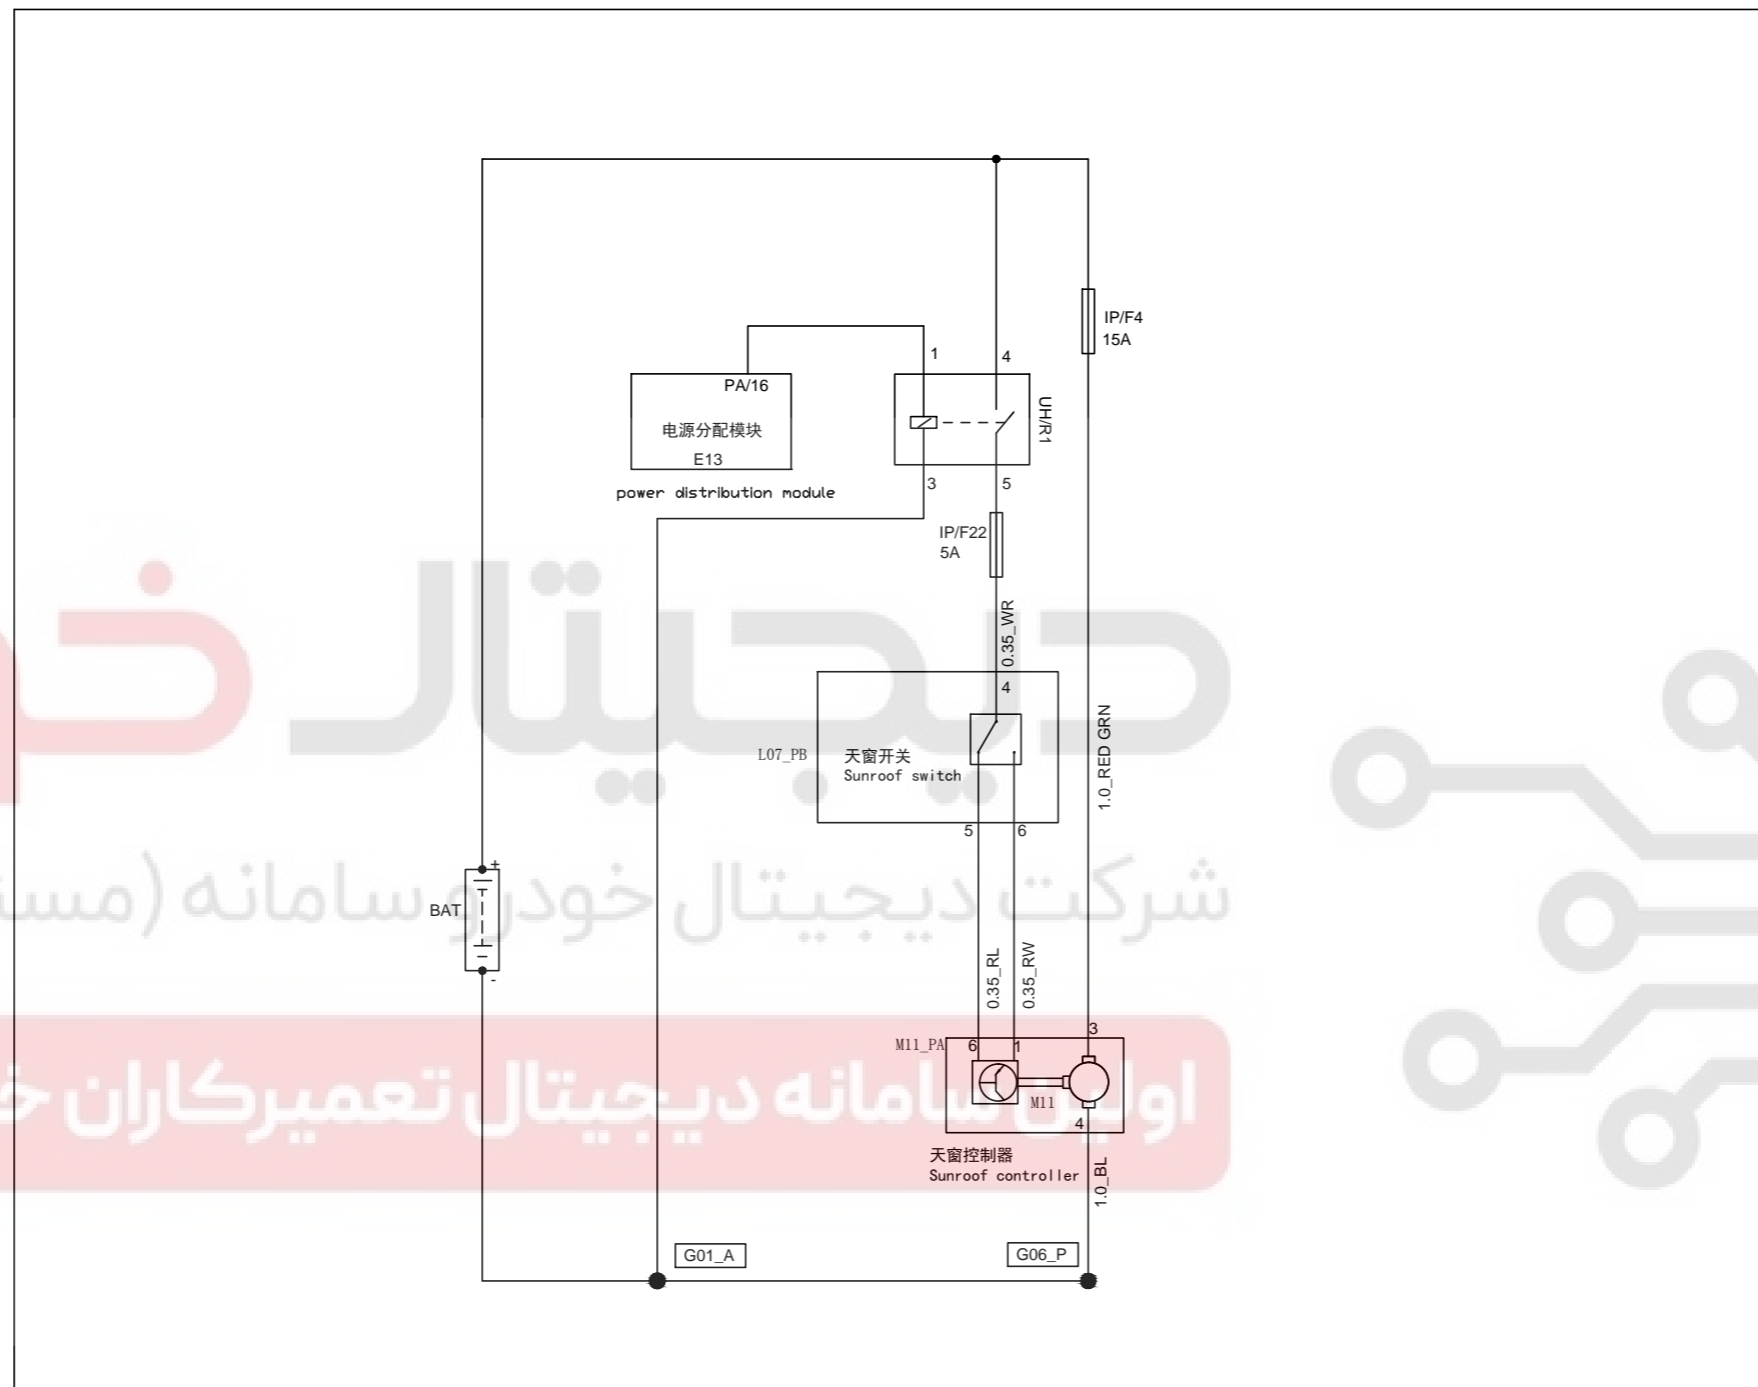

UH—发动机舱保险丝盒
 IP—仪表板保险丝盒
 L07_PB—天窗控制开关
 M11—天窗控制器
 G06_P—主线束右侧A 立柱下搭铁点

UH—engine compartment fuse box
 IP—instrument panel fuse box
 L07_PB—Sunroof switch
 M11—Sunroof controller
 G06_P—A pillar lower ground point at right side of main harness