


# Lighting System

## High/Low Beam Light

### Circuit Diagram (Page 1 of 2)

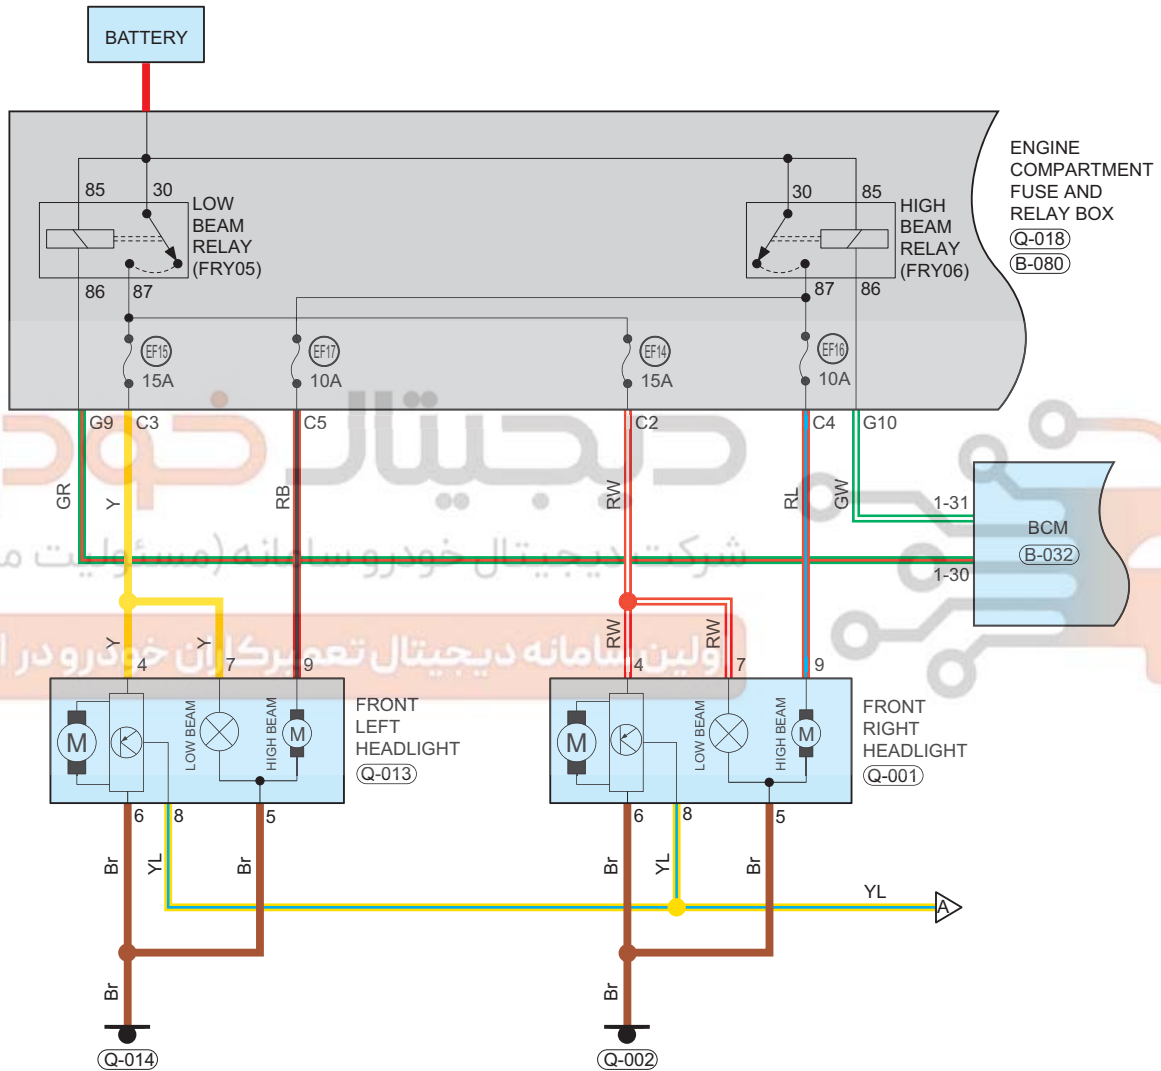

## 09 - SYSTEM CIRCUITS

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-018	08-6	B-080	08-12	Q-013	08-6
Q-014	08-6	B-032	08-12	Q-053	08-6
Q-002	08-6				

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF15	06-2	Engine Compartment Fuse and Relay Box
EF17	06-2	Engine Compartment Fuse and Relay Box
EF14	06-2	Engine Compartment Fuse and Relay Box
EF16	06-2	Engine Compartment Fuse and Relay Box
High Beam Relay (ERLY06)	06-2	Engine Compartment Fuse and Relay Box
Low Beam Relay (ERLY05)	06-2	Engine Compartment Fuse and Relay Box

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-018	12-17	B-080	12-7	Q-013	12-17
Q-014	12-17	B-032	12-7	Q-053	12-17
Q-002	12-17				

Circuit Diagram (Page 2 of 2)

