



Door Lock

Circuit Diagram (Page 1 of 3)

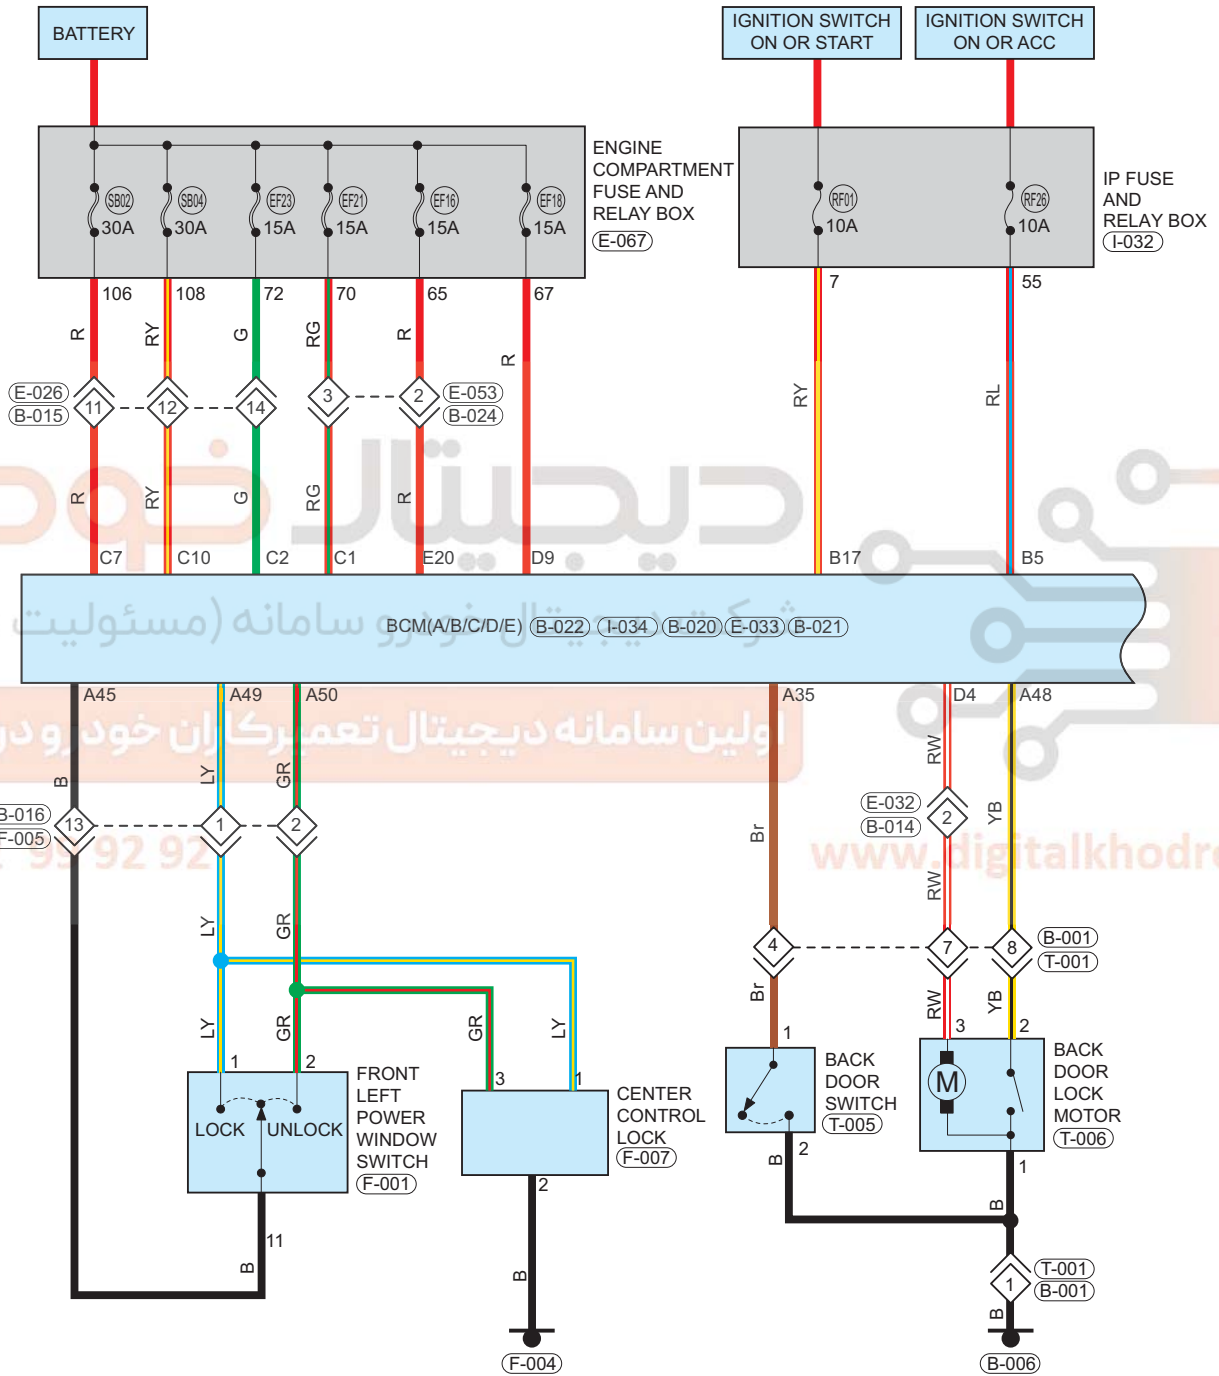

02 09

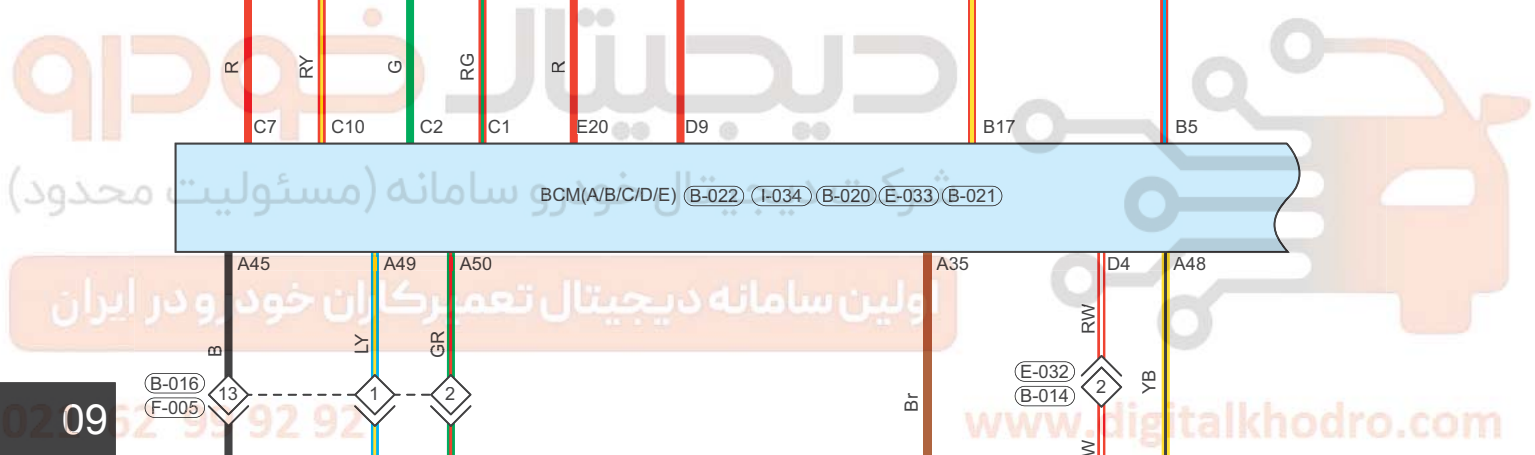

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	I-032	08-10	B-022	08-12
I-034	08-10	B-021	08-12	B-020	08-12
E-033	08-5 (MT) 08-7 (AT)	F-001	08-14	F-007	08-14
F-004	08-14	T-005	08-18	T-006	08-18
B-006	08-12				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF16	06-2	Engine Compartment Fuse and Relay Box
EF18	06-2	Engine Compartment Fuse and Relay Box
EF21	06-2	Engine Compartment Fuse and Relay Box
EF23	06-2	Engine Compartment Fuse and Relay Box
SB02	06-2	Engine Compartment Fuse and Relay Box
SB04	06-2	Engine Compartment Fuse and Relay Box
RF01	06-10	IP Fuse and Relay Box
RF26	06-10	IP Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-026, B-015	08-5, 08-12 (MT) 08-7, 08-12 (AT)	E-053, B-024	08-5, 08-12 (MT) 08-7, 08-12 (AT)	B-016, F-005	08-12, 08-14
E-032, B-014	08-5, 08-12 (MT) 08-7, 08-12 (AT)	B-001, T-001	08-12, 08-18		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	I-032	12-9	B-022	12-11
I-034	12-9	B-021	12-11	B-020	12-11
E-033	12-3	F-001	12-13	F-007	12-13
F-004	12-13	T-005	12-15	T-006	12-15
B-006	12-10	E-026, B-015	12-3	E-053, B-024	12-5
B-016, F-005	12-11	E-032, B-014	12-3	B-001, T-001	12-10

Circuit Diagram (Page 2 of 3)

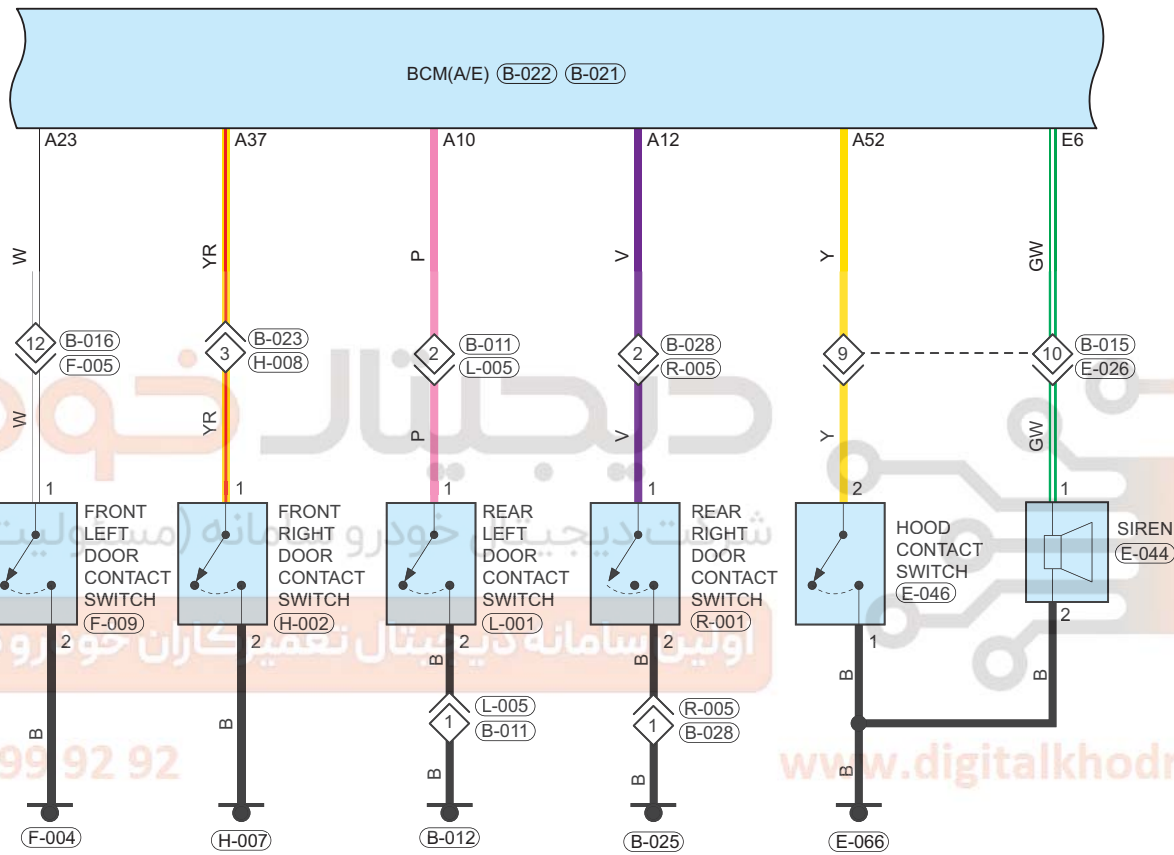

02 09

www.digitalkhodro.com

EA13T090600

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-022	08-12	B-021	08-12	F-009	08-14
F-004	08-14	H-002	08-15	H-007	08-15
L-001	08-16	B-012	08-12	B-025	08-12
R-001	08-17	E-046	08-5 (MT) 08-7 (AT)	E-066	08-5 (MT) 08-7 (AT)
E-044	08-5 (MT) 08-7 (AT)				


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-016, F-005	08-12, 08-14	B-023, H-008	08-12, 08-15	B-011, L-005	08-12, 08-16
B-028, R-005	08-12, 08-17	B-015, E-026	08-12, 08-5 (MT) 08-12, 08-7 (AT)		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-022	12-11	B-021	12-11	F-009	12-13
F-004	12-13	H-002	12-13	H-007	12-13
L-001	12-14	B-012	12-10	B-025	12-12
R-001	12-14	E-046	12-4	E-066	12-5
E-044	12-4	B-028, R-005	12-12	B-015, E-026	12-11
B-016, F-005	12-11	B-023, H-008	12-12	B-011, L-005	12-10

Circuit Diagram (Page 3 of 3)

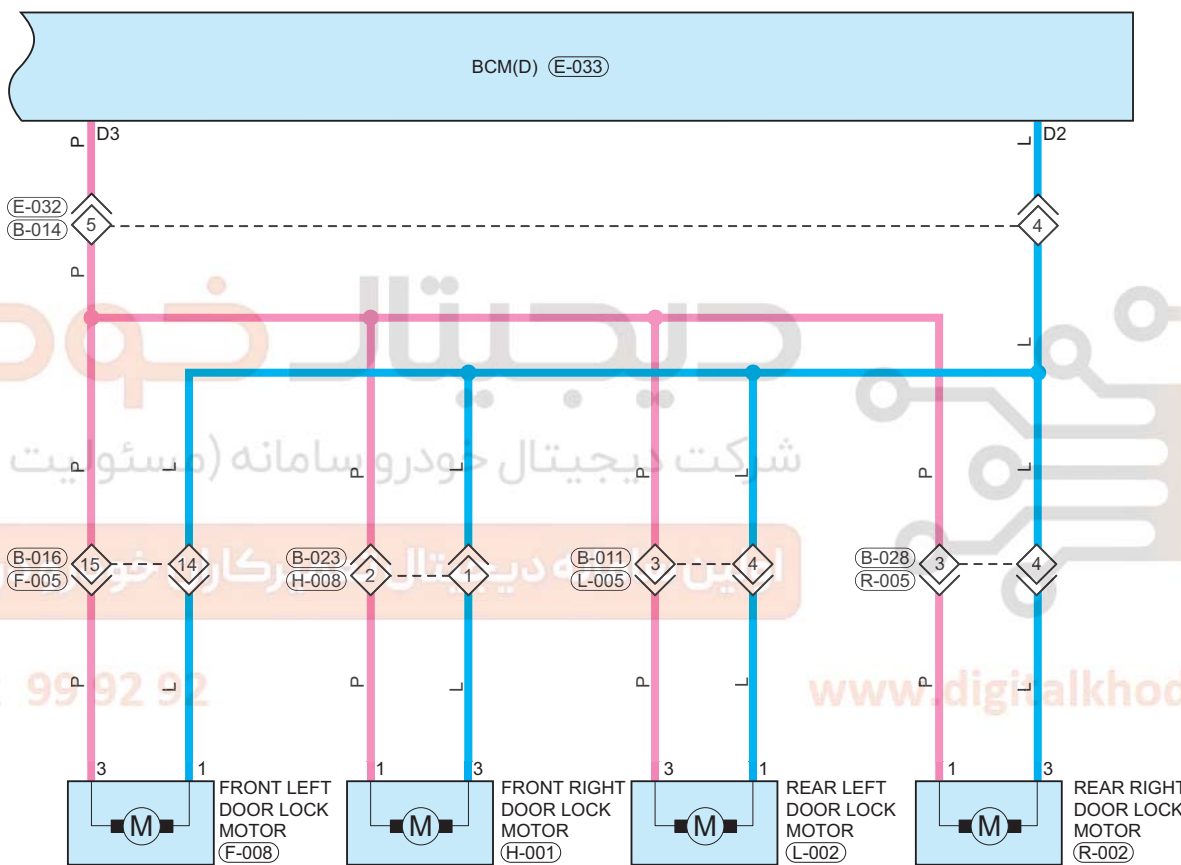

02 09

www.digitalkhodro.com

EA13T090610