


Parking assist module 1

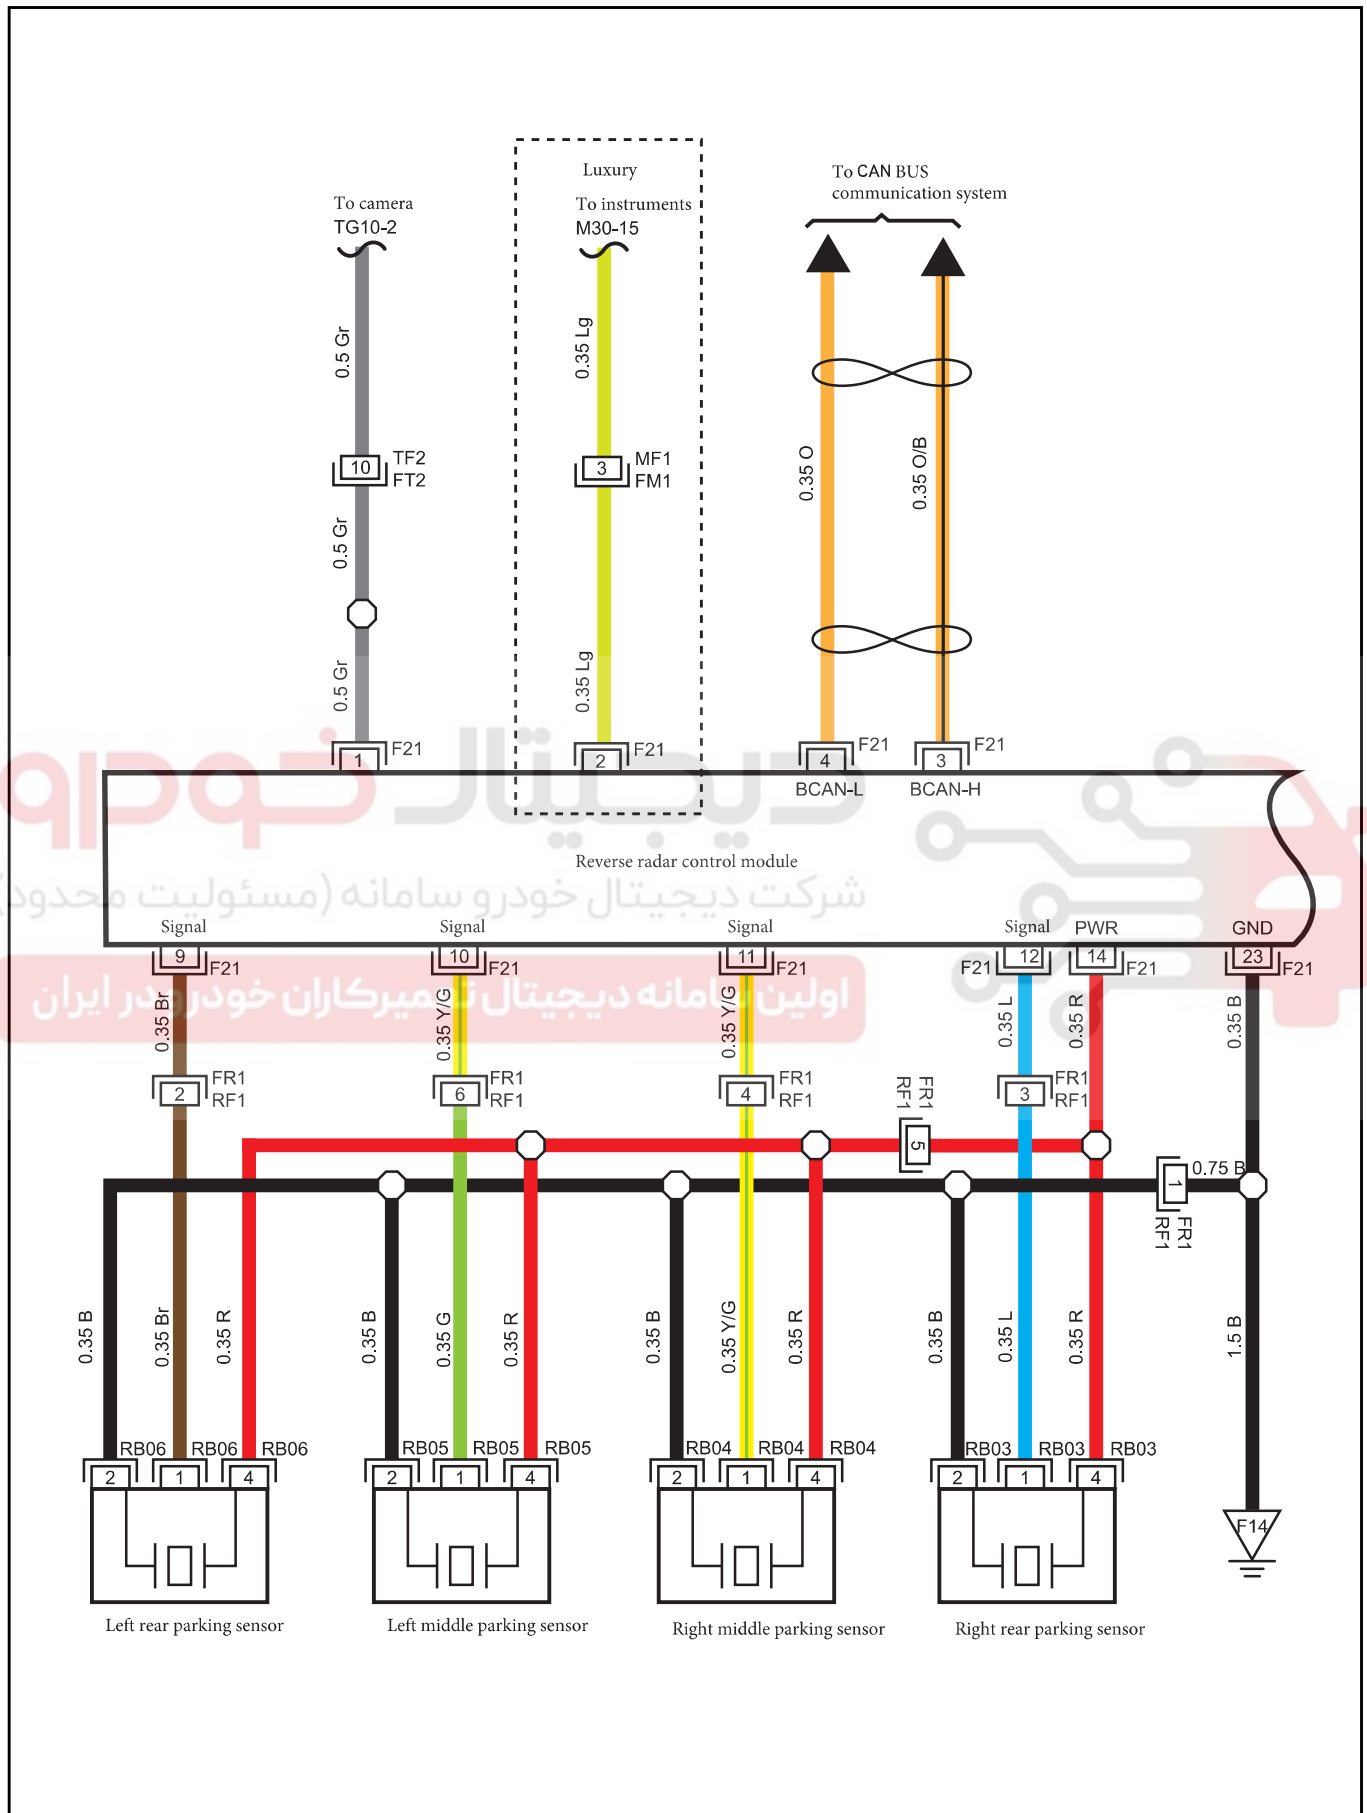

Harness connector	Name	Page
F21	Reverse radar control module harness connector	45
FM1	Body harness to main harness harness connector 1	43
MF1	Main harness to body harness harness connector 1	26
FR1	Body harness to reverse radar harness connector 1	45
RF1	Reverse radar to body harness harness connector 1	39
RB06	Left middle reverse radar sensor harness connector	39
RB05	Left middle reverse radar sensor harness connector	39
RB04	Right middle reverse radar sensor harness connector	39
RB03	Right rear reverse radar sensor harness connector	39
RB02	Right reverse light harness connector	39
RB01	Left reverse light harness connector	39
F45	Ground	64
F14	Ground	64


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Parking assist module 2

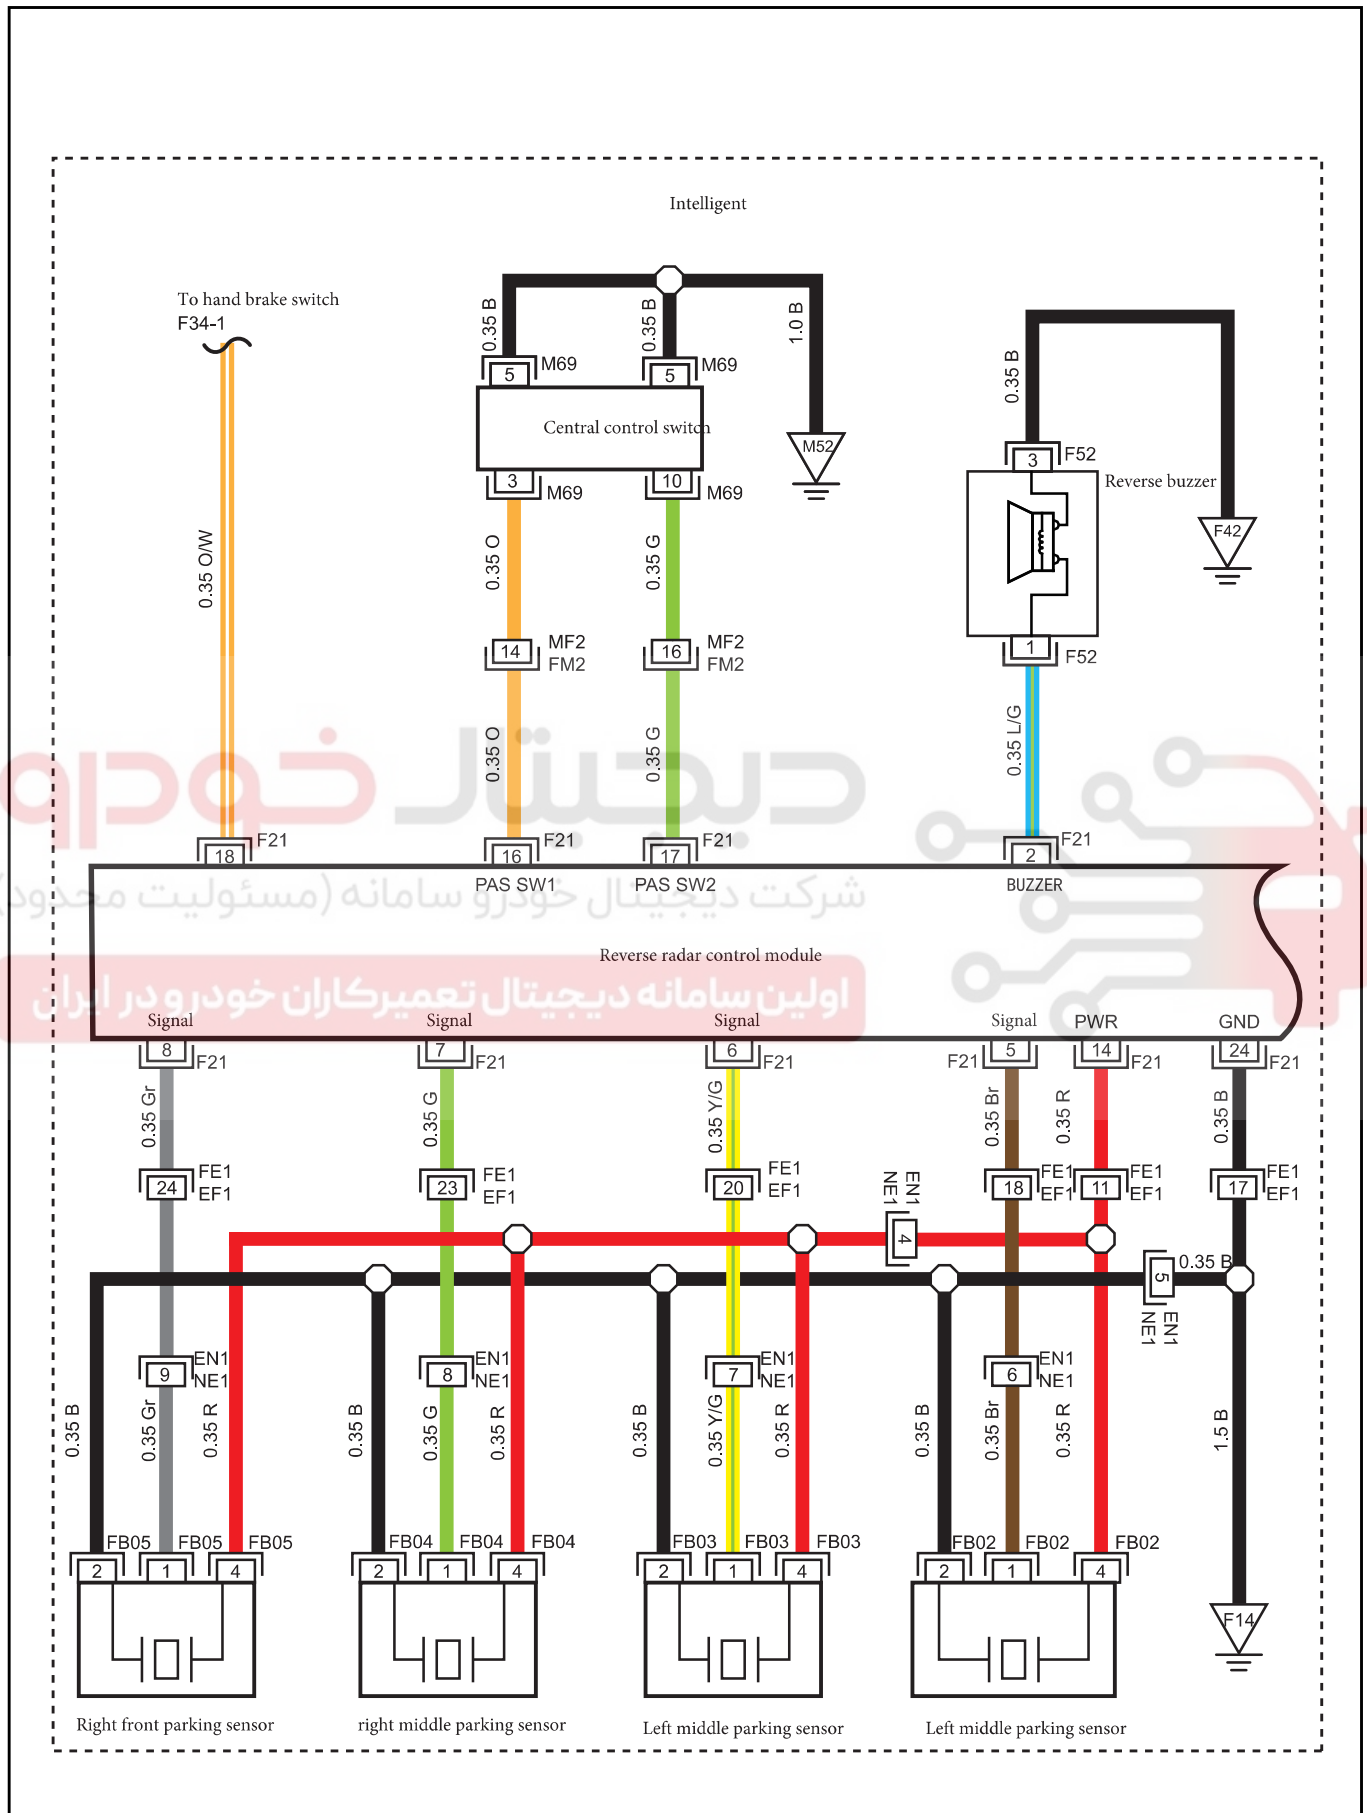

Harness connector	Name	Page
F21	Reverse radar control module harness connector	45
F52	Reverse buzzer harness connector	46
FE1	Body harness to engine harness connector 1	45
EF1	Engine harness to body harness connector 1	17
EN1	Engine harness to front bumper harness connector	16
NE1	Front bumper to engine harness connector	42
FB02	Left front reverse radar sensor harness connector	42
FB03	Left middle reverse radar sensor harness connector	42
FB04	Right middle reverse radar sensor harness connector	42
FB05	Right front reverse radar sensor harness connector	42
F14	Ground	64
F42	Ground	64

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

