


电源分配模块 Power Distribution Unit

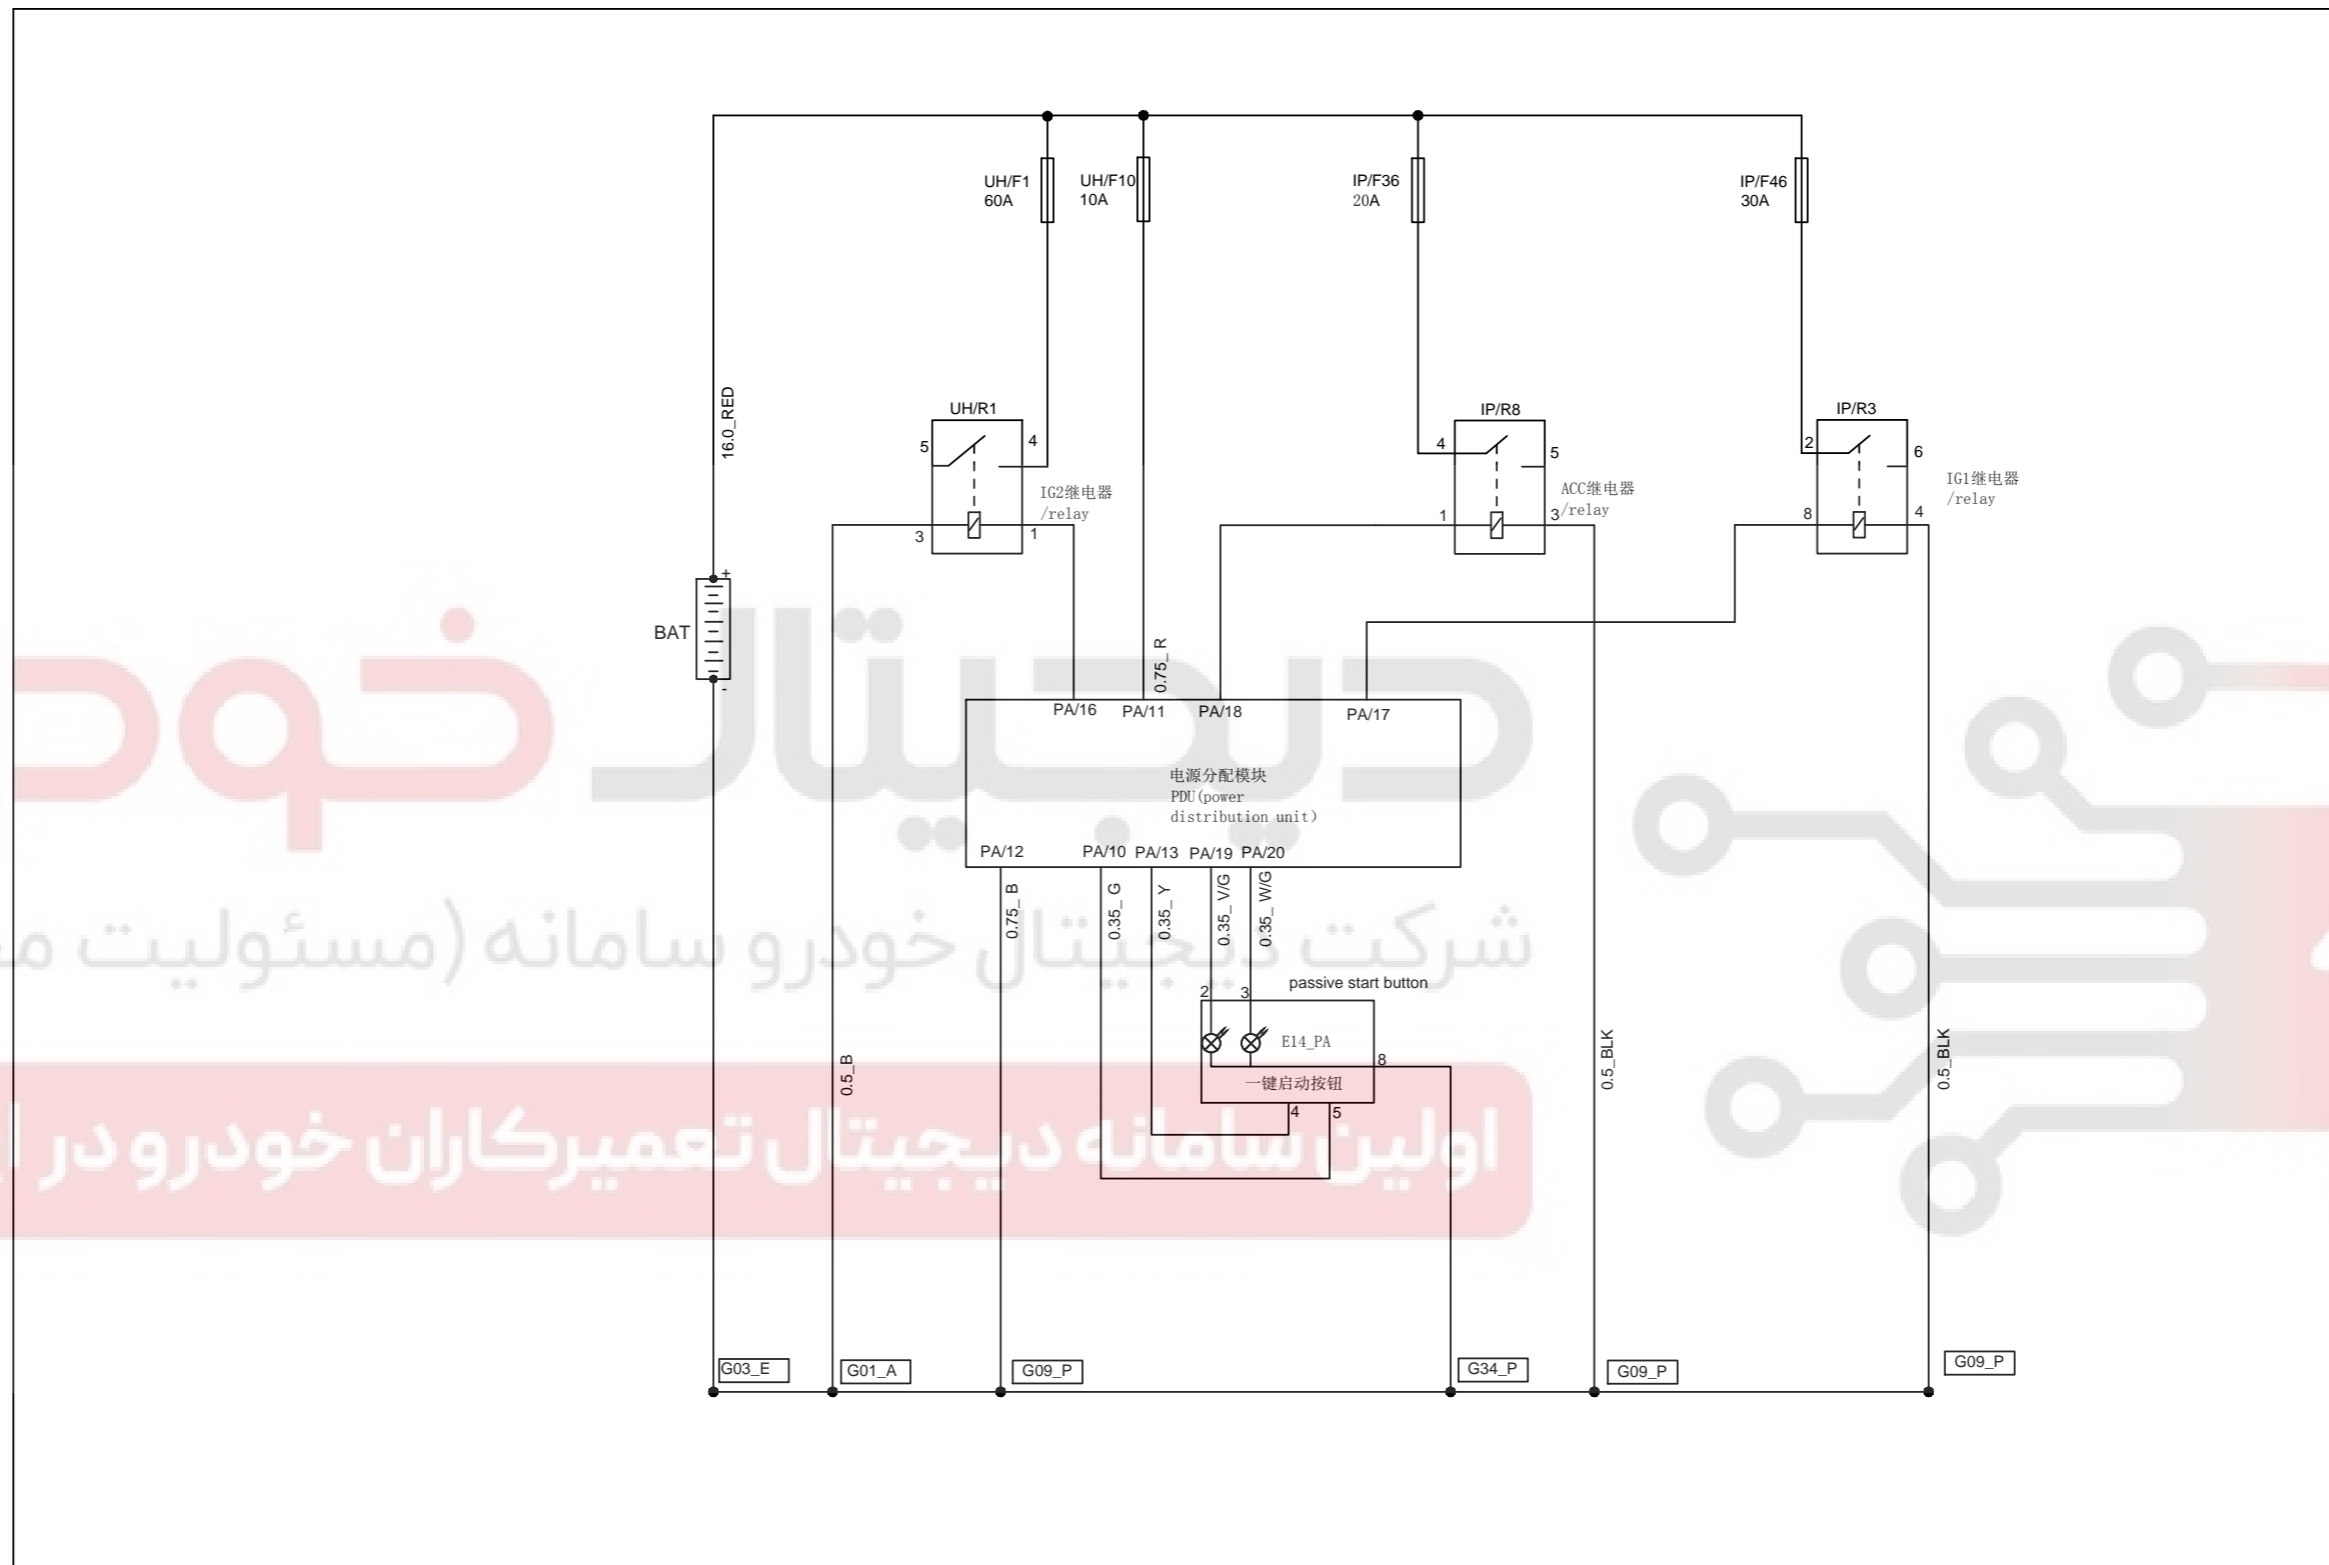

E13-PDU  
 E14-启动按钮  
 D27\_离合器底开关  
 G09\_P - 主线束左侧A 立柱下搭铁点1  
 G34\_P - 气囊ECU搭铁点2

E13-PDU  
 E14-passive start button  
 D27\_clutch switch  
 G09\_P -the ground point at main wire harness left and below pillar A  
 G34\_P -Air bag ECU ground point