


## Power Fuse Box

### Fuse Layout in Power Fuse Box

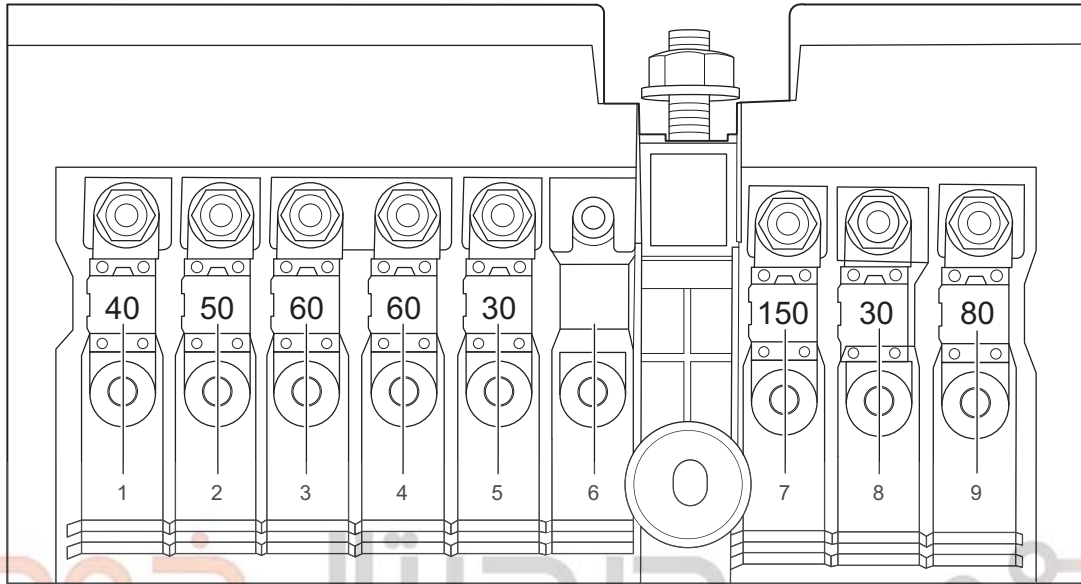

06

شرکت دیجیتال خودرو (مسئولیت محدود)


ET21060010

#### Power Fuse Description

No.	Fuse	Description	No.	Fuse	Description
1	FB01	ABS/ESP	6	FB06	-
2	FB02	High-speed Cooling Fan	7	FB07	Alternator
3	FB03	BCM	8	FB08	Low-speed Cooling Fan
4	FB04	IP Fuse and Relay Box B	9	FB09	EPS
5	FB05	Blower			

# Engine Compartment Fuse and Relay Box

## Location of Engine Compartment Fuse and Relay Box (For 1.5T Model)

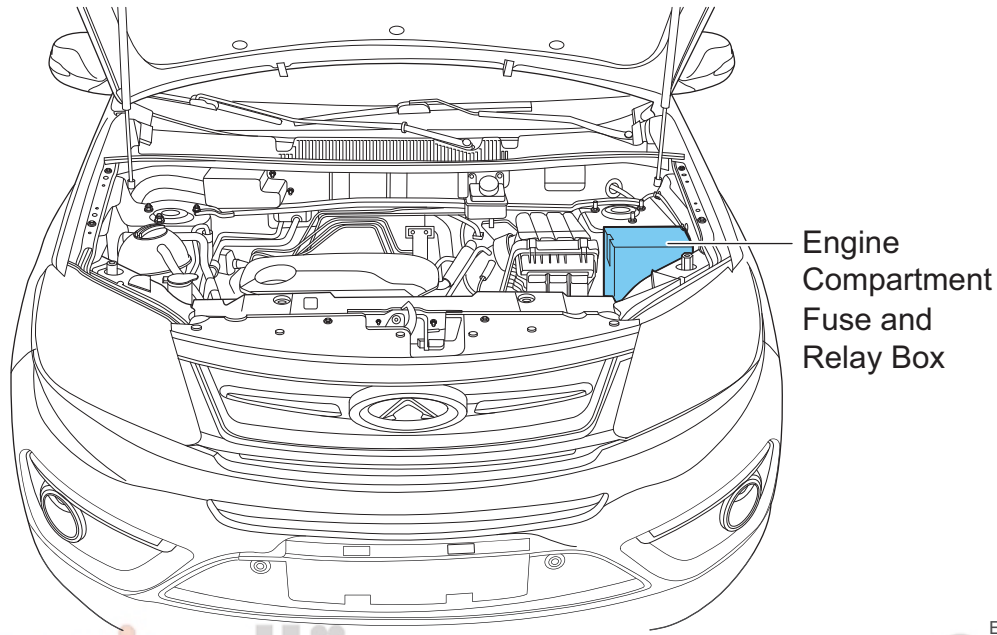


ET21060020

## Fuse and Relay Layout in Engine Compartment Fuse and Relay Box (For 1.5T Model)

06

شرکت دیجیتال خودرو (مسئولیت محدود)

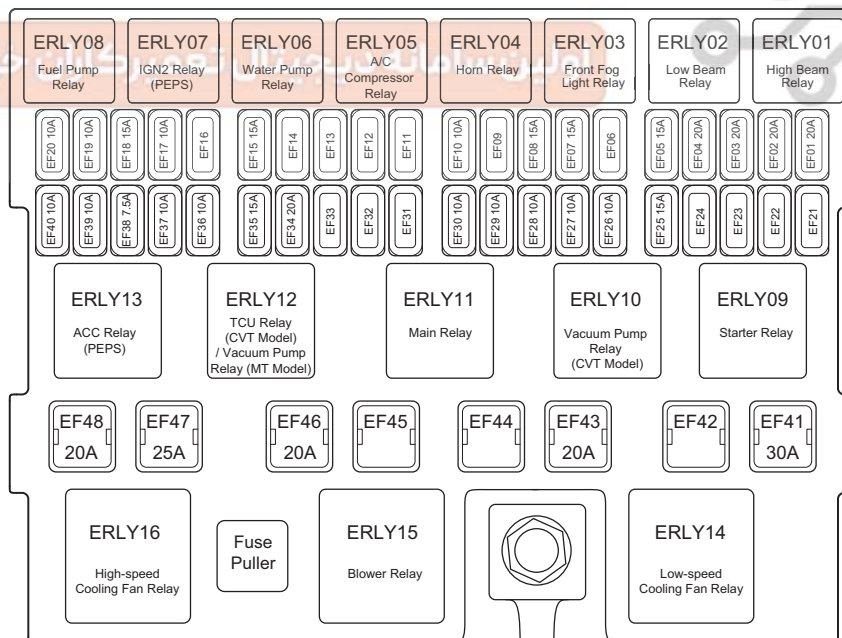


ET21060030

## 06 - FUSE AND RELAY

## Engine Compartment Fuse Description (For 1.5T Model)


No.	Description	No.	Description
EF01	Right Headlight High Beam	EF25	Horn
EF02	Left Headlight High Beam	EF26	Spare
EF03	Right Headlight Low Beam	EF27	Exhaust Gas Valve/Canister
EF04	Left Headlight Low Beam	EF28	Back-up Light Switch (for MT Model)
EF05	Front Fog Light	EF29	Alternator Excitation
EF06	-	EF30	Electronic Water Pump
EF07	Ignition Coil	EF31	-
EF08	Injectors	EF32	-
EF09	-	EF33	-
EF10	A/C Compressor	EF34	IGN Power Supply
EF11	-	EF35	Fuel Pump
EF12	-	EF36	ABS/ESP
EF13	-	EF37	Electronic Heating/High/Low Pressure Switch
EF14	-	EF38	Relay Control
EF15	IGN2	EF39	Oxygen Sensor
EF16	-	EF40	Main Relay
EF17	ECM	EF41	Starter
EF18	Spare	EF42	-
EF19	TCU (for CVT Model)/ECM	EF43	Vacuum Pump (for CVT Model)/Reserve (for MT Model)
EF20	Spare	EF44	-
EF21	-	EF45	-
EF22	-	EF46	TCU (for CVT Model)/Vacuum Pump (for MT Model)
EF23	-	EF47	ABS/ESP
EF24	-	EF48	ACC Relay

Location of Engine Compartment Fuse and Relay Box (For 2.0L Model)

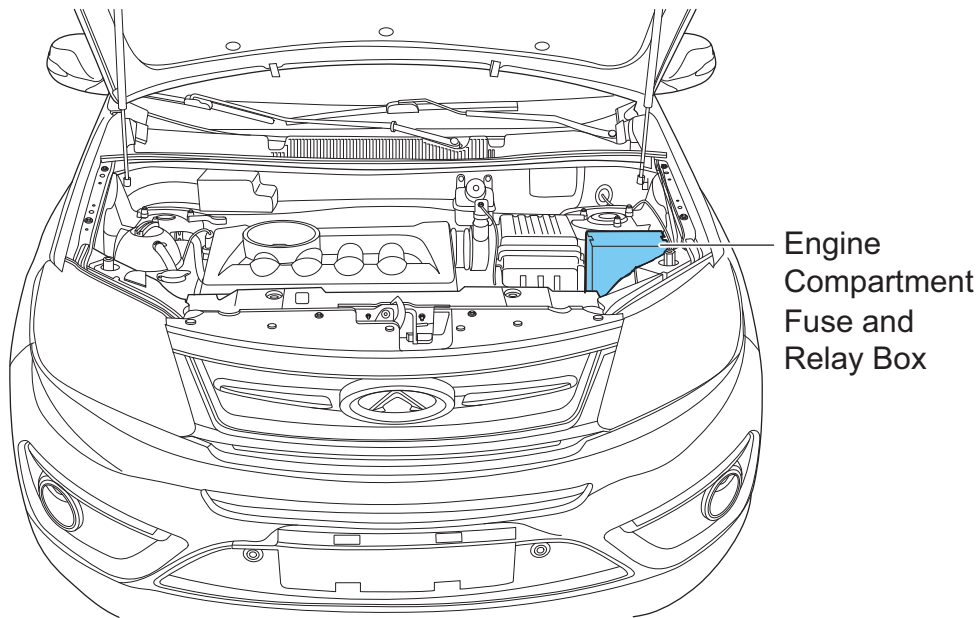

ET21060021

Fuse and Relay Layout in Engine Compartment Fuse and Relay Box (For 2.0L Model)

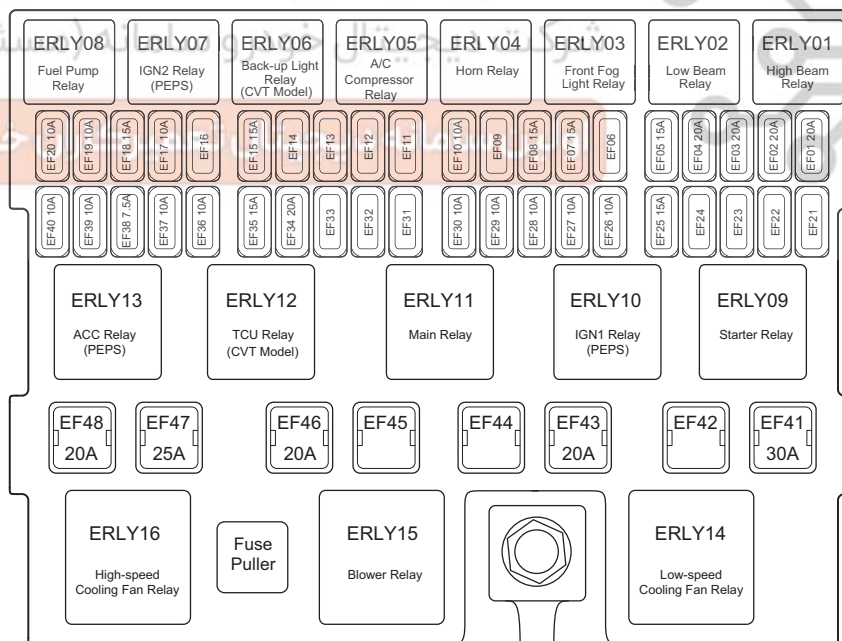

ET21060029


## 06 - FUSE AND RELAY

## Engine Compartment Fuse Description (For 2.0L Model)

No.	Description	No.	Description
EF01	Right Headlight High Beam	EF25	Horn
EF02	Left Headlight High Beam	EF26	Spare
EF03	Right Headlight Low Beam	EF27	Canister
EF04	Left Headlight Low Beam	EF28	Back-up Light Switch (for MT Model)
EF05	Front Fog Light	EF29	Alternator Excitation
EF06	-	EF30	Back-up Light/Reversing Radar (for CVT Model)
EF07	Ignition Coil	EF31	-
EF08	Injectors	EF32	-
EF09	-	EF33	-
EF10	A/C Compressor	EF34	IGN Power Supply
EF11	-	EF35	Fuel Pump
EF12	-	EF36	ABS/ESP
EF13	-	EF37	High/Low Pressure Switch
EF14	-	EF38	Relay Control
EF15	IGN2	EF39	Oxygen Sensor
EF16	-	EF40	Main Relay
EF17	ECM/TCU (for CVT Model)	EF41	Starter
EF18	Spare	EF42	-
EF19	TCU (for CVT Model)/ECM	EF43	IGN1 Relay
EF20	Spare	EF44	-
EF21	-	EF45	-
EF22	-	EF46	TCU (for CVT Model)/Reserve (for MT Model)
EF23	-	EF47	ABS/ESP
EF24	-	EF48	ACC Relay

### View of Engine Compartment Fuse and Relay Box


Front View

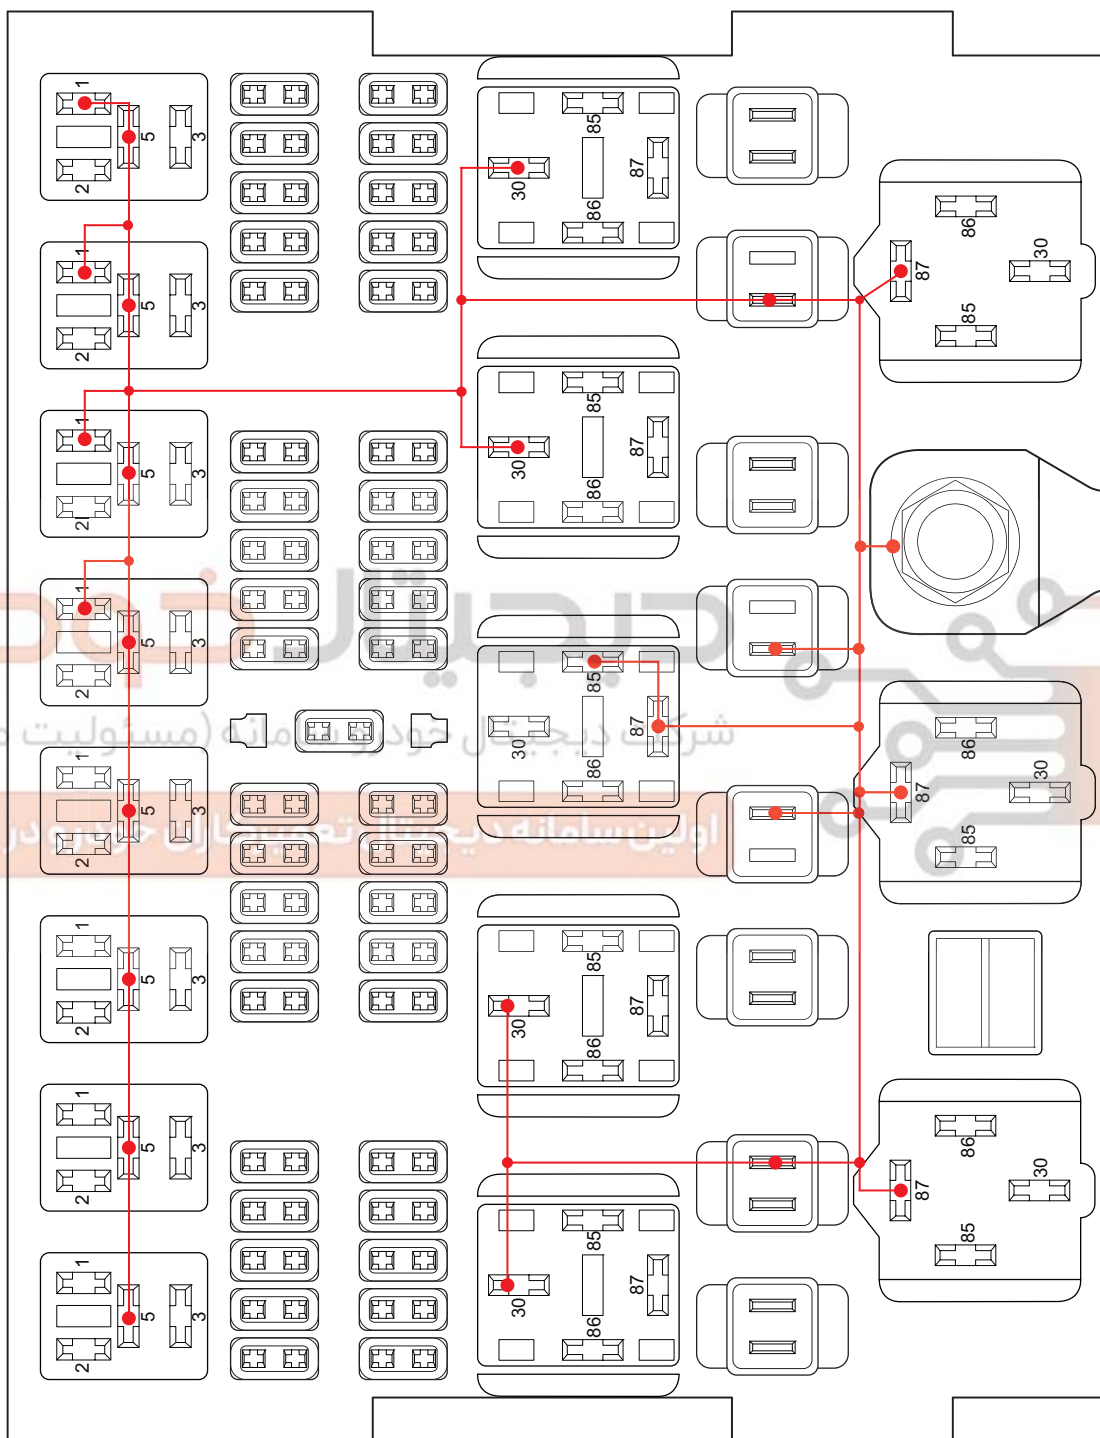

06

ET21060031

Back View

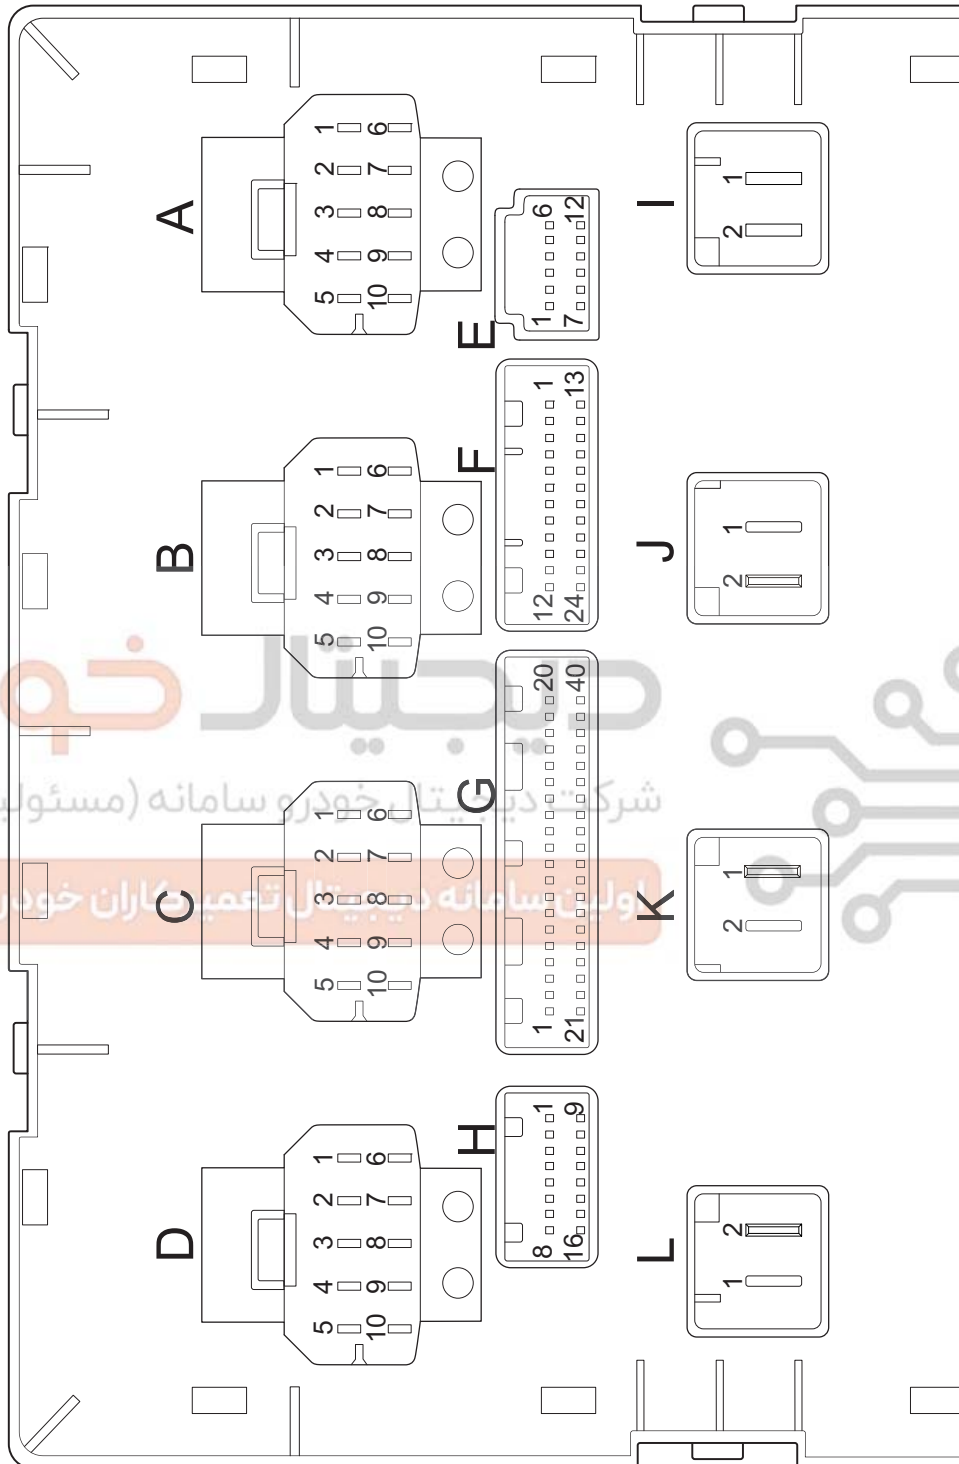

06


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)  
 فولاد سامانه دیجیتال تعمیرکاران خودرو در ایران

ET21060032



### Engine Compartment Fuse and Relay Box Inner Circuit

Circuit Diagram (Page 1 of 4)

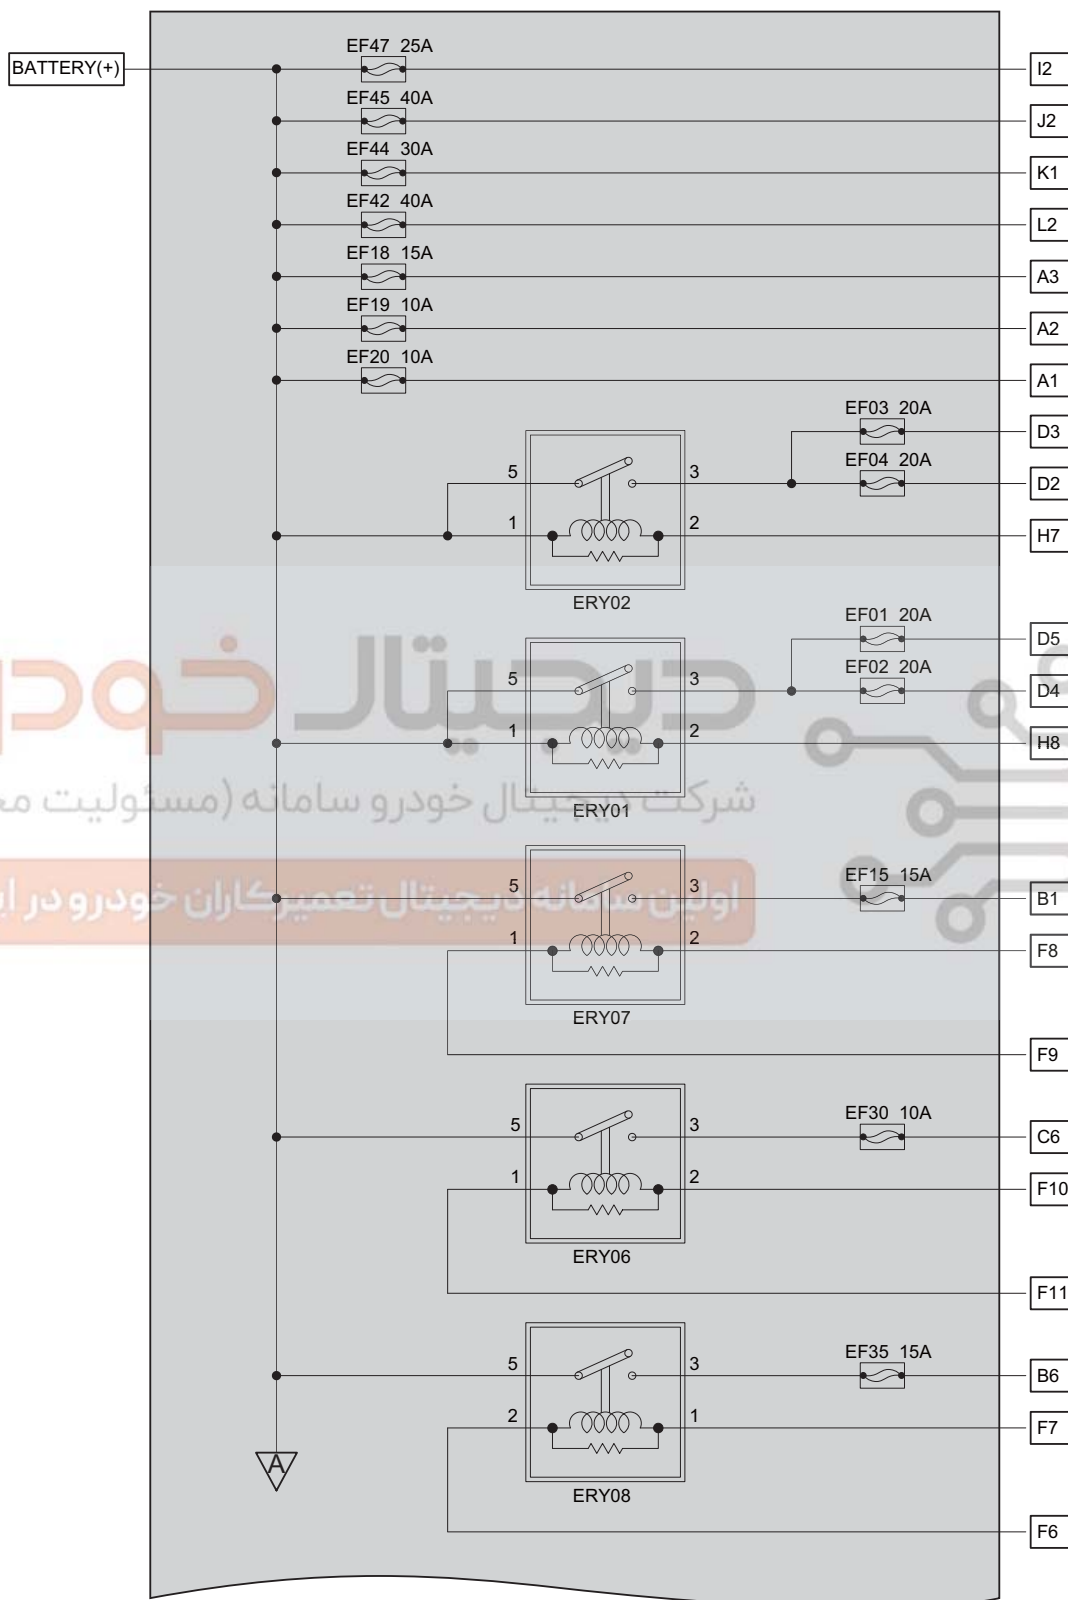


06

شرکت دیجیتال خودرو (مسئولیت محدود)  
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

ET21060033




Circuit Diagram (Page 2 of 4)

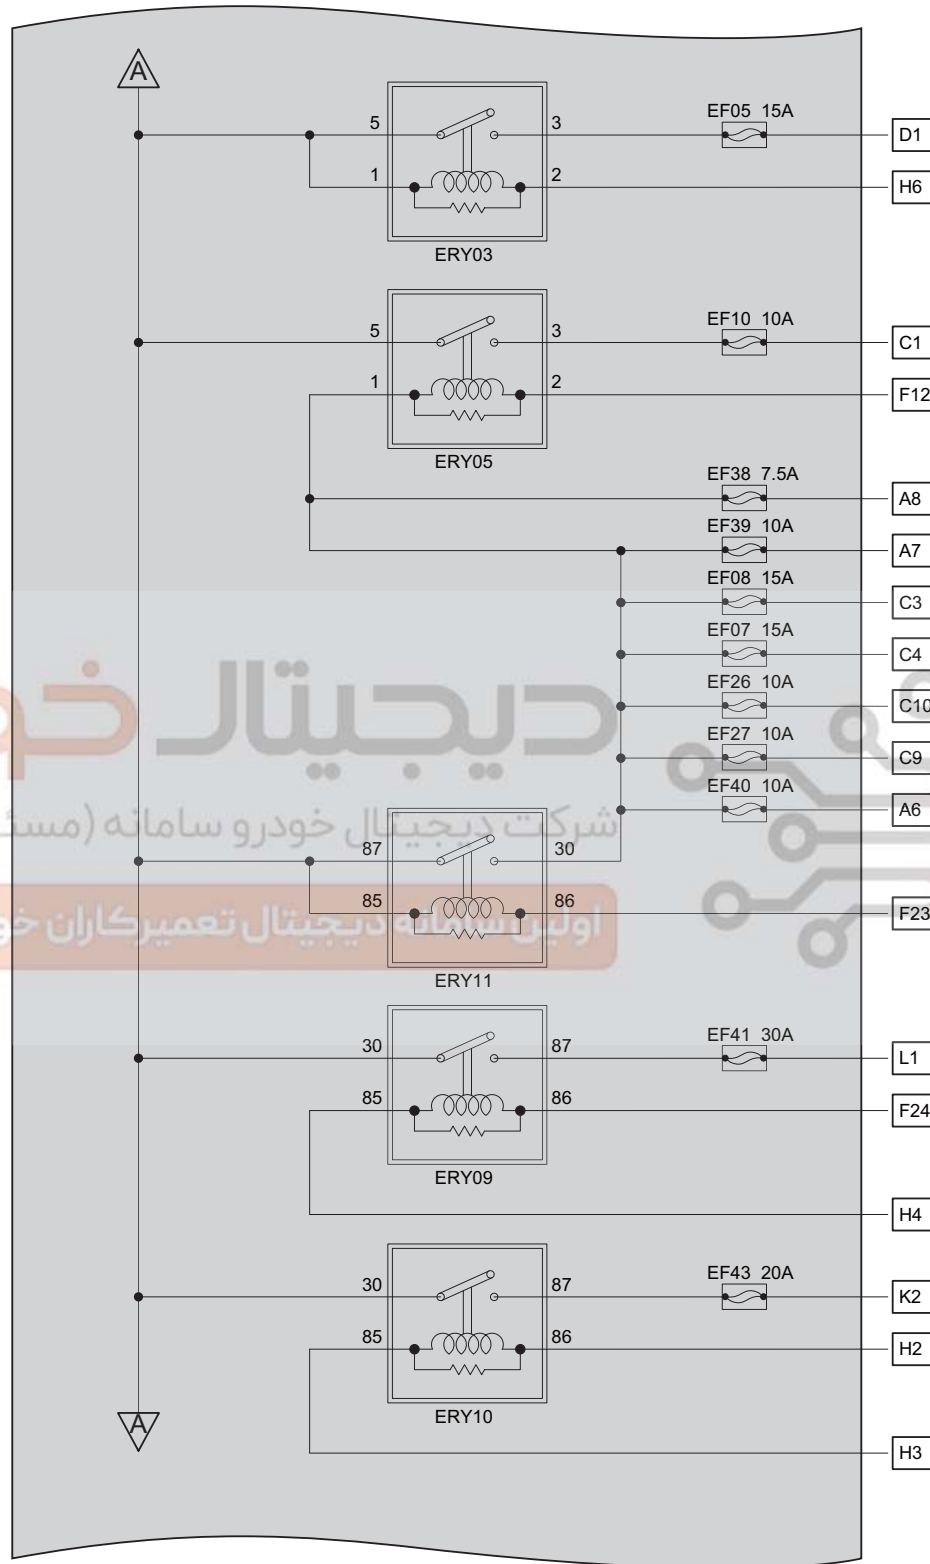


ET21060034

Circuit Diagram (Page 3 of 4)

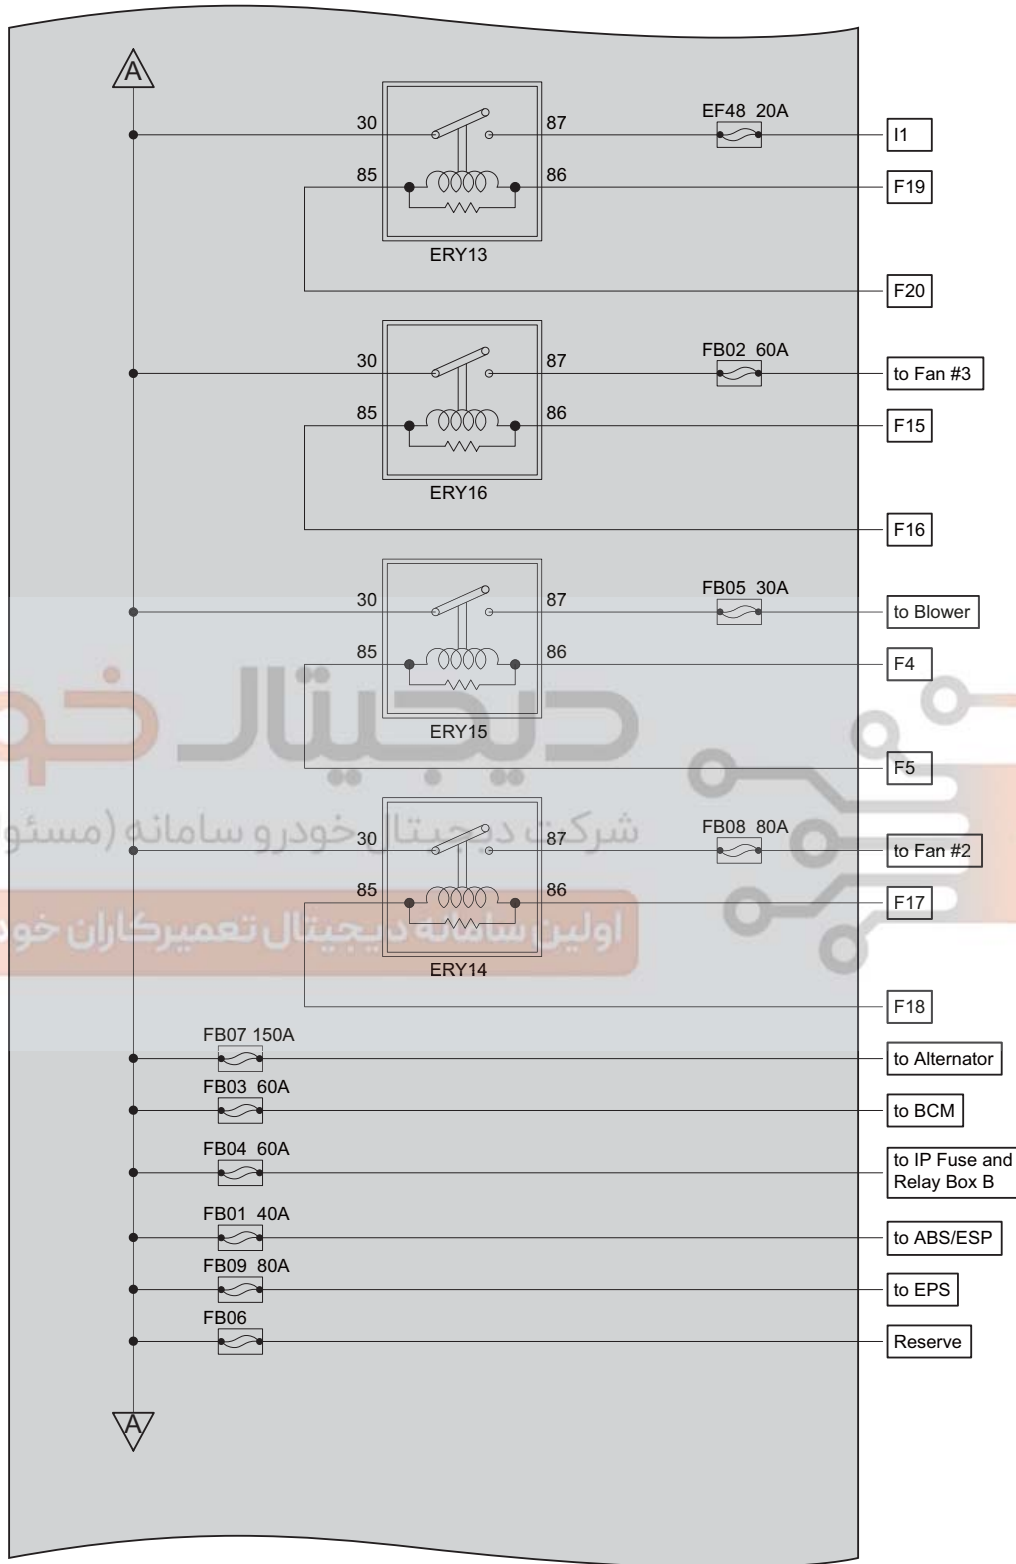

ET21060035

Circuit Diagram (Page 4 of 4)

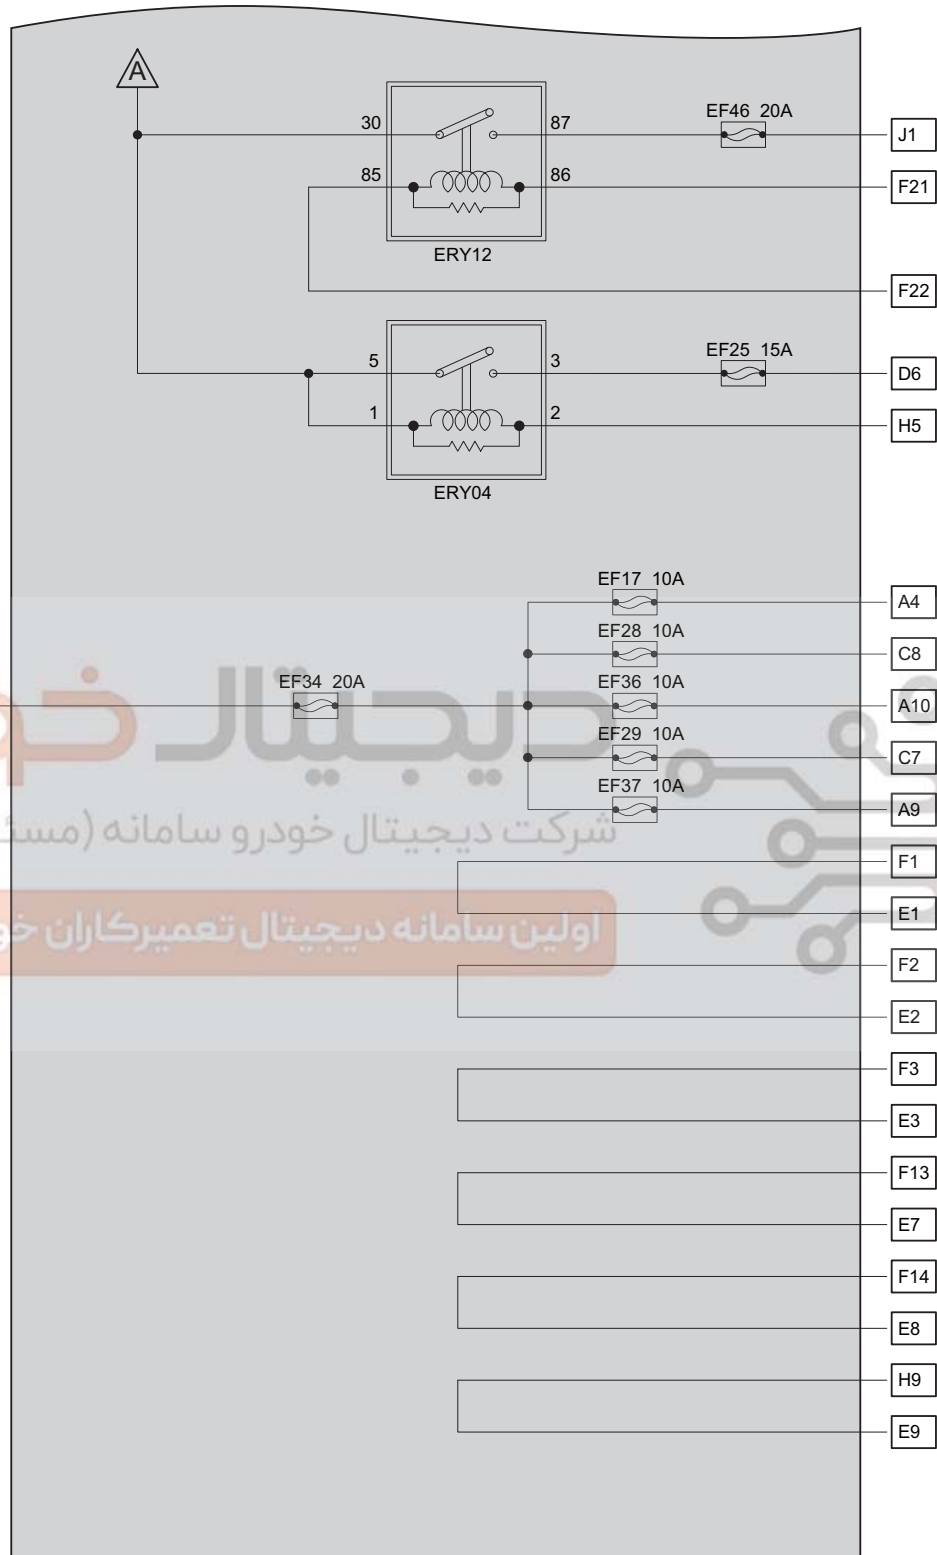

06

دیجیتال خودرو  
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)  
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

ET21060036