


Passive Entry & Passive Start (PEPS) System

Circuit Diagram (Page 1 of 4)

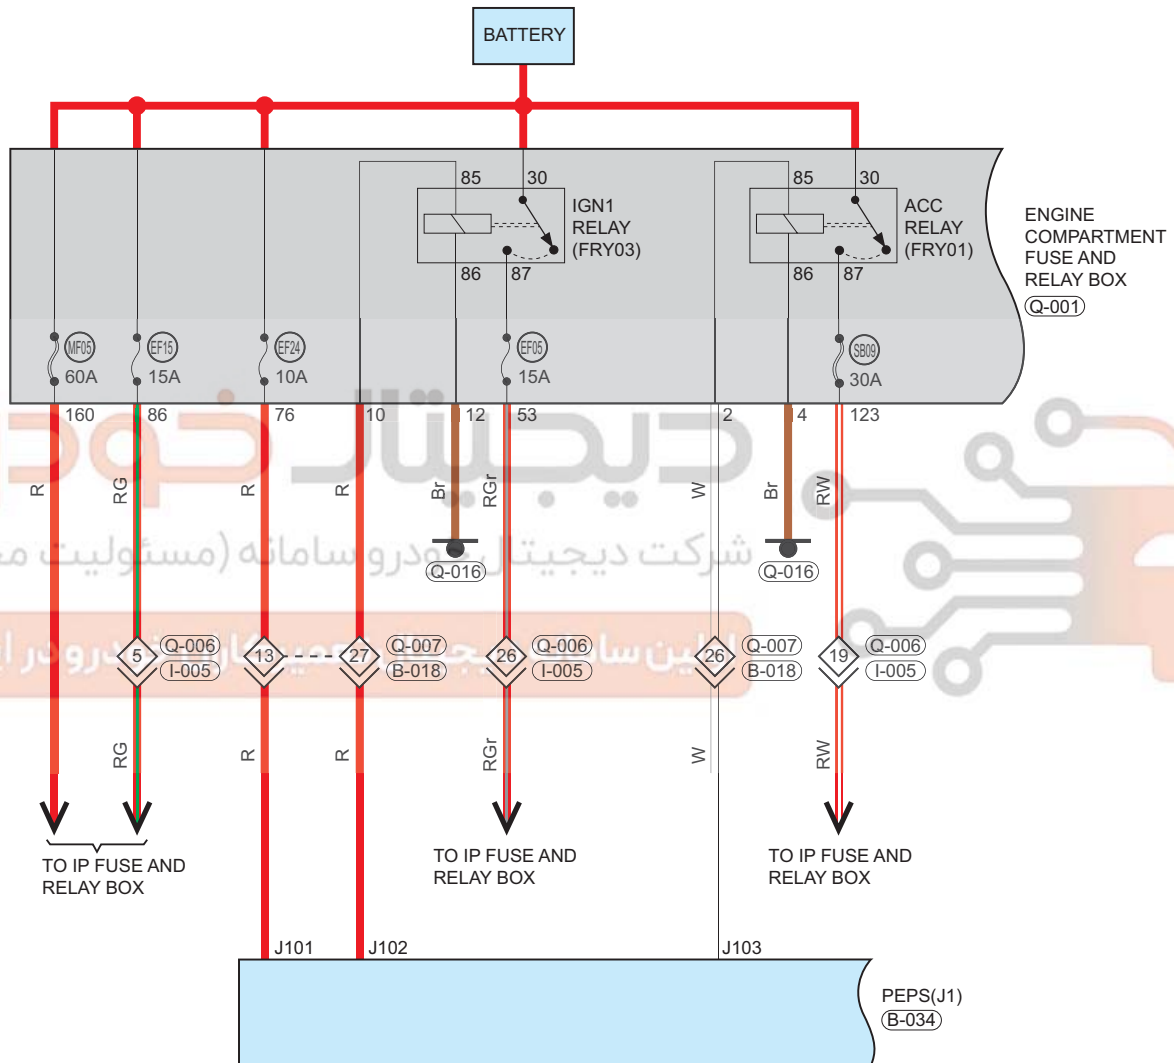

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	Q-016	08-10	B-034	08-36

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF15	06-2	Engine Compartment Fuse and Relay Box
EF24	06-2	Engine Compartment Fuse and Relay Box
EF05	06-2	Engine Compartment Fuse and Relay Box
MF05	06-2	Engine Compartment Fuse and Relay Box
SB09	06-2	Engine Compartment Fuse and Relay Box
FRY03	06-2	Engine Compartment Fuse and Relay Box
FRY01	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-006, I-005	08-10, 08-23	Q-007, B-018	08-10, 08-36		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	Q-016	12-17	B-034	12-8
Q-006, I-005	12-17, 12-4	Q-007, B-018	12-17, 12-8		

Circuit Diagram (Page 2 of 4)

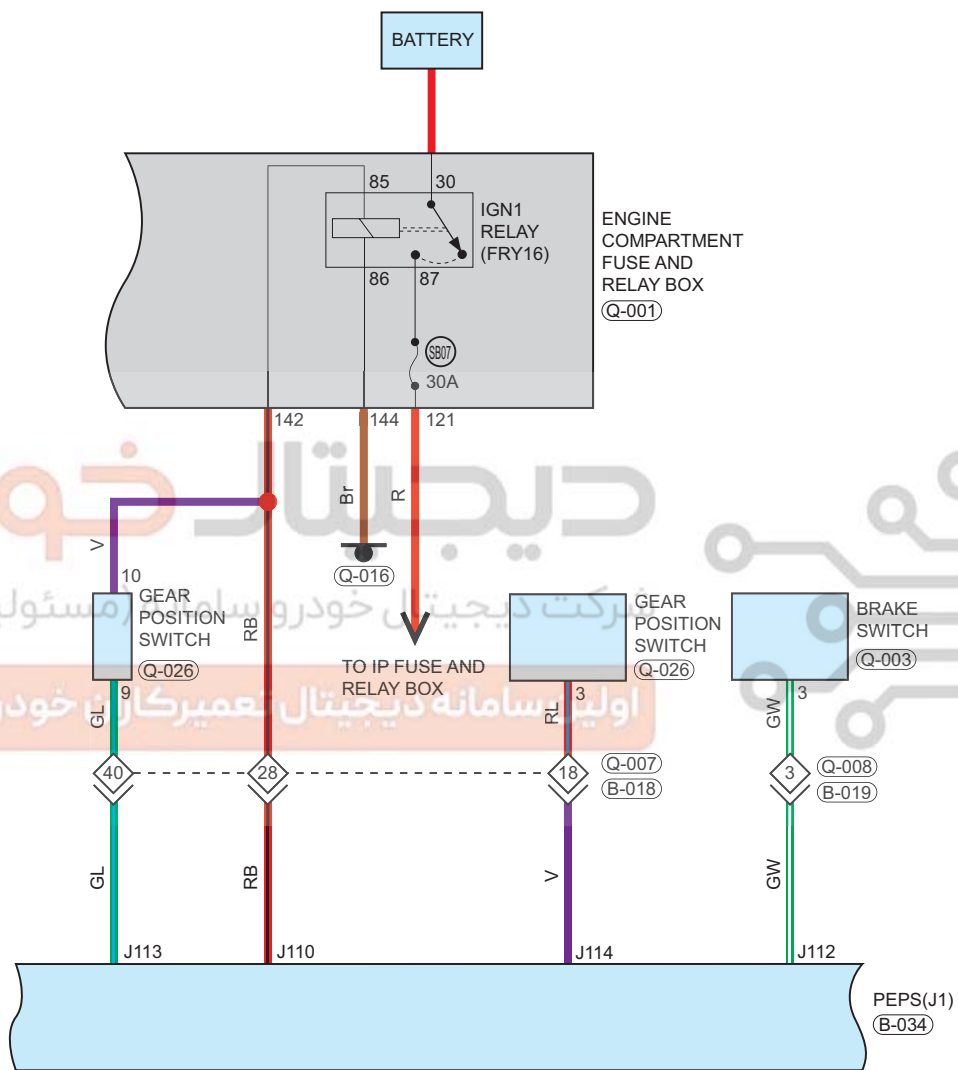

09

PEE002001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	Q-026	08-10	Q-003	08-10
B-034	08-36				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
SB07	06-2	Engine Compartment Fuse and Relay Box
FRY16	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-008, B-019	08-10, 08-36	Q-007, B-018	08-10, 08-36		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	Q-026	12-17	Q-003	12-17
B-034	12-8	Q-007, B-018	12-17, 12-8	Q-008, B-019	12-17, 12-8

Circuit Diagram (Page 3 of 4)

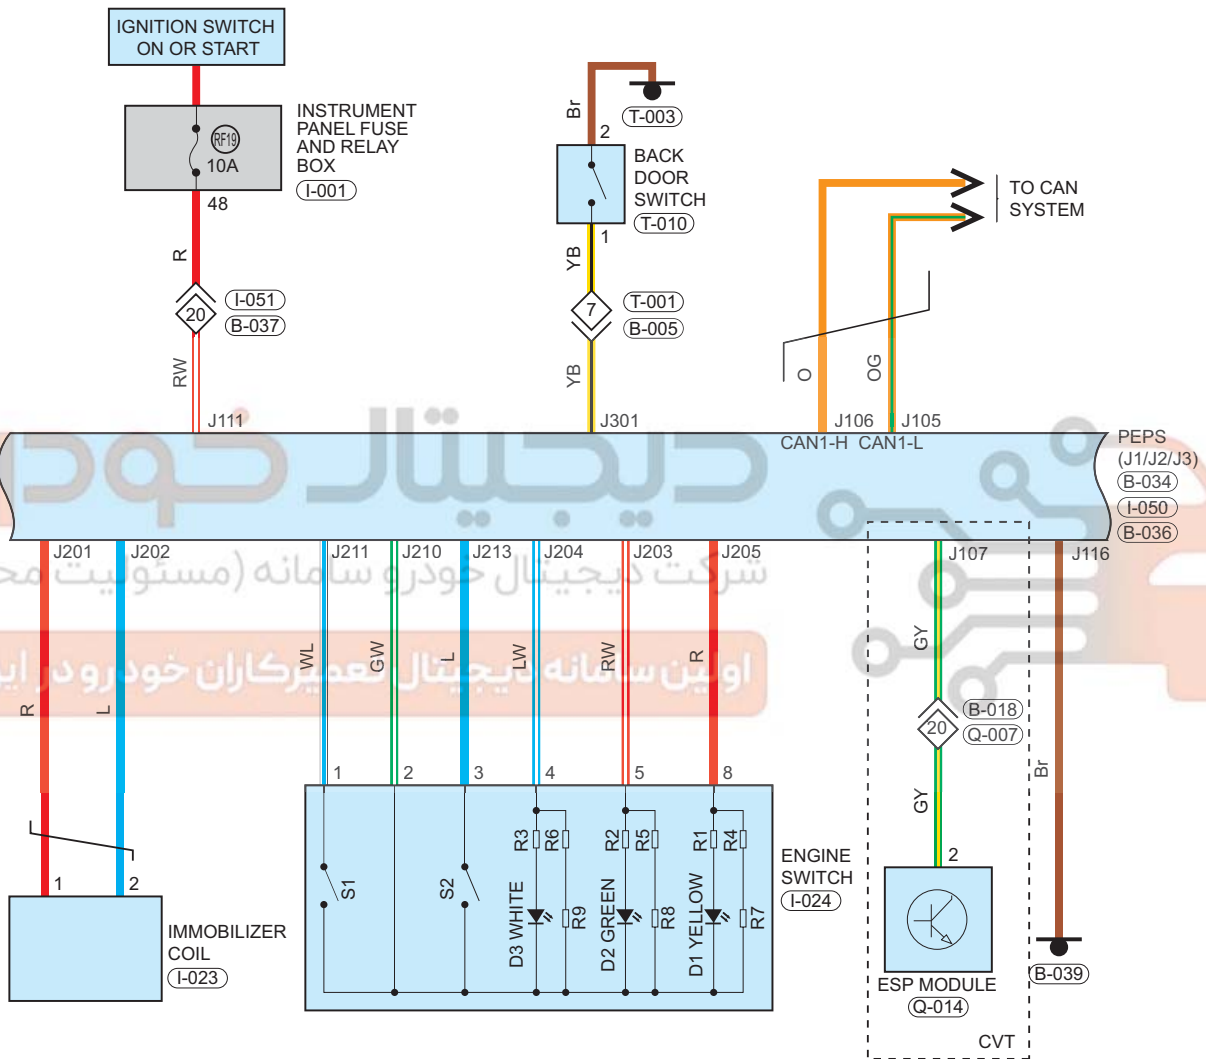

09

PEE003001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-23	T-010	08-60	B-034	08-36
I-005	08-23	B-036	08-36	I-023	08-23
I-024	08-23	Q-014	08-10	B-039	08-36

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF19	06-8	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001, B-037	08-23, 08-36	T-001, B-005	08-60, 08-36	B-018, Q-007	08-36, 08-10

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	T-010	12-16	B-034	12-8
I-005	12-4	B-036	12-8	I-023	12-4
I-024	12-4	Q-014	12-17	B-039	12-8
I-001, B-037	12-4, 12-8	T-001, B-005	12-16, 12-8		

Circuit Diagram (Page 4 of 4)

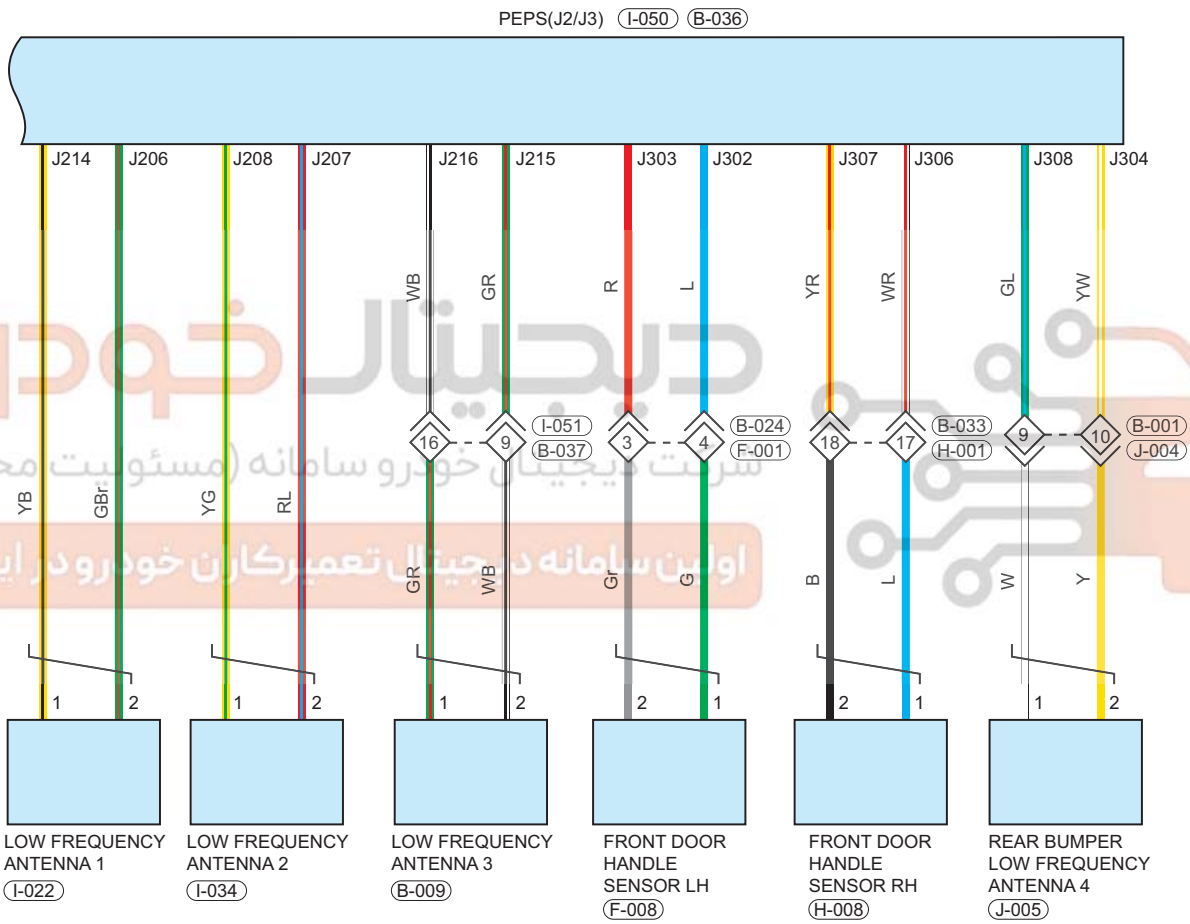

09

PEE004001