
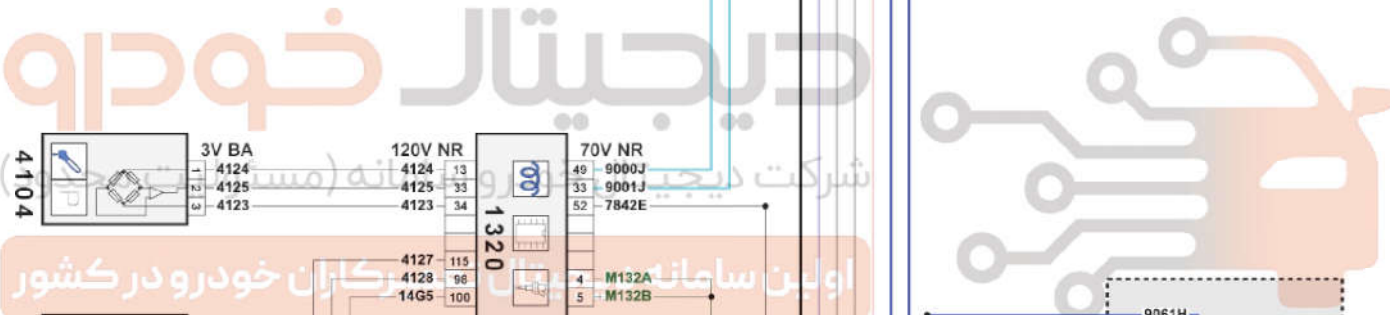


Engine Oil Information

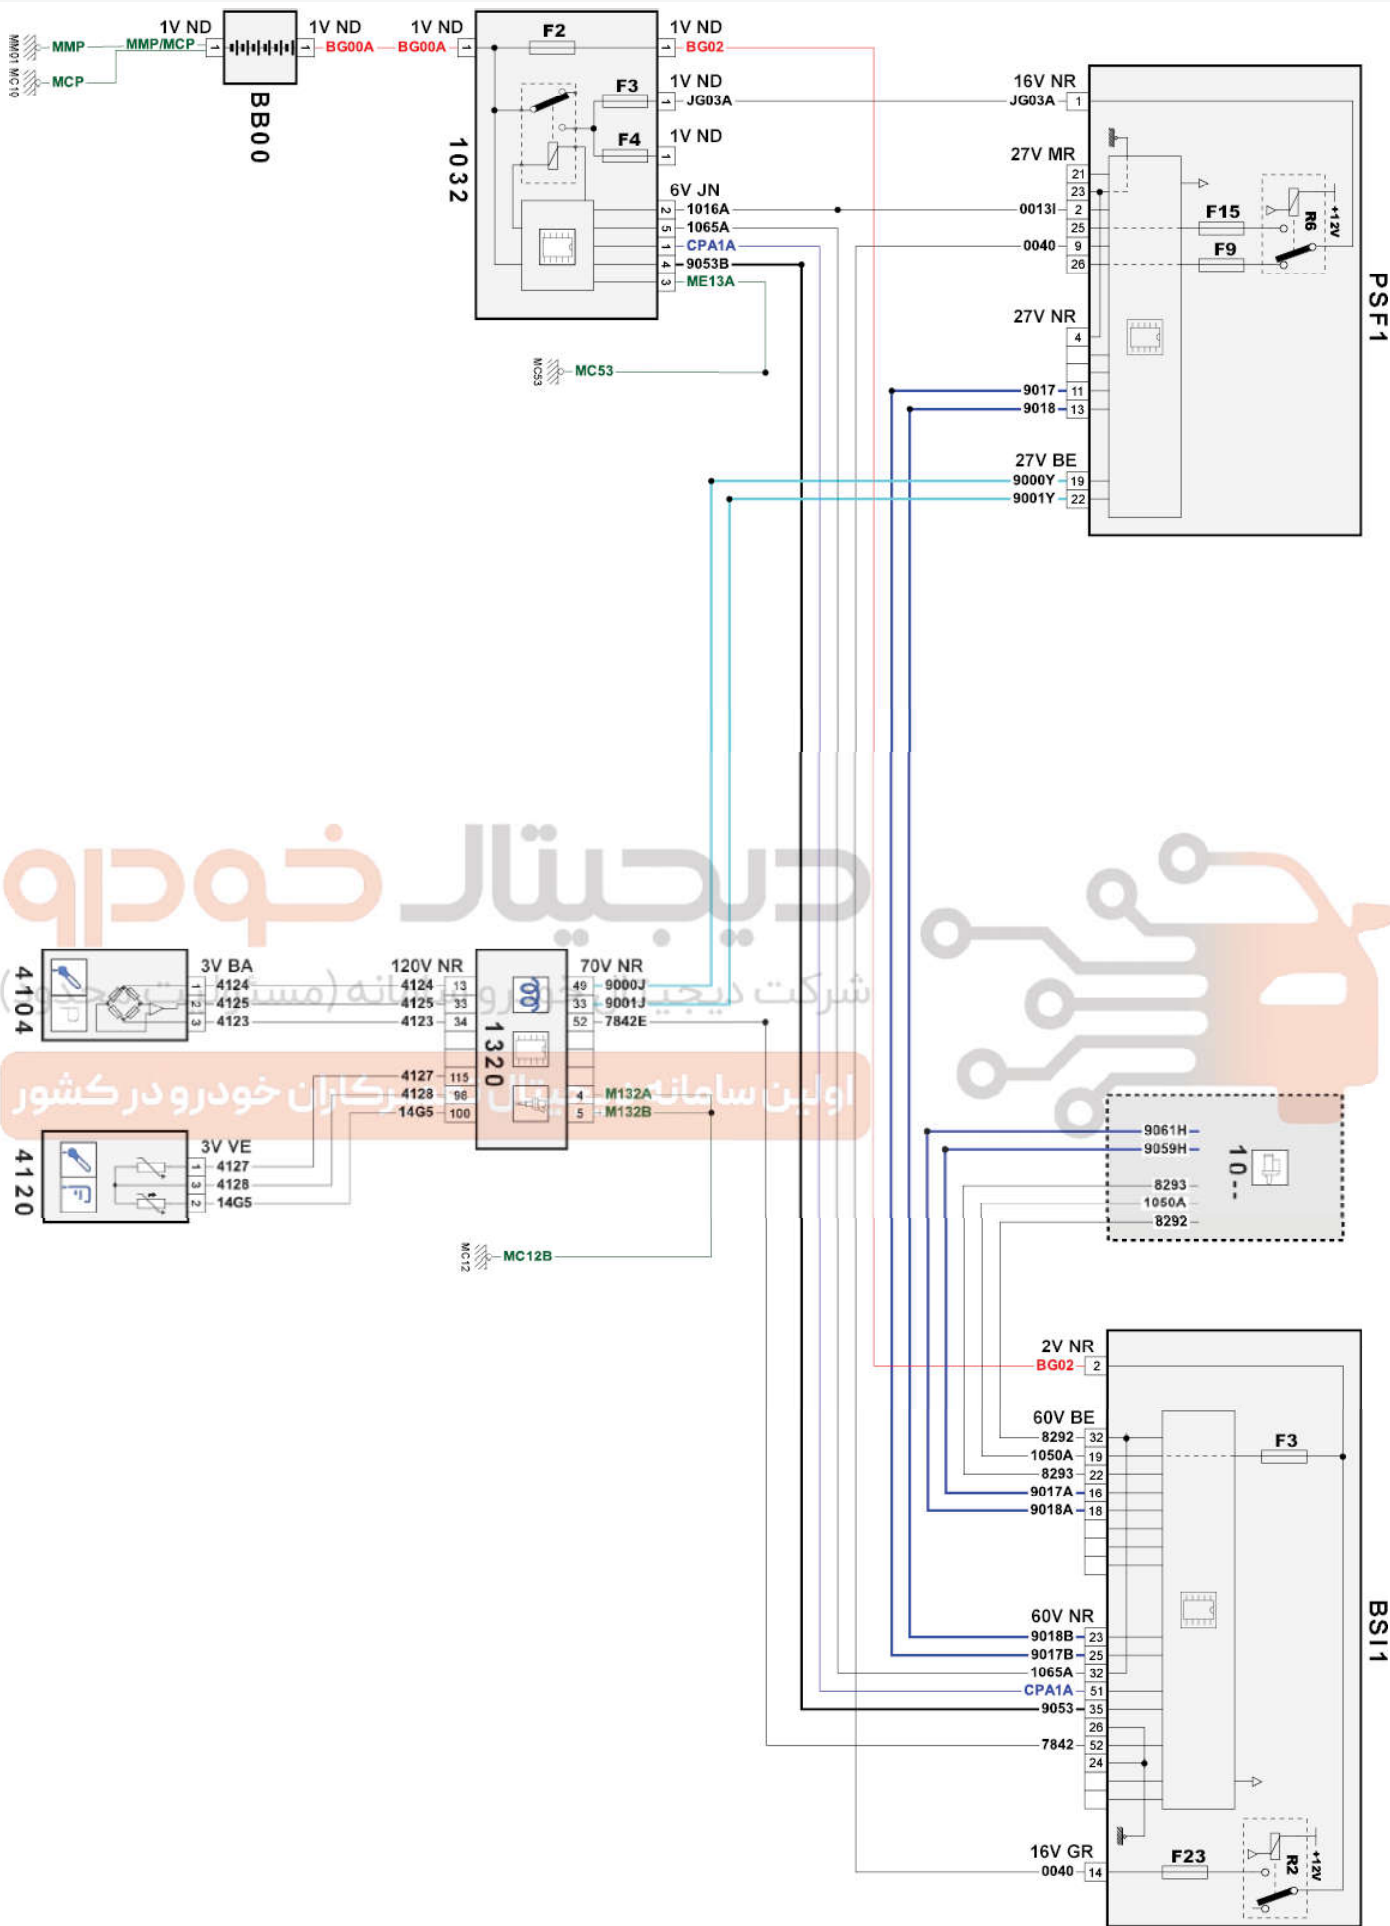

Engine Oil Information

item code	description	information
1032	null	electrical supplies protection and management unit
1320	null	engine ECU /
4104	null	engine oil pressure sensor
4120	null	engine oil level sensor /
AE00	null	electric steering lock
BB00	null	ancillaries battery
BSI1	null	built-in systems interface
CA00	null	ignition switch
E013	null	crimp one information (or equipotential 0013) wire
E784	null	crimp one information (or equipotential 784) wire
E900A	null	crimp one information (or equipotential 276A) wire
E901A	null	crimp one information (or equipotential 901A) wire
E917	null	crimp one information (or equipotential 917) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918	null	crimp one information (or equipotential 918) wire
E918A	null	crimp one information (or equipotential 918A) wire
E953	null	crimp one information (or equipotential 953) wire
EM12	null	crimp earth (earth point number 12)
EM53	null	crimp earth (earth point number 53)
MC10	null	body earth point number 10
MC12	null	body earth point number 12
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در کشور

