


Instrument Panel Fuse and Relay Box

Fuse List Engine Compartment Meter Fuse and Relay Box

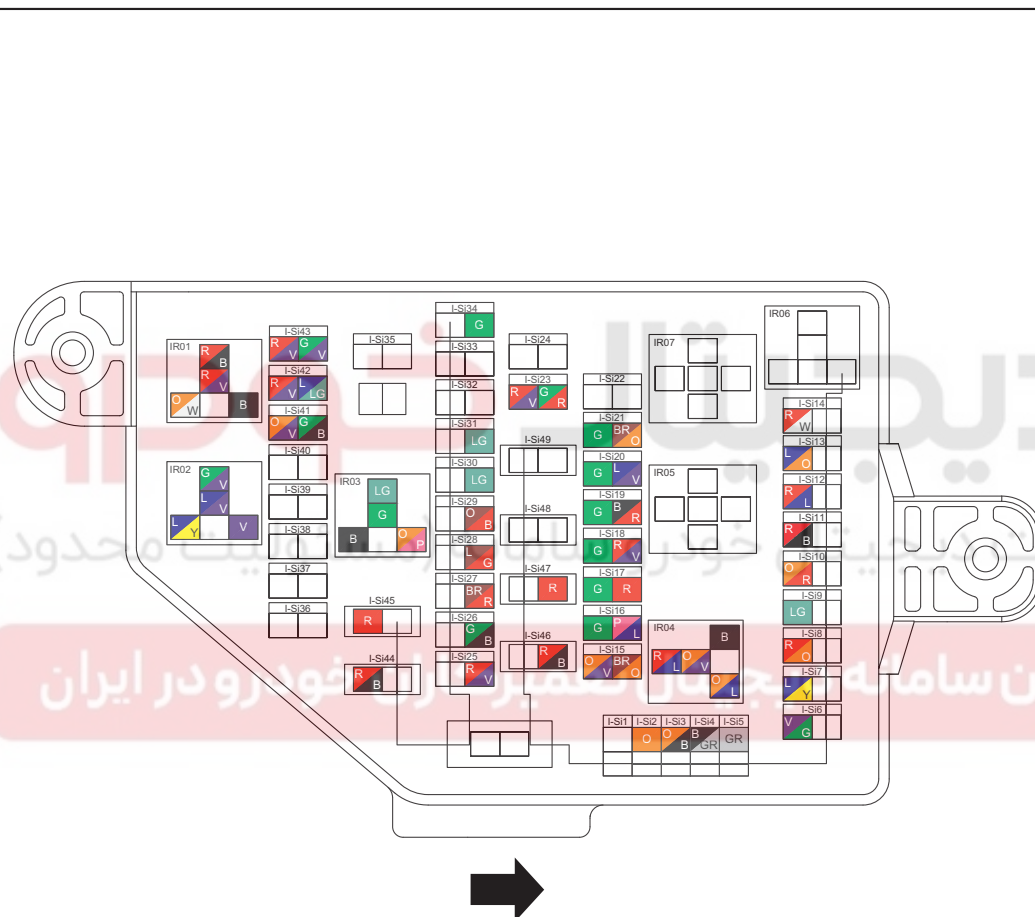

Wire Out Direction

I-Si1	Reserved	-	I-Si43	ACC Signal	5A
I-Si2	BCM (Washer)	10A	I-Si44	ACC	30A
I-Si3	BCM (Horn)	20A	I-Si45	Glass Regulator Motor LH	25A
I-Si4	BCM (High Beam Light)	15A	I-Si46	Glass Regulator Motor RH	25A
I-Si5	TBOX	10A	I-Si47	Sunroof	20A
I-Si6	BCM (Fog Light)	10A	I-Si48	Reserved	-
I-Si7	Clearance Light	5A	I-Si49	Reserved	-
I-Si8	BCM (Reverse & Stop)	10A	IR01	ACC Relay	
I-Si9	BCM (Turn Signal Light)	15A	IR02	SOS Relay	
I-Si10	BCM (Position Light)	10A	IR03	IG1 Relay	
I-Si11	Front Passenger Power Seat	20A	IR04	IG2 Relay	
I-Si12	IG2	10A	IR05	Reserved	
I-Si13	Electronic Shift & BCM	10A	IR06	Reserved	
I-Si14	Seat Adjustment	20A	IR07	Reserved	
I-Si15	IG2 Signal Power Source	5A			
I-Si16	PEPS&BCM	5A			
I-Si17	Front Compartment IG1 Power Source	10A			
I-Si18	Switch Set	5A			
I-Si19	Airbag	5A			
I-Si20	Parking & Lane Change Controller	5A			
I-Si21	Brake Switch 1	5A			
I-Si22	Reserved	-			
I-Si23	Rear Backup Power Source	15A			
I-Si24	Reserved	-			
I-Si25	Rear Wiper	15A			
I-Si26	PEPS(ESCL)	15A			
I-Si27	BCM (Door Lock)	25A			
I-Si28	PEPS 1	10A			
I-Si29	PEPS 2	5A			
I-Si30	Audio	15A			
I-Si31	IG1	15A			
I-Si32	Reserved	-			
I-Si33	Reserved	-			
I-Si34	Brake Switch 2	5A			
I-Si35	Reserved	-			
I-Si36	Reserved	-			
I-Si37	Reserved	-			
I-Si38	Reserved	-			
I-Si39	Reserved	-			
I-Si40	Reserved	-			
I-Si41	USB Charging	5A			
I-Si42	Front Backup Power Source	15A			

