


# Supplemental Restraint System

Circuit Diagram (Page 1 of 3)

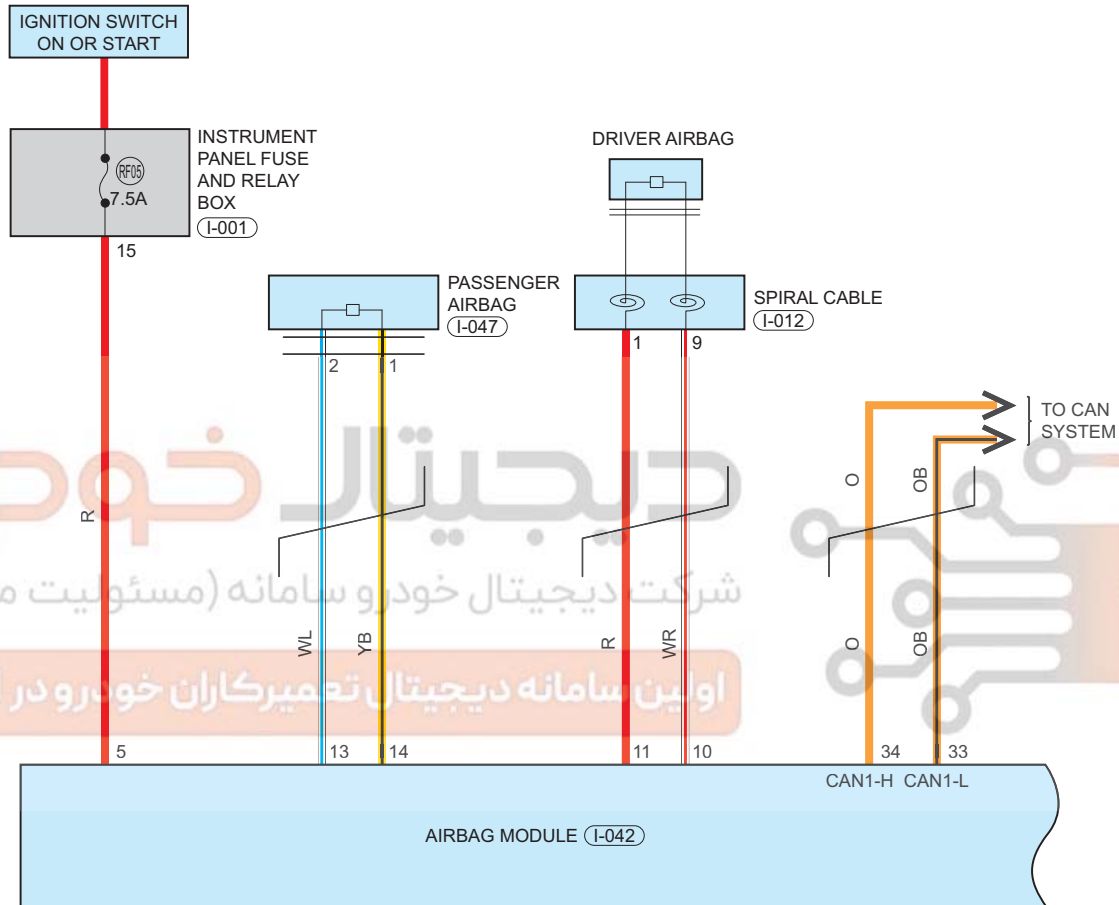

09

RSE001001

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-23	I-047	08-23	I-012	08-23
I-042	08-23				

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF05	06-8	Instrument Panel Fuse and Relay Box

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-047	12-4	I-012	12-4
I-042	12-4				


# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 2 of 3)

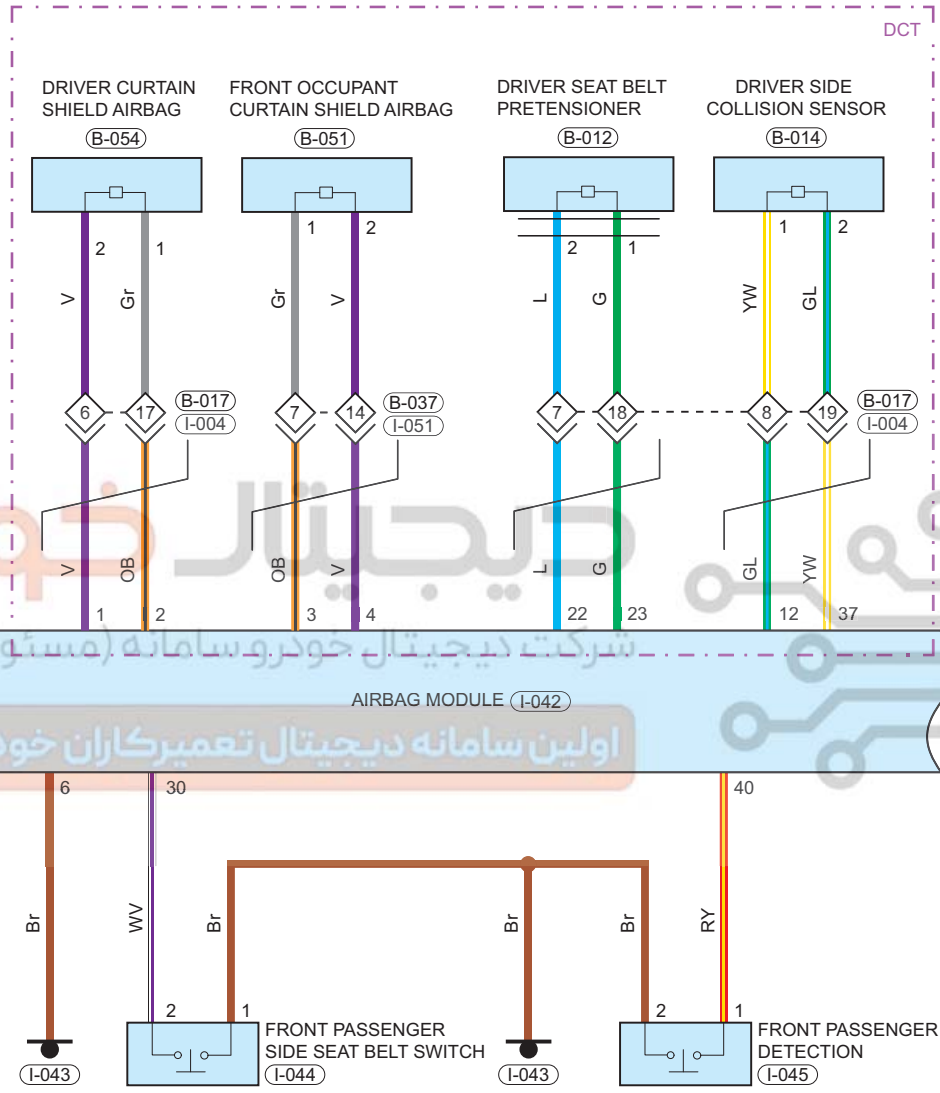

09

RSE002001

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-054	08-36	B-051	08-36	B-012	08-36
B-014	08-36	I-042	08-23	I-043	08-23
I-044	08-23	I-045	08-23		

## Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-017, I-004	08-36, 08-23	B-037, I-051	08-36, 08-23		

## Form of Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-054	12-8	B-051	12-8	B-012	12-8
B-014	12-8	I-042	12-4	I-043	12-4
I-044	12-4	I-045	12-4	B-017, I-004	12-8, 12-4
B-037, I-051	12-8, 12-4				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

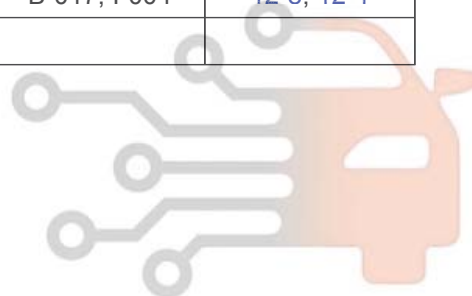

Circuit Diagram (Page 3 of 3)

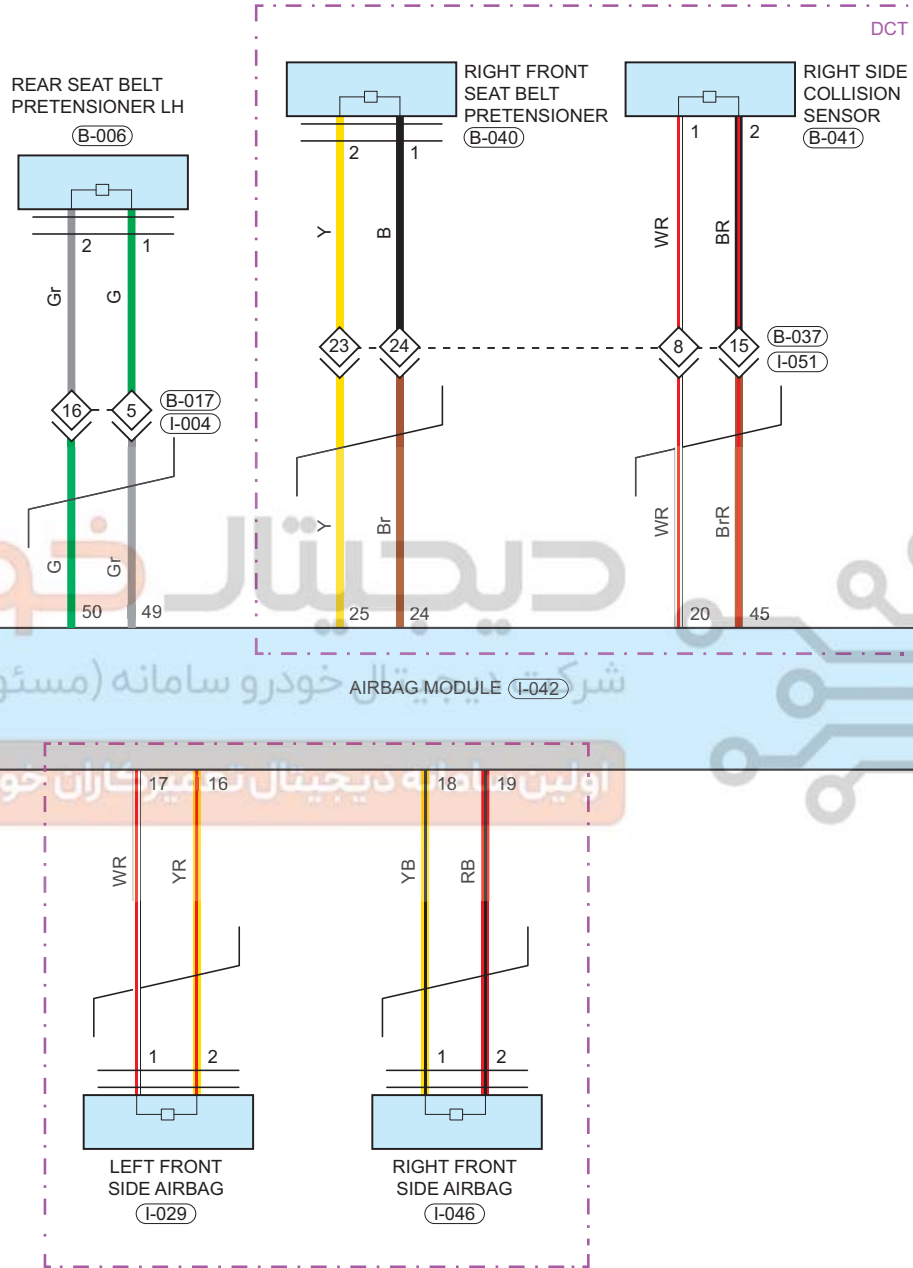

09

RSE003001