


Seat (CVT/DCT)

Circuit Diagram (Page 1 of 3)

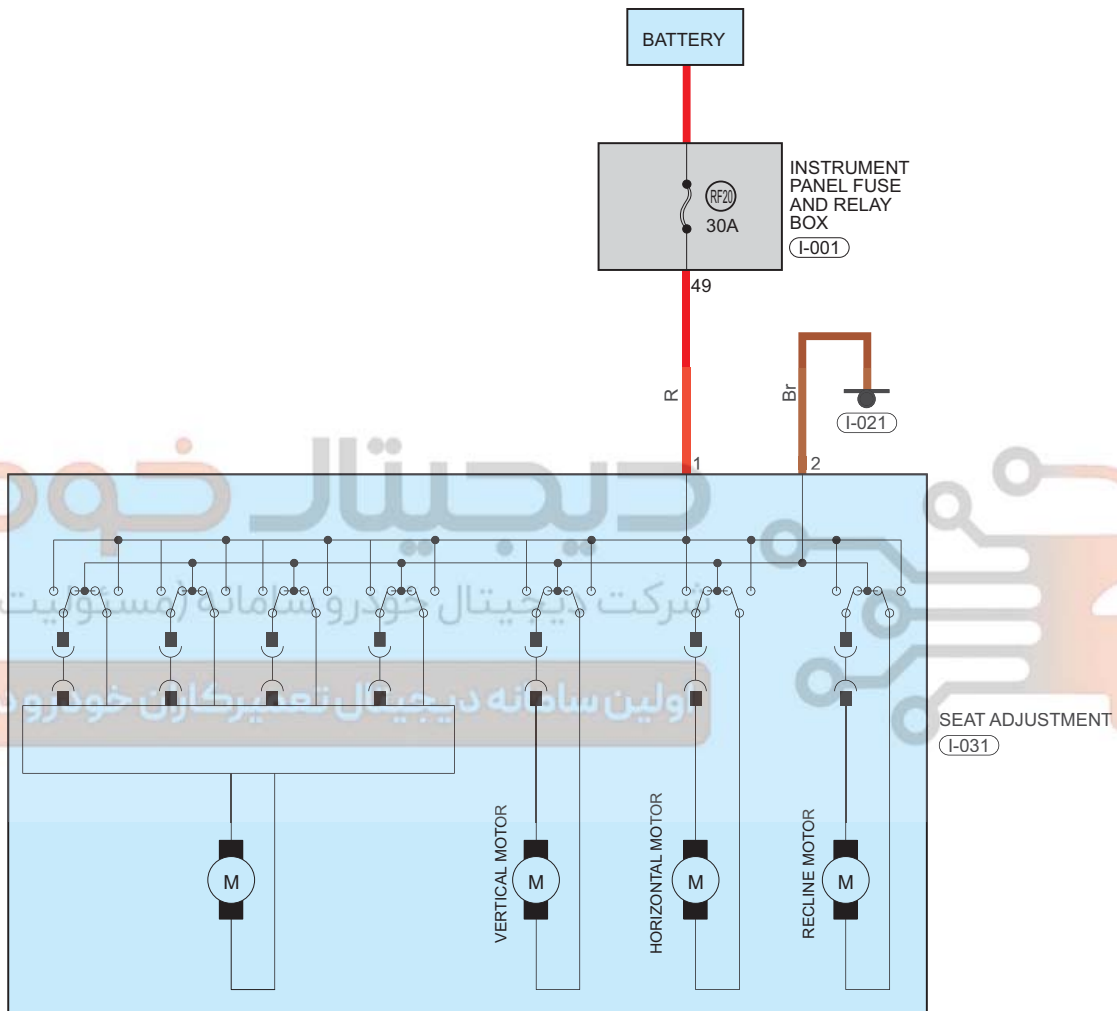

09

SEE001001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-23	I-021	08-23	I-031	08-23

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF20	06-8	Instrument Panel Fuse and Relay Box

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-021	12-4	I-031	12-4


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 2 of 3)

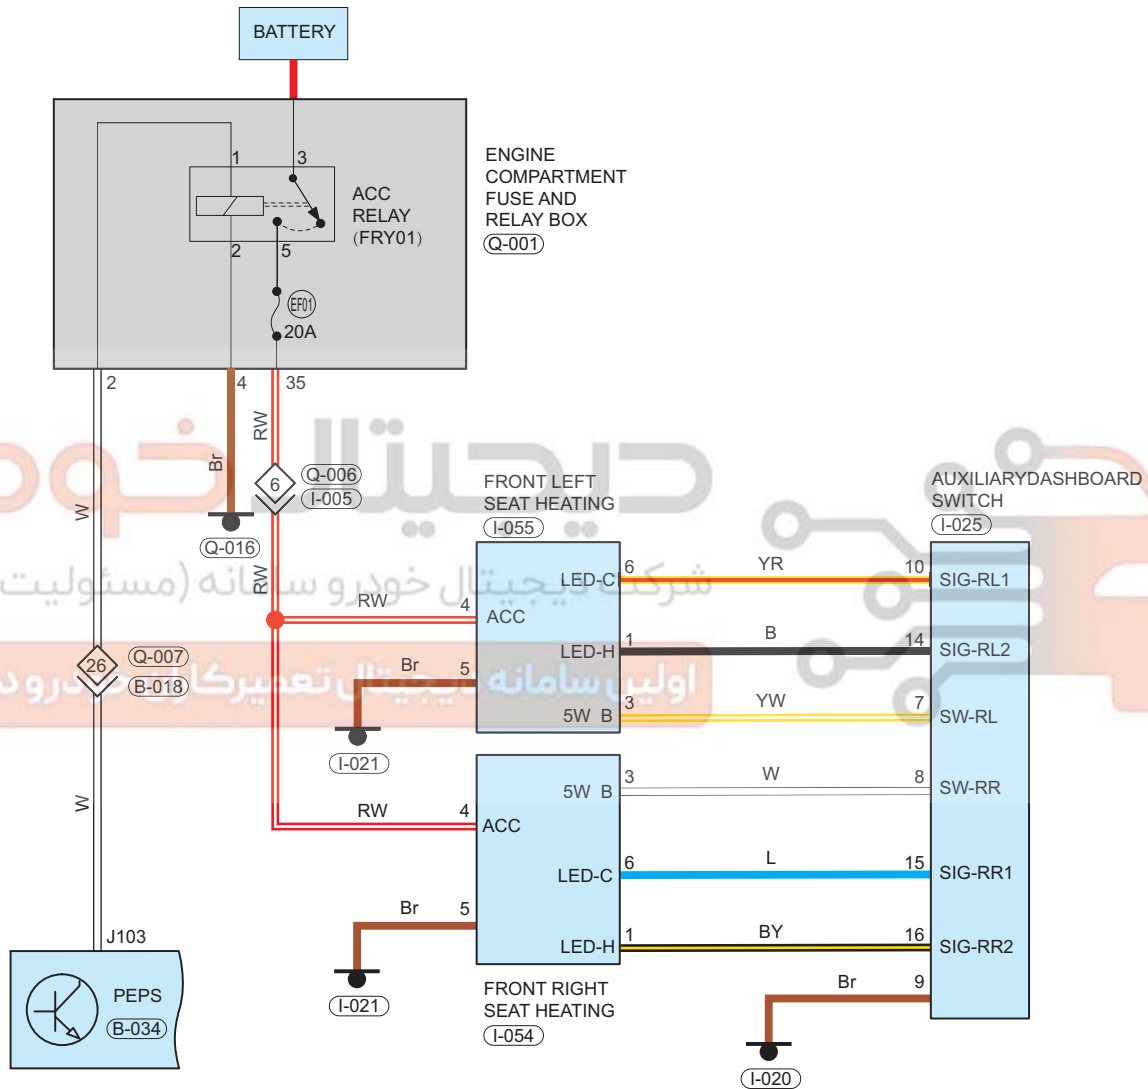

09

SEE002001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	B-034	08-36	I-055	08-23
I-021	08-23	I-054	08-23	I-020	08-23
Q-016	08-10	I-025	08-23		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF01	06-2	Engine Compartment Fuse and Relay Box
ACC Relay (FRY01)	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-007, B-018	08-10, 08-36	Q-006, I-005	08-10, 08-23		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	B-034	12-8	I-055	12-4
I-021	12-4	I-054	12-4	I-020	12-4
Q-016	12-17, 12-8	I-025	12-4	Q-007, B-018	12-17, 12-8
Q-006, I-005	12-17, 12-4				

Circuit Diagram (Page 3 of 3)

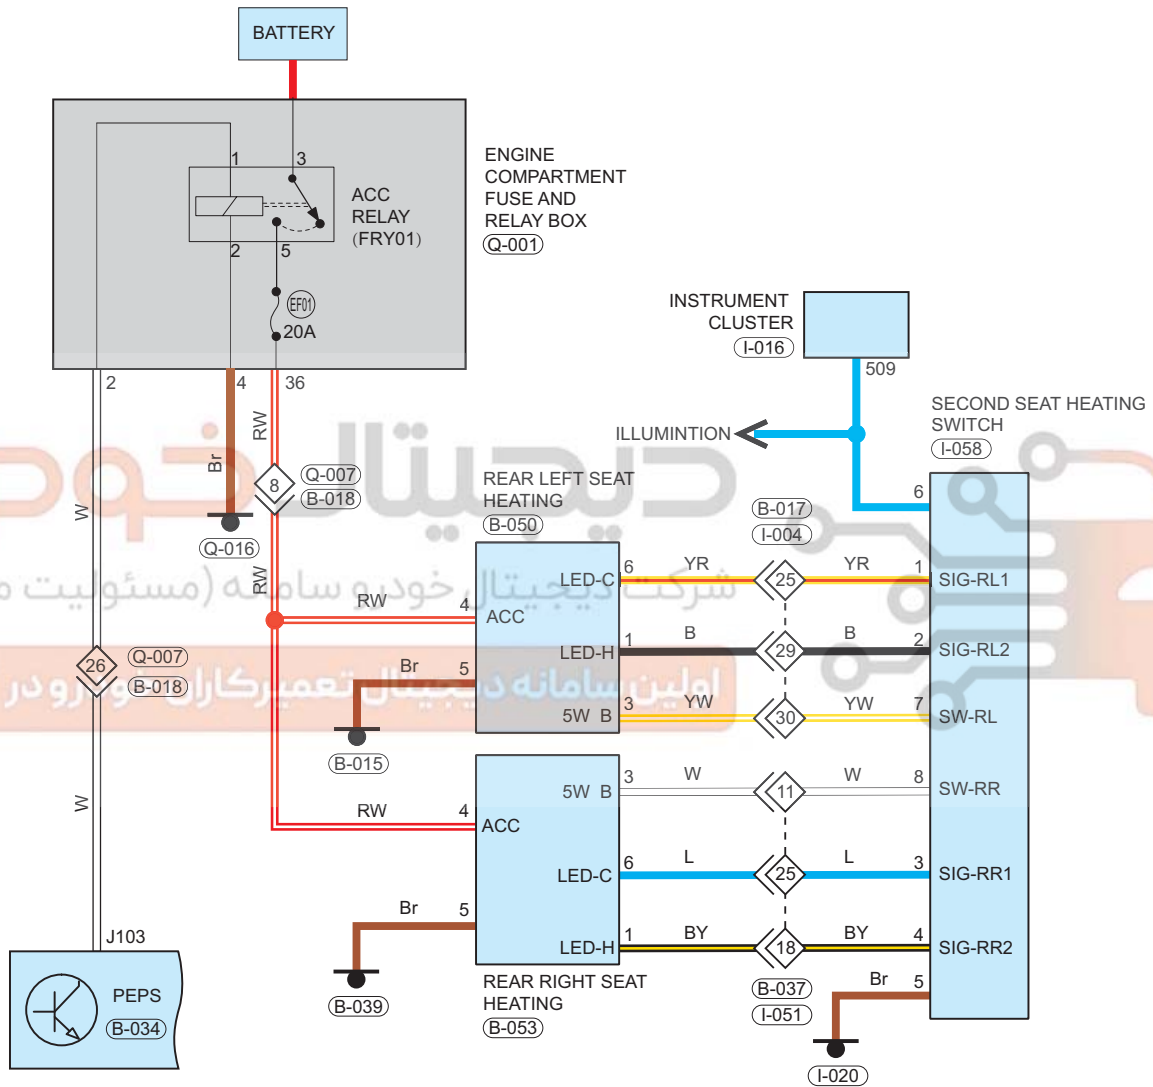

09

SEE003001