


ABS控制单元 ABS control unit

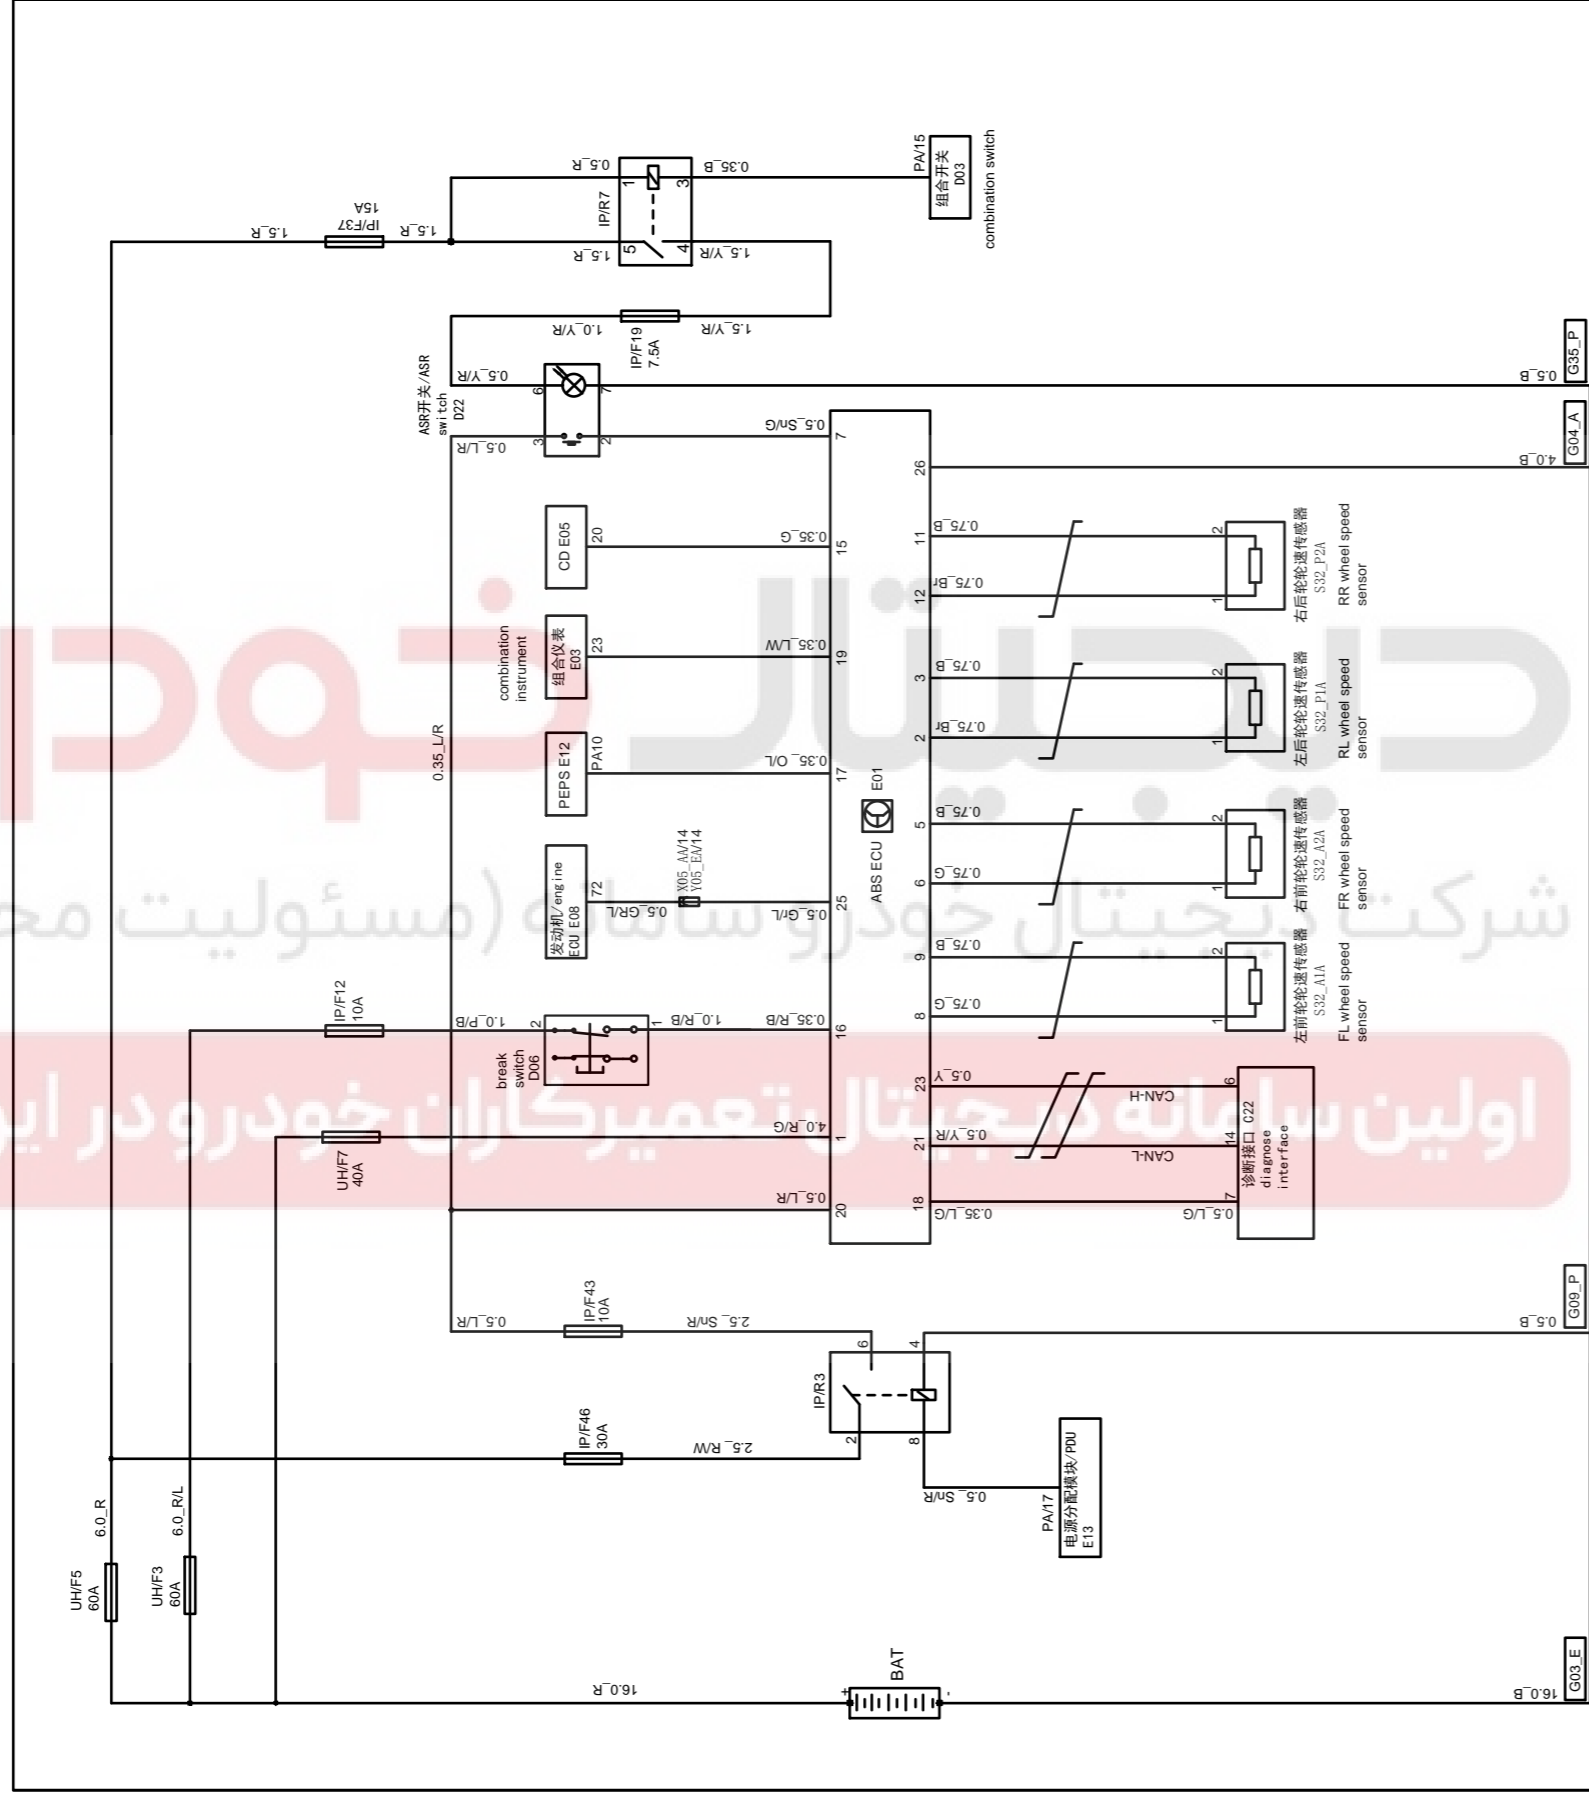

ABS控制单元

- E01-ABS ECU
- D22-ASR 开关
- S32_A1A-左前轮转速传感器
- S32_A2A-右前轮转速传感器
- S32_P1A-左后轮转速传感器
- S32_P2A-右后轮转速传感器
- E13-电源分配模块
- D06-刹车开关
- C22-诊断接口
- D03-组合开关
- E08-发动机ECU
- E12-PEPS
- E03-组合仪表
- E05-CD
- G03_E-蓄电池负极到车身搭铁点
- G04_A-流水槽内ABS搭铁点
- G09_P-主线索左侧A立柱下搭铁点2
- G35_P-中控台处搭铁点

ABS control unit

- E01-ABS ECU
- D22-ASRswitch
- S32_A1A-FL wheel speed sensor
- S32_A2A-FR wheel speed sensor
- S32_P1A-RL wheel speed sensor
- S32_P2A-RR wheel speed sensor
- E13-power distribution module
- D06-break switch
- C22-diagnose interface
- D03-combination switch
- E08-engine ECU
- E12-PEPS
- E03-combination instrument
- E05-CD
- G03_E-ground point between battery terminal negative and body
- G04_A-ABS ground point in the gutter channel
- G09_P-ground point below main harness left A column
- G35_P-ground point in center stack