



ECM Power Supply, Data, Grounding Wire 1

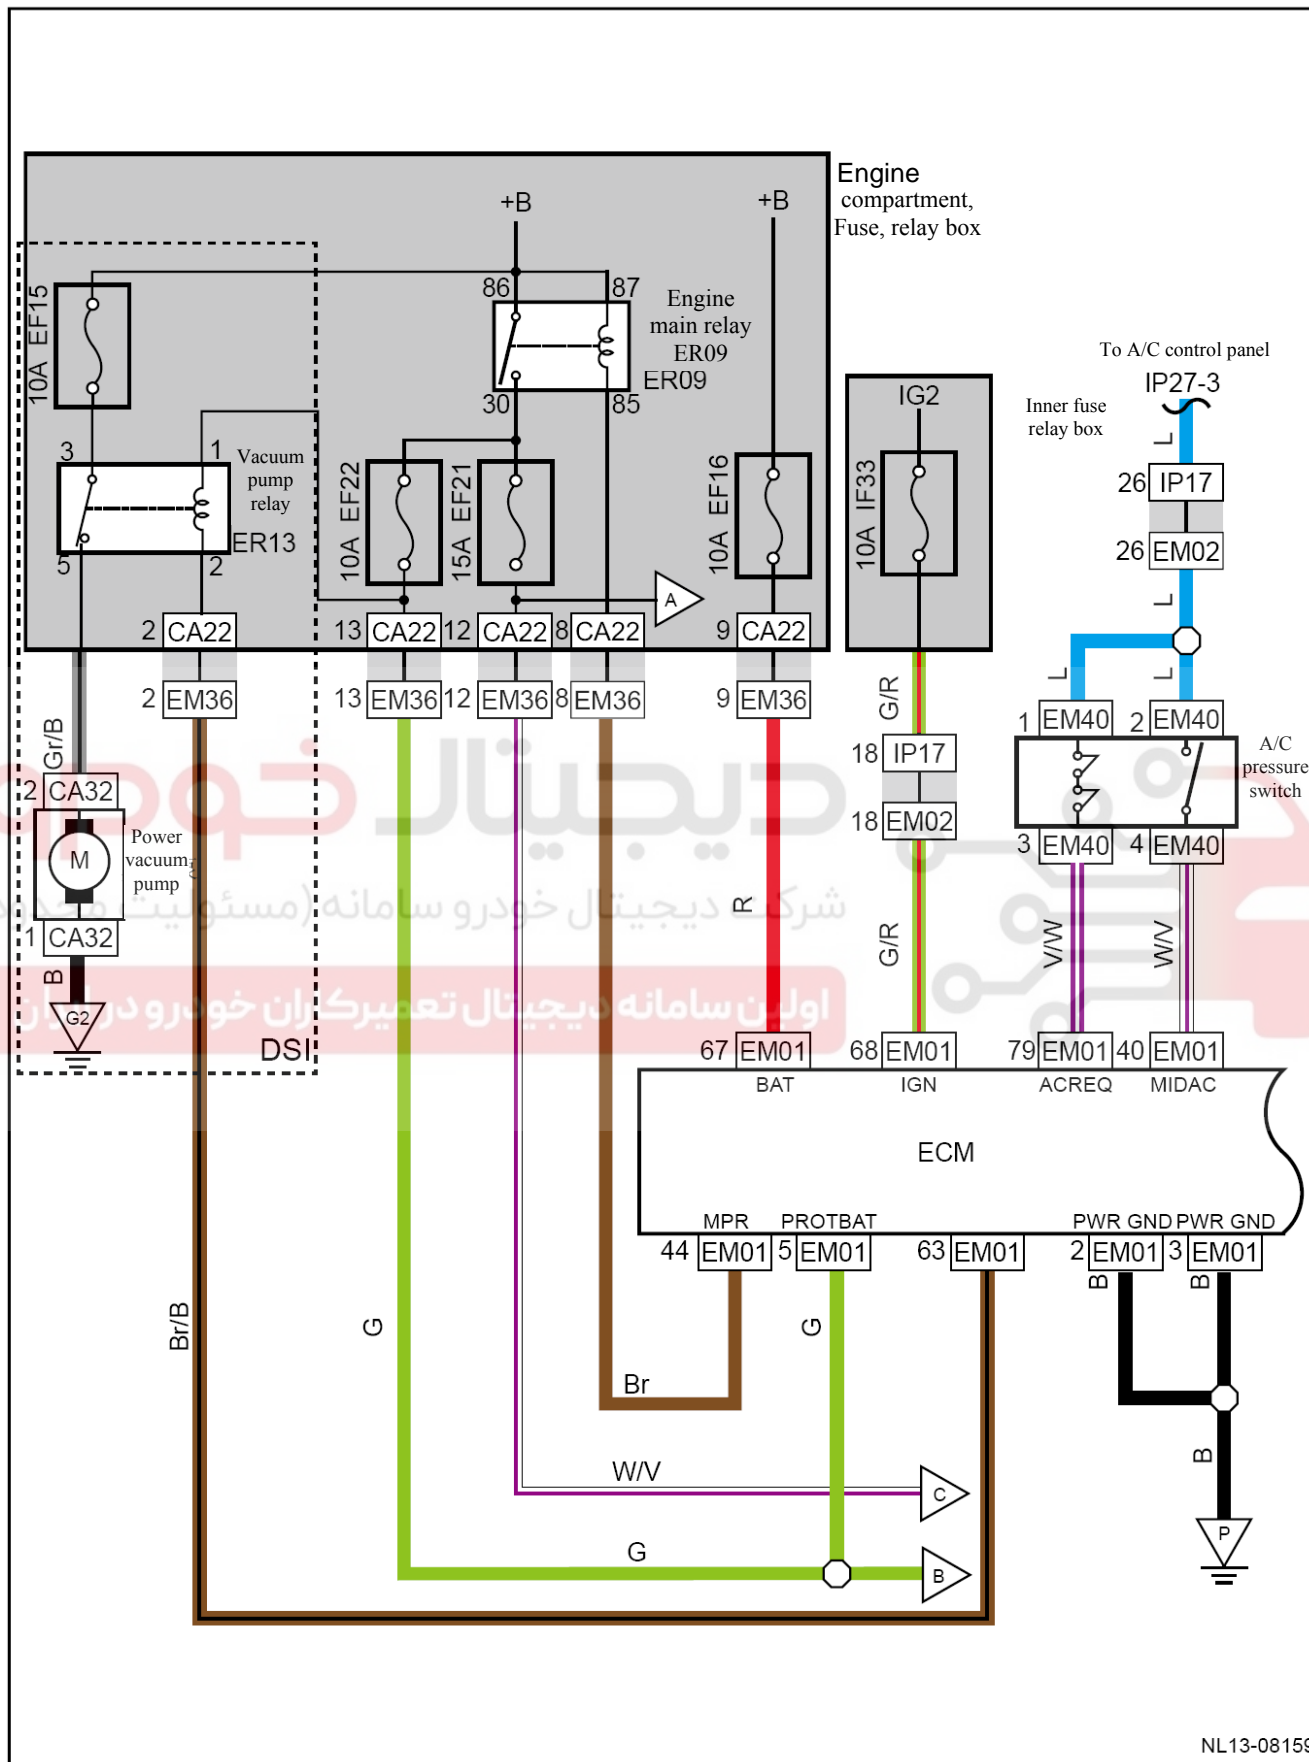

ECM power, data and ground wire 2

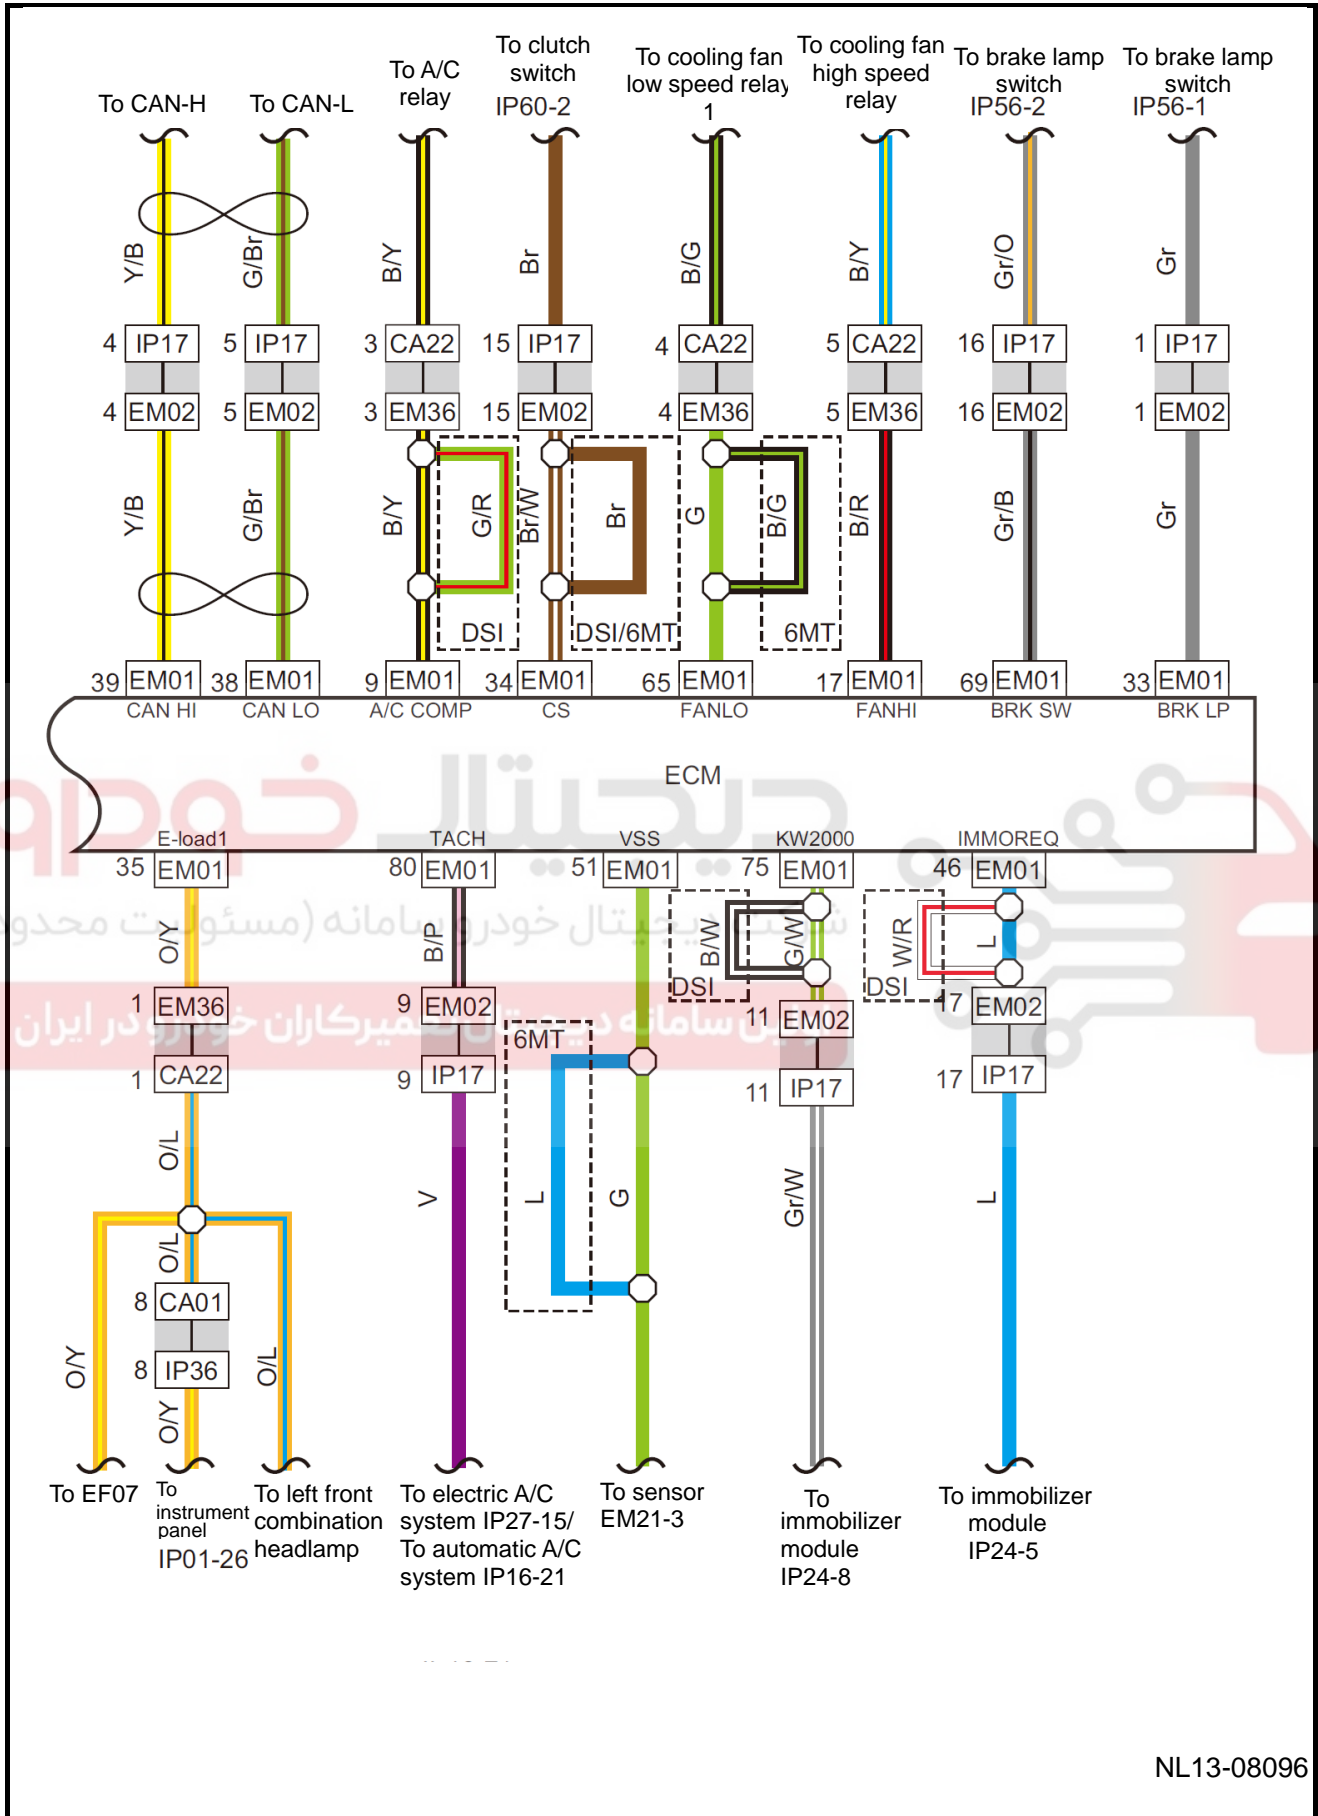

Harness connector	Description	Pages
CA01	To instrument harness connector 1	29
CA22	To engine harness connector	28
IP17	To engine harness connector	40
IP36	To engine compartment harness connector 2	40
EM01	Harness connector of engine control module	35
EM02	To instrument harness connector	35
EM40	Harness connector of A/C pressure switch	34
EM36	To harness connector of engine compartment distribution box	34
CA32	Harness connector of power vacuum pump	28
G2	Engine compartment harness grounding	67
P	Engine harness grounding	68

Connection point	Descriptions	Pages
EM01-9	To A/C relay	178
EM01-35	To EF07	131
	To front left combination headlamp	131
EM01-34	To combination instrument IP01-26	121
	To clutch switch IP60-2	106
EM01-65	To cooling fan low speed relay 1	112
EM01-17	To cooling fan high speed relay	112
EM01-80	To A/C system IP27-15	176
EM01-75	To immobilizer module IP24-5	117
EM01-46	To immobilizer module IP24-8	
EM01-69	To brake lamp switch IP56-2	141
EM01-33	To brake lamp switch IP56-4	141
EM40-1	To A/C control panel IP27-3	176
EM40-2		
EM01-51	To speed sensor EM21-3	110