


Front Compartment Fuse and Relay Box - 1


Fuse List Engine Compartment Front Compartment Fuse and Relay Box 1

U-Si35	Reserved	-
U-Si36	ACM	25A
U-Si37	Reserved	-
U-Si38	Reserved	-
U-Si39	Reserved	-
U-Si40	Reserved	-
U-Si41	Reserved	-
U-Si42	Additional Water Pump	5A
U-Si43	Vacuum Pump	25A
U-Si44	Blower	40A
ER15	Reserved	
ER16	Blower Relay	
ER17	Additional Water Pump Relay	
ER18	Reserved	
ER19	Vacuum Pump Relay	
ER20	Front Wiper Relay	

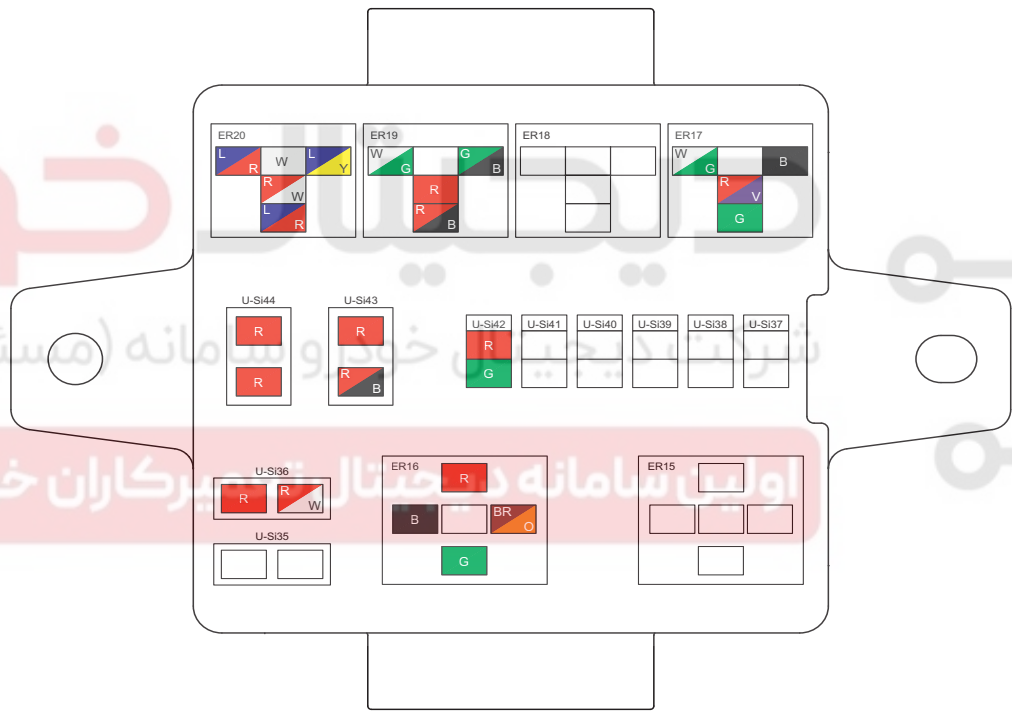

C FUSE LIST

Fuse List Engine Compartment Front Compartment Fuse and Relay Box 2

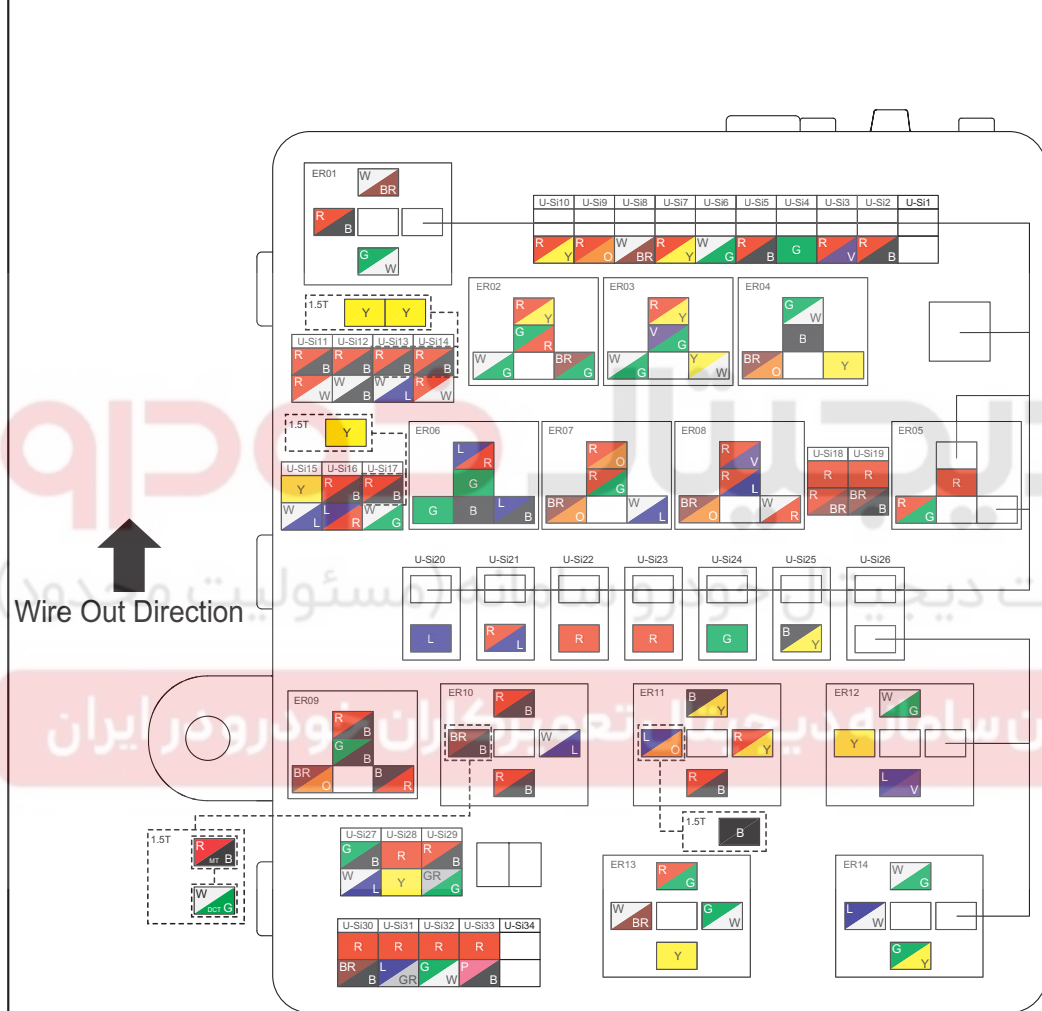

U-Si1	Reserved	-	ER01	Main Relay 1
U-Si2	Battery Capacity Sensor	10A	ER02	Fuel Pump Relay
U-Si3	Front Passenger Seat Heater	10A	ER03	Compressor Relay
U-Si4	Front Wiper	25A	ER04	Rear Wiper Relay
U-Si5	Rear Defroster	20A	ER05	Low Beam Light Relay
U-Si6	TCU1	15A	ER06	Front Wiper (Enable) Relay
U-Si7	A/C Compressor	10A	ER07	Driver Seat Heater Relay
U-Si8	ECU1	10A	ER08	Front Passenger Seat Heater Relay
U-Si9	Driver Seat Heater	10A	ER09	Rear Defroster Relay
U-Si10	Fuel Pump	15A	ER10	Drive Chain Relay
U-Si11	Ignition Coil	20A	ER11	Starter Relay
U-Si12	ECU2	15A	ER12	Low Speed Fan Relay
U-Si13	ECU Valve	15A	ER13	Main Relay 2
U-Si14	Oxygen Sensor	10A	ER14	High Speed Fan Relay
U-Si15	ECU5	25A		
U-Si16	ECU6	25A		
U-Si17	Relay Coil	10A		
U-Si18	Front Low Beam Light RH	10A		
U-Si19	Front Low Beam Light LH	10A		
U-Si20	Meter Fuse 1	60A		
U-Si21	ESP Valve	40A		
U-Si22	Additional Fuse Box Power Supply	60A		
U-Si23	ESP Motor	60A		
U-Si24	Meter Fuse 2	60A		
U-Si25	Starter Relay	30A		
U-Si26	Cooling Fan	50A		
U-Si27	Rear View Mirror Heater	5A		
U-Si28	EPS	5A		
U-Si29	ECU3	5A		
U-Si30	A/C Pressure Switch	5A		
U-Si31	TCU2	5A		
U-Si32	ESP	5A		
U-Si33	ECU4	5A		
U-Si34	Reserved	-		

Fuse List Engine Compartment Main Fuse Box

U-Si45	Main Fuse Box	175A
U-Si46	EPS	80A
U-Si47	Generator (EURO V/ EURO VI)	175A
U-Si47	Generator (1.5T)	200A

