


Door Lock

Circuit Diagram (Page 1 of 3)

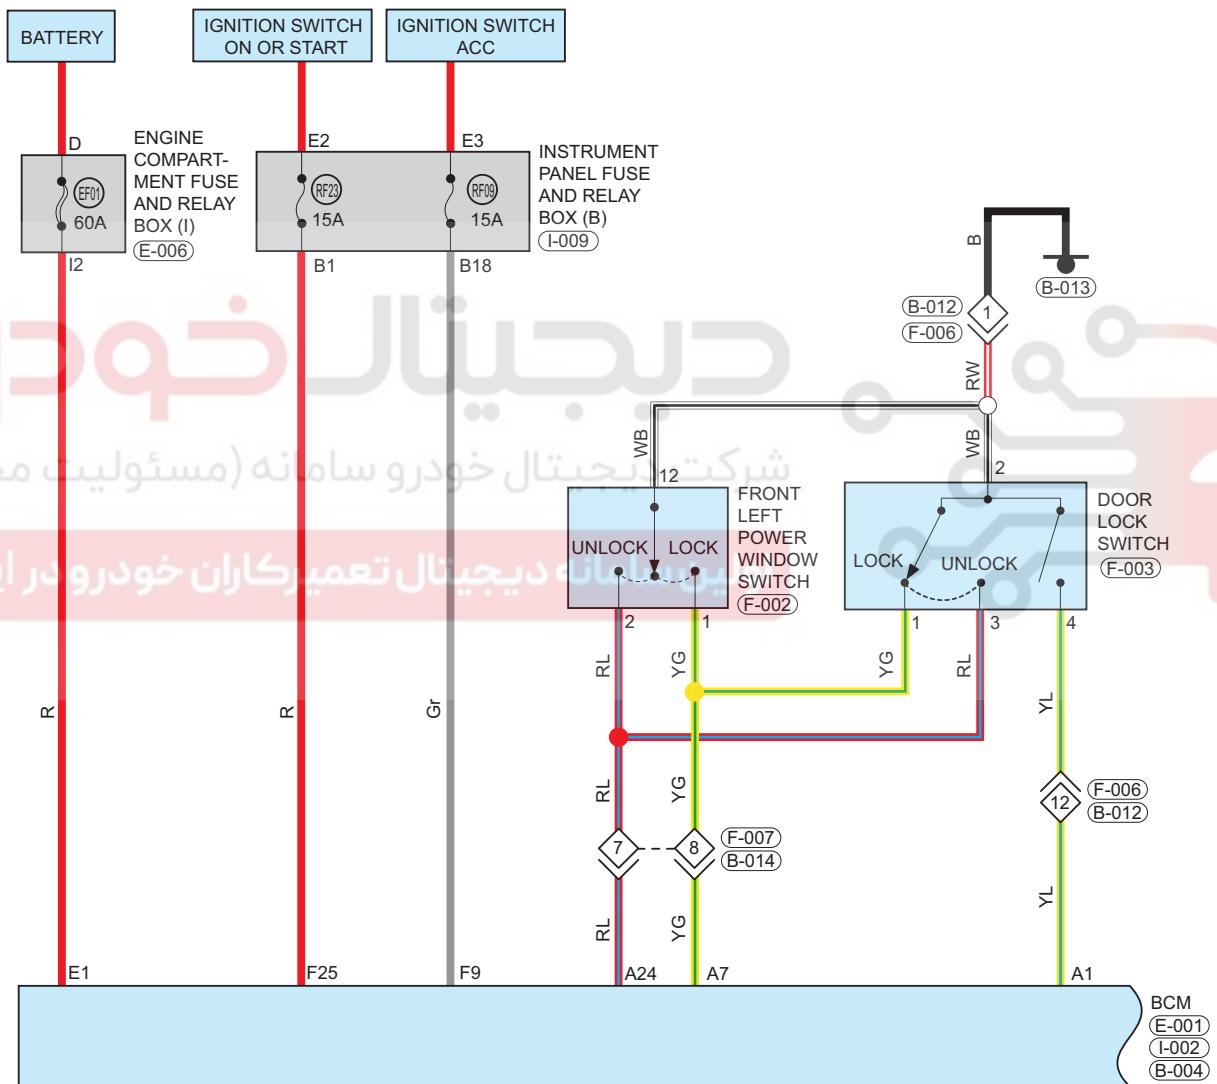

09

ET11092001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-006	08-3	I-009	08-9	B-013	08-13
F-003	08-18	F-002	08-18	E-001	08-3
I-002	08-9	B-004	08-13		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF01	06-4	Engine Compartment Fuse and Relay Box
RF09	06-15	Instrument Panel Fuse and Relay Box
RF23	06-15	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-012, F-006	08-13, 08-18	F-007, B-014	08-18, 08-13		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-006	12-2	I-009	12-7	B-013	12-10
F-003	12-12	F-002	12-12	E-001	12-2
I-002	12-7	B-004	12-10	B-012, F-006	12-10, 12-12
F-007, B-014	12-12, 12-10				

Circuit Diagram (Page 2 of 3)

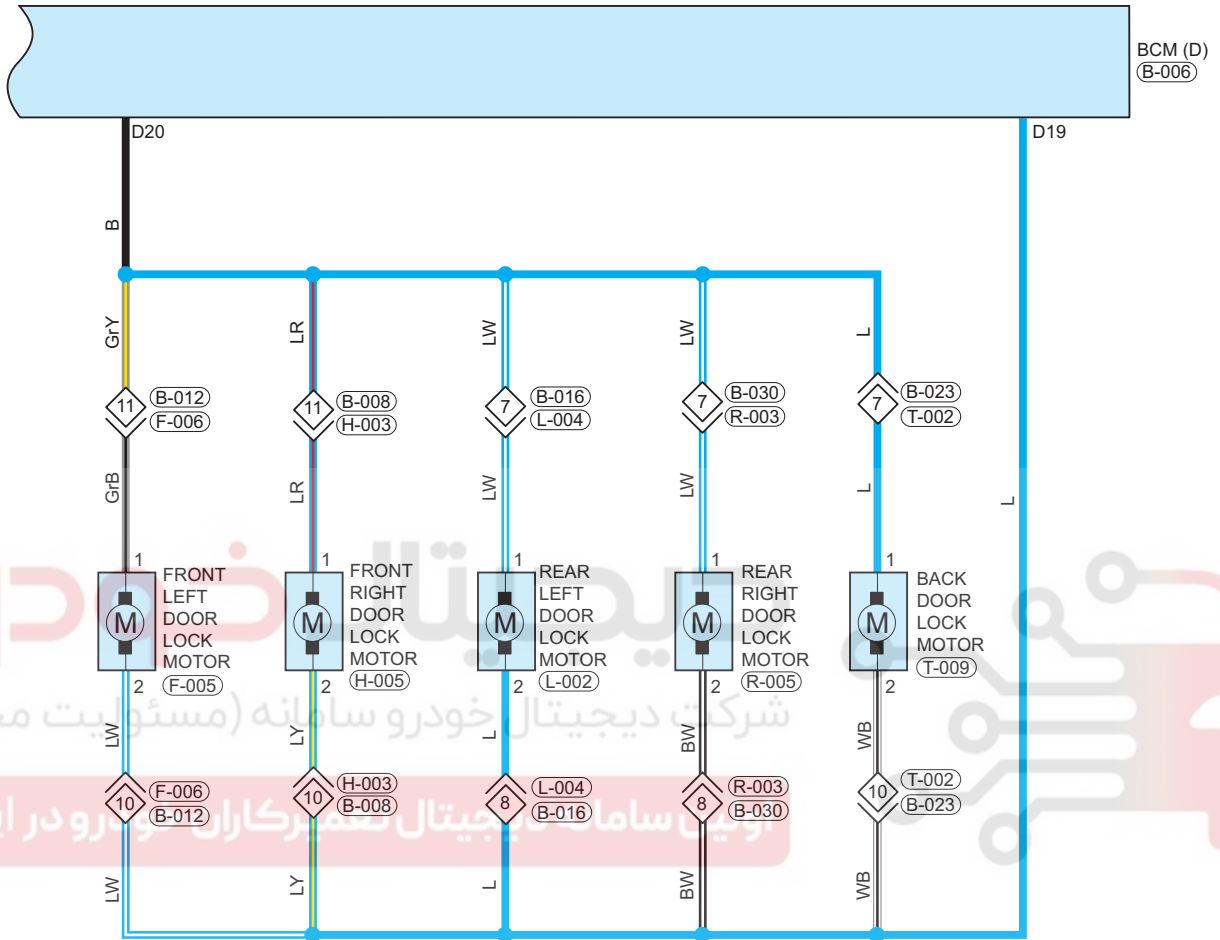

دیجیتال خودرو سامانه (مسئولیت محدود)
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
تولید سامانه دیجیتال خودرو کاران خودرو در ایران

09

ET11092002

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-006	08-13	F-005	08-18	H-005	08-19
L-002	08-20	R-005	08-21	T-009	08-22

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-012, F-006	08-13, 08-18	B-008, H-003	08-13, 08-19	B-016, L-004	08-13, 08-20
B-030, R-003	08-13, 08-21	B-023, T-002	08-13, 08-22		


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-006	12-10	F-005	12-12	H-005	12-13
L-002	12-14	R-005	12-14	T-009	12-15
B-012, F-006	12-10, 12-12	B-008, H-003	12-10, 12-13	B-016, L-004	12-10, 12-14
B-030, R-003	12-10, 12-14	B-023, T-002	12-10, 12-15		

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 3 of 3)

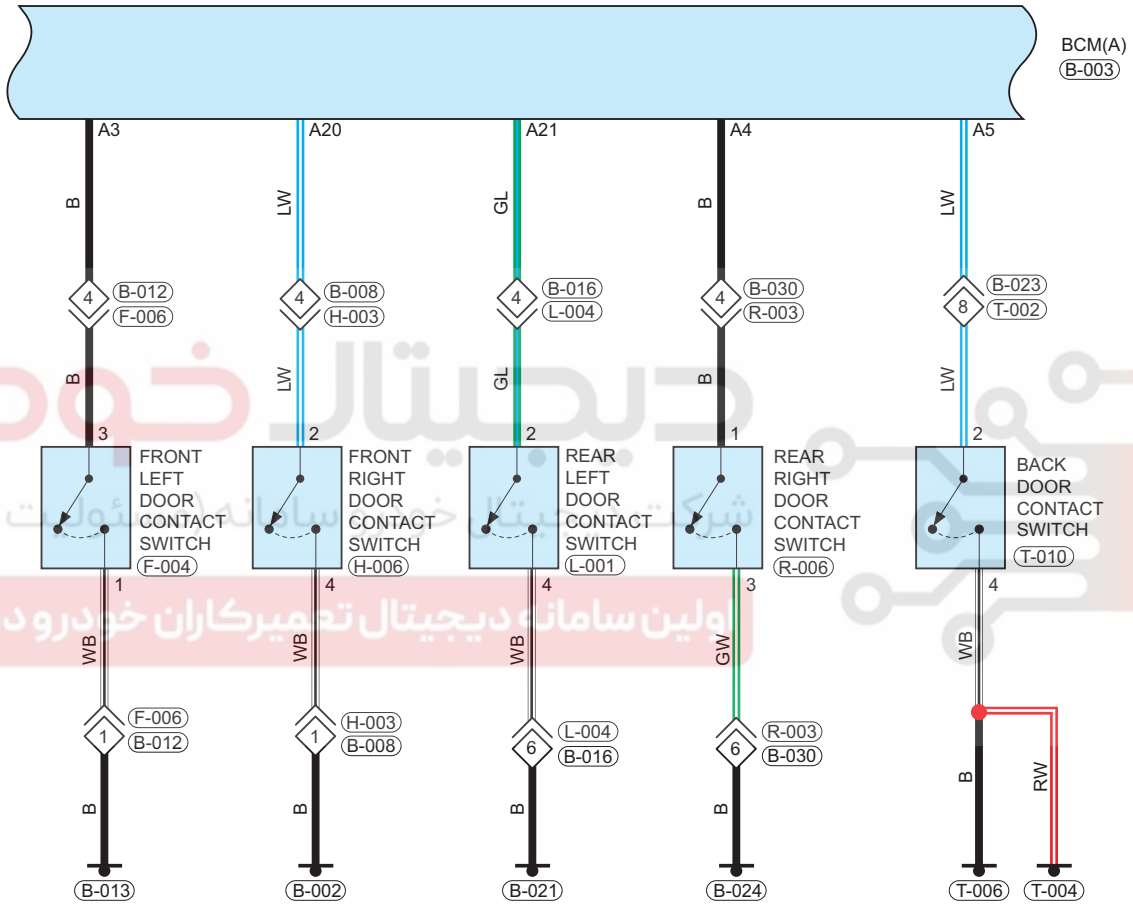

دیجیتال خودرو
شرکت پارس خودرو (محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

ET11092003