


ESP (EPB) (DCT)

Circuit Diagram (Page 1 of 4)

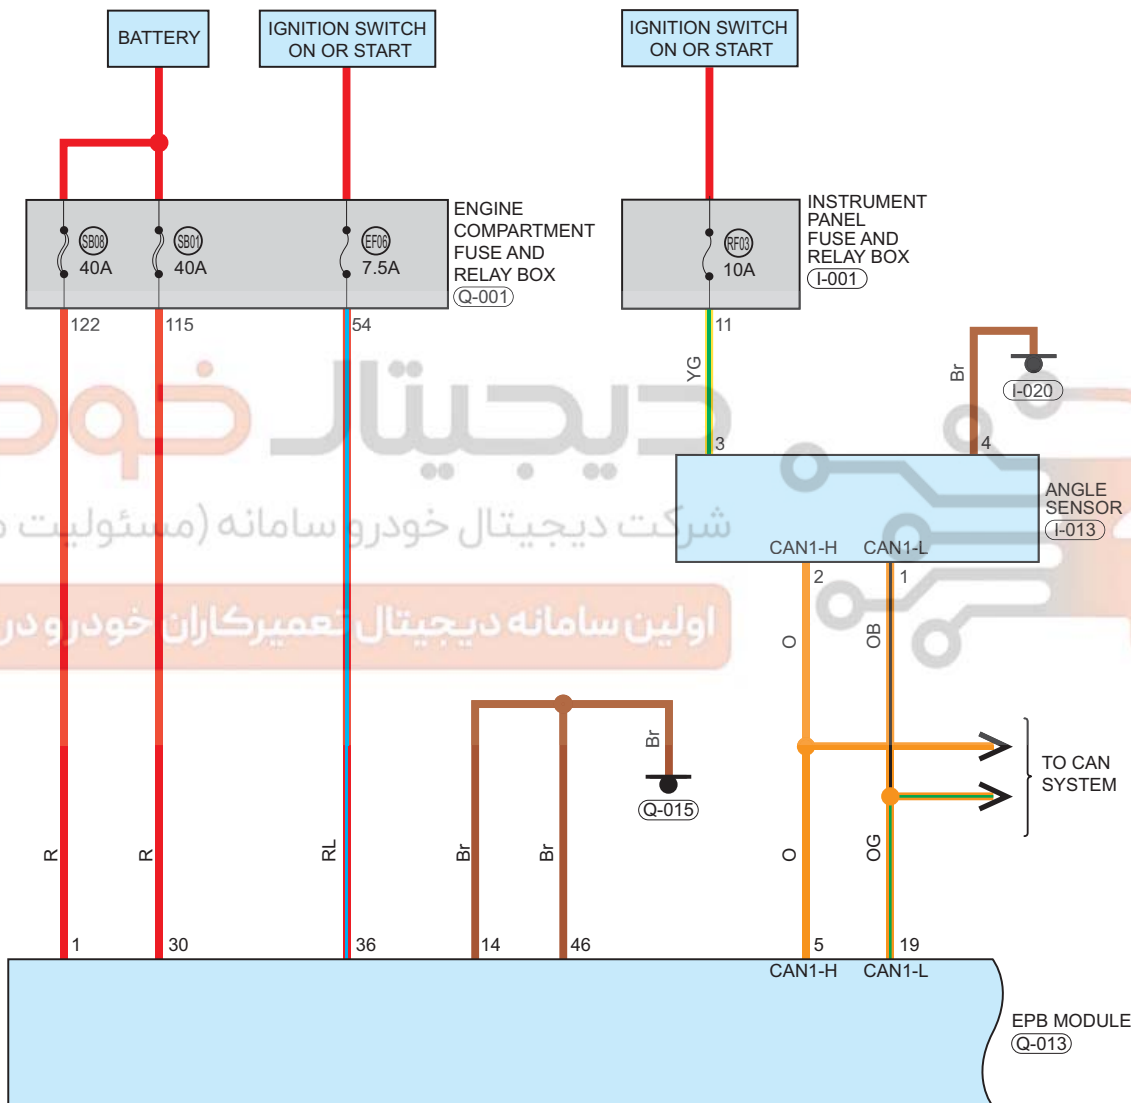

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	I-001	08-23	I-013	08-23
Q-015	08-10	Q-013	08-10	I-020	08-23

Fuse and Relay


Fuse/Relay	See Page	Fuse and Relay Box
SB01	06-2	Engine Compartment Fuse And Relay Box
SB08	06-2	Engine Compartment Fuse And Relay Box
EF06	06-2	Engine Compartment Fuse And Relay Box
RF03	06-8	Instrument Panel Fuse and Relay Box

Form of Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	I-001	12-4	I-013	12-4
Q-015	12-17	Q-013	12-17	I-020	12-4

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

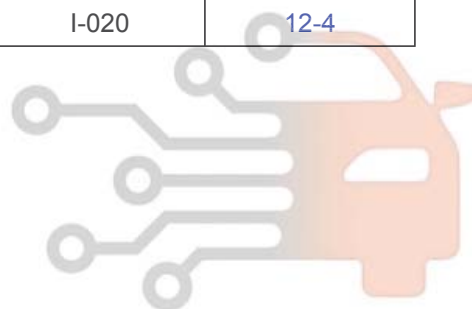

Circuit Diagram (Page 2 of 4)

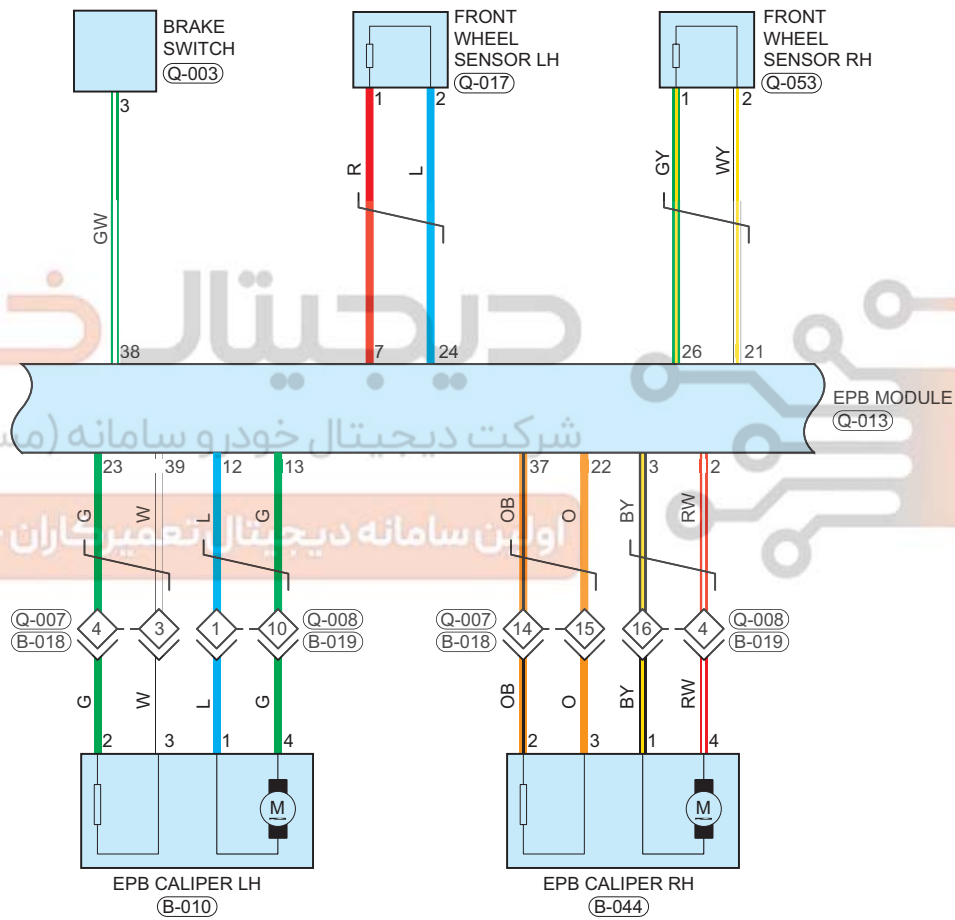

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

BCE002001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-003	08-10	Q-017	08-10	Q-053	08-10
Q-013	08-10	B-010	08-36	B-044	08-36

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-007, B-018	08-10, 08-36	Q-008, B-019	08-10, 08-36		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-003	12-17	Q-017	12-17	Q-053	12-17
Q-013	12-17	B-010	12-8	B-044	12-8
Q-007, B-018	12-17, 12-8	Q-008, B-019	12-17, 12-8		


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 4)

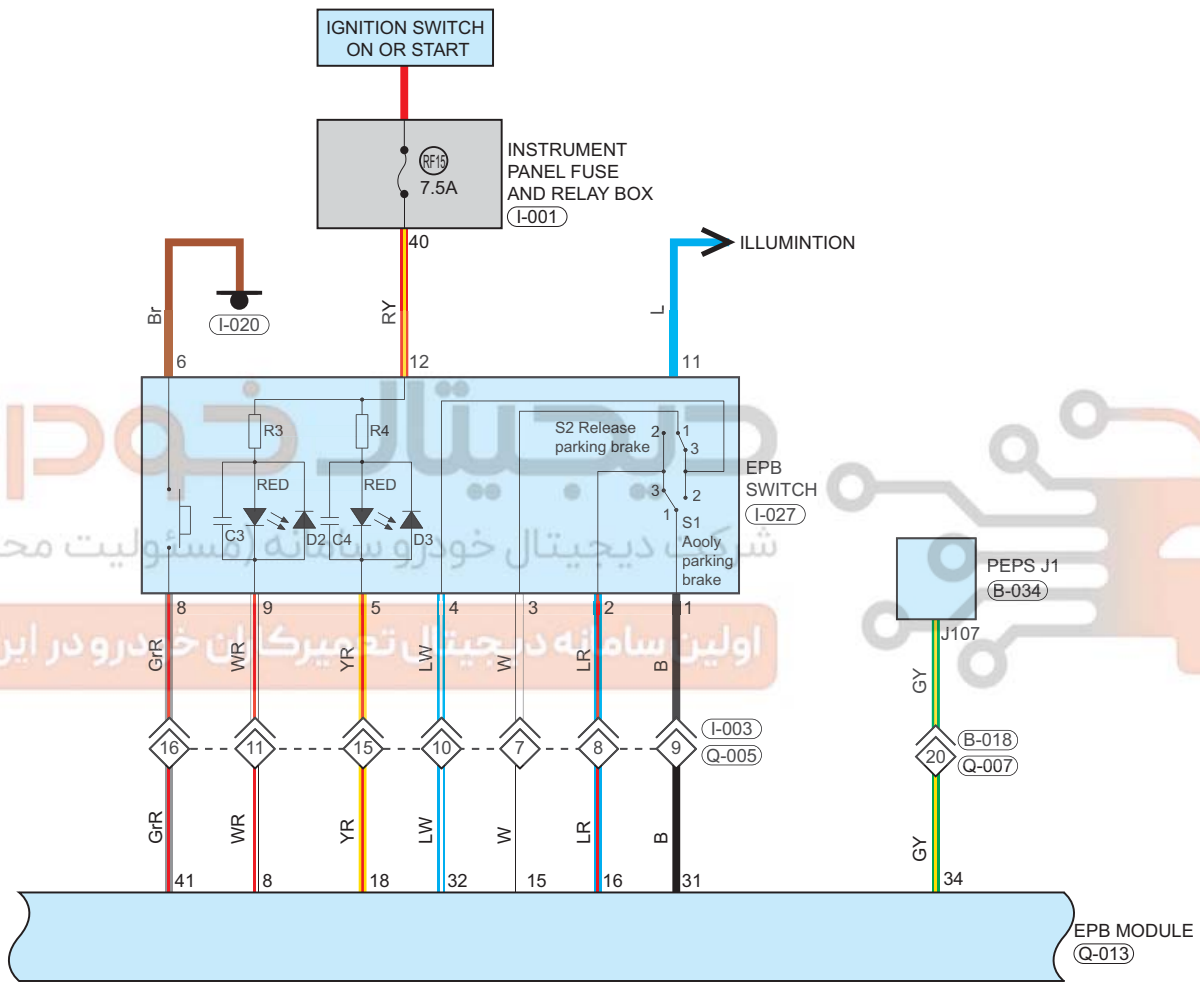

09

BCE003001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-23	I-020	08-23	I-027	08-23
B-034	08-36	Q-013	08-10		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF15	06-8	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-003, Q-005	08-23, 08-10	B-018, Q-007	08-36, 08-10		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-020	12-4	I-027	12-4
B-034	12-8	Q-013	12-17	I-003, Q-005	12-4, 12-17
B-018, Q-007	12-8, 12-17				

Circuit Diagram (Page 4 of 4)

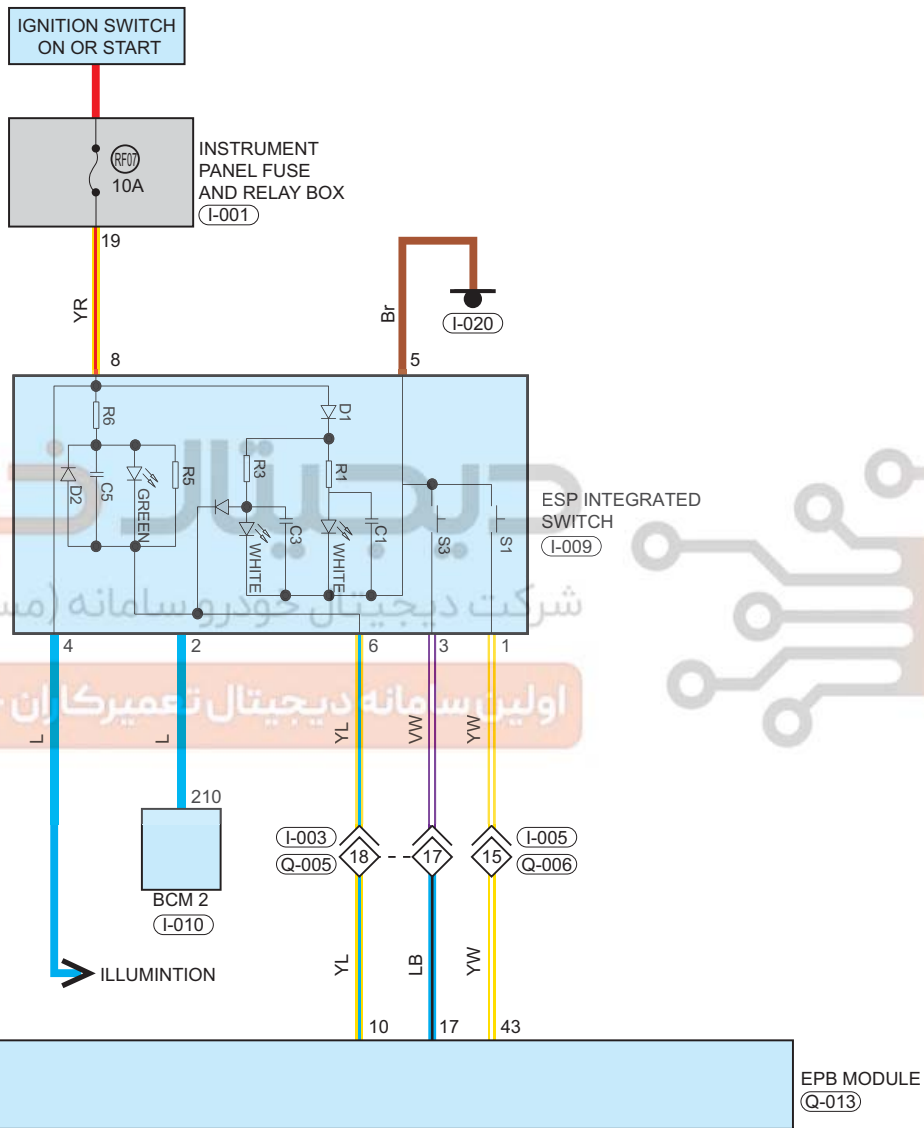

شرکت دیجیتال خودروسامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



09

BCE004001