

Instrument Panel Fuse and Relay Box


Location of Instrument Panel Fuse and Relay Box



06

EWD025001

Fuse and Relay Layout in Instrument Panel Fuse and Relay Box

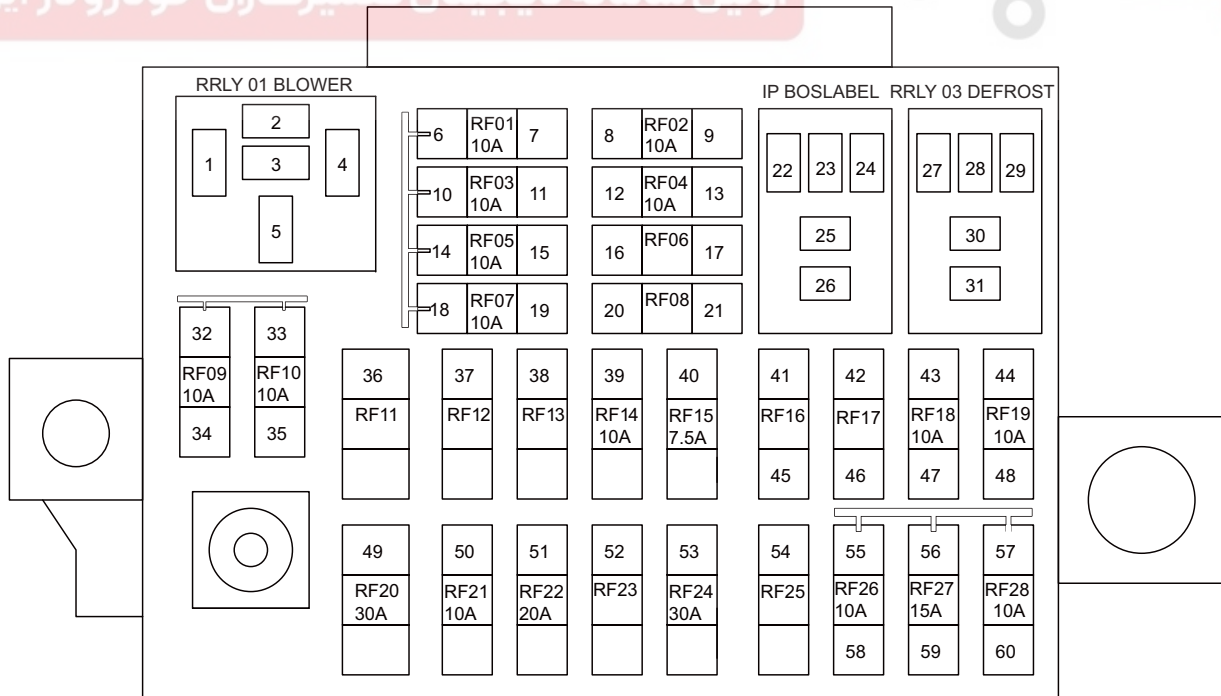

EWD026001

06 - FUSE AND RELAY

Instrument Panel Fuse Description


No.	Description	No.	Description
RF01	BCM & Instrument Cluster & Gateway	RF15	Defrost Relay & EPB & Panoramic Image Module & OBD Diagnostic Interface & Sub-instrumentation Switch & Kick Wire Sensor
RF02	-	RF16	-
RF03	EPS & Angle Sensor	RF17	-
RF04	Multi-View Camera System	RF18	A/C Control Panel & Defrost Work Feedback
RF05	Airbag Module	RF19	-
RF06	-	RF20	Rrly01 Blower RLY
RF07	A/C Control Panel & Radio Contrl Module & Head Lamps Adjust Sw Power & TBOX & Shift Lever (DCT)	RF21	-
RF08	-	RF22	-
RF09	A/C Control Panel & Radio Contrl Module & TBOX & DCDC	RF23	-
RF10	Instrument Cluster	RF24	Rrly03 Defrost RLY
RF11	-	RF25	-
RF12	-	RF26	BCM & Radio & Power Rear View Mirror Switch
RF13	-	RF27	Cigarette Lighter
RF14	Tachograph	RF28	Spare Power

06

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Instrument Panel Fuse and Relay Box Inner Circuit

Circuit Diagram (Page 1 of 1)

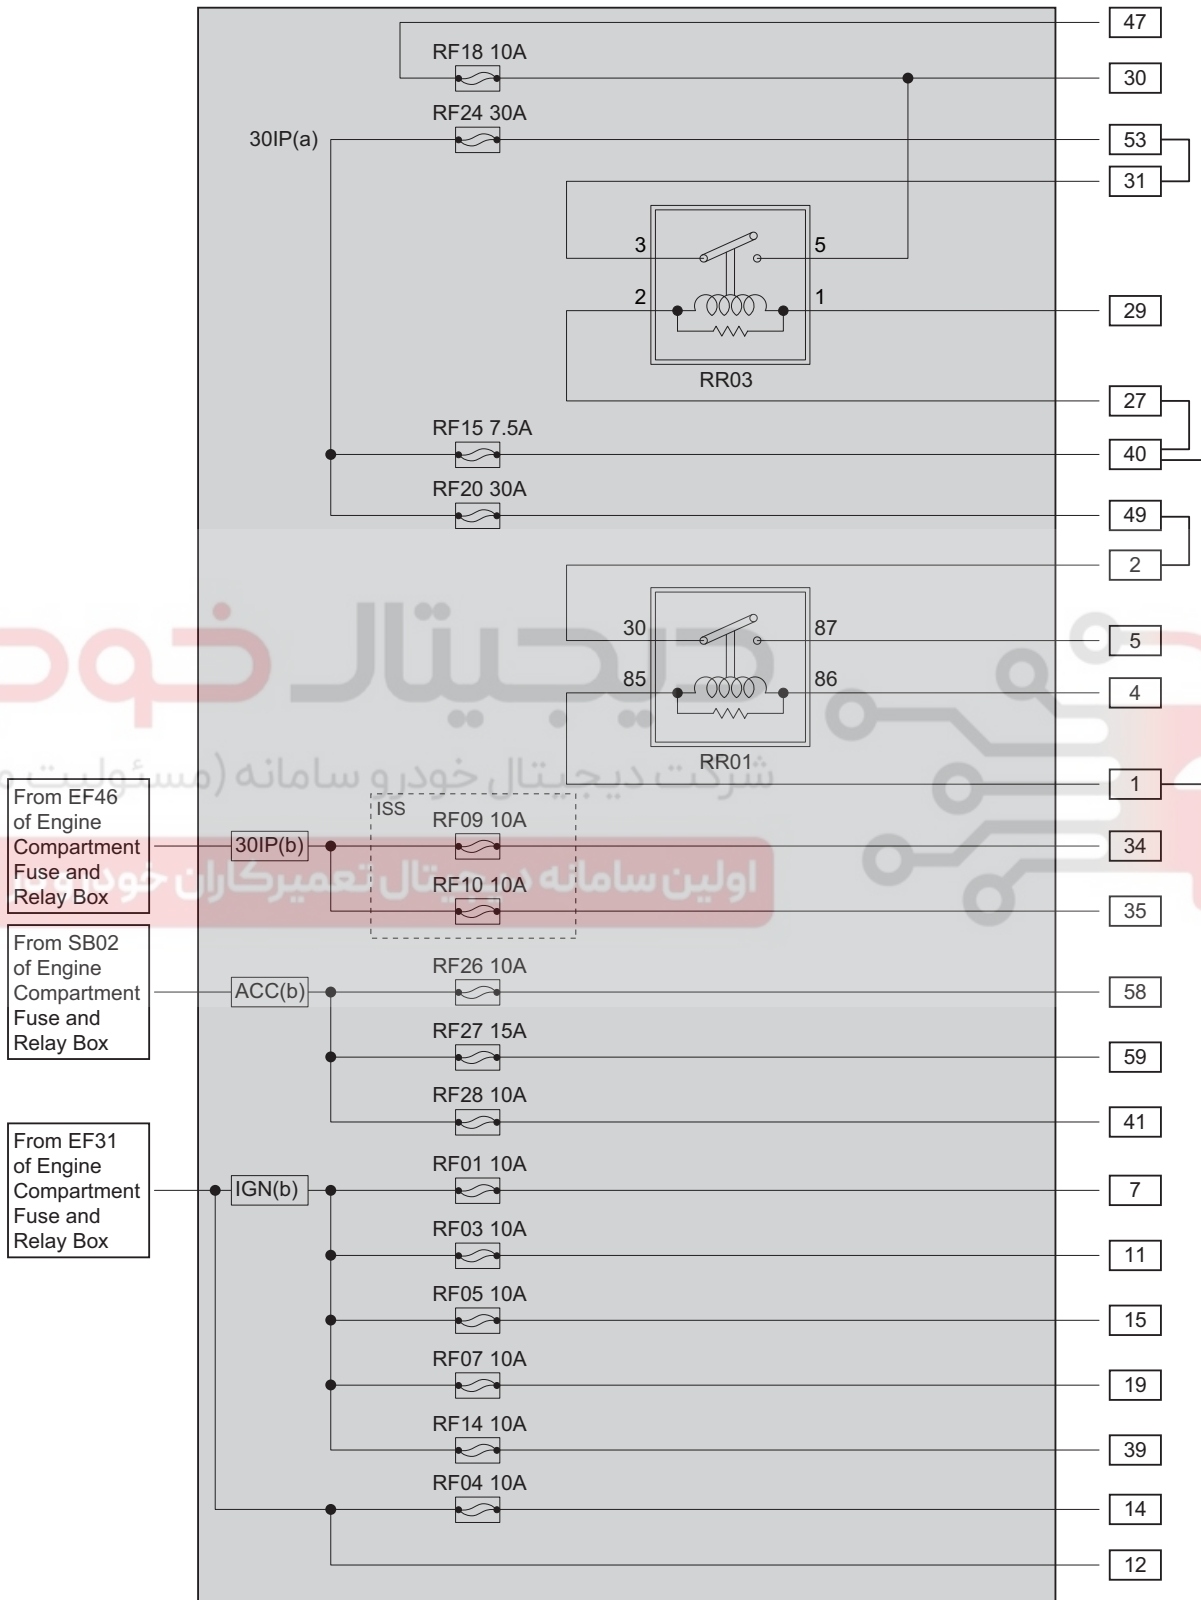

EWD027001