


BAT

K81

REC BATT

K82

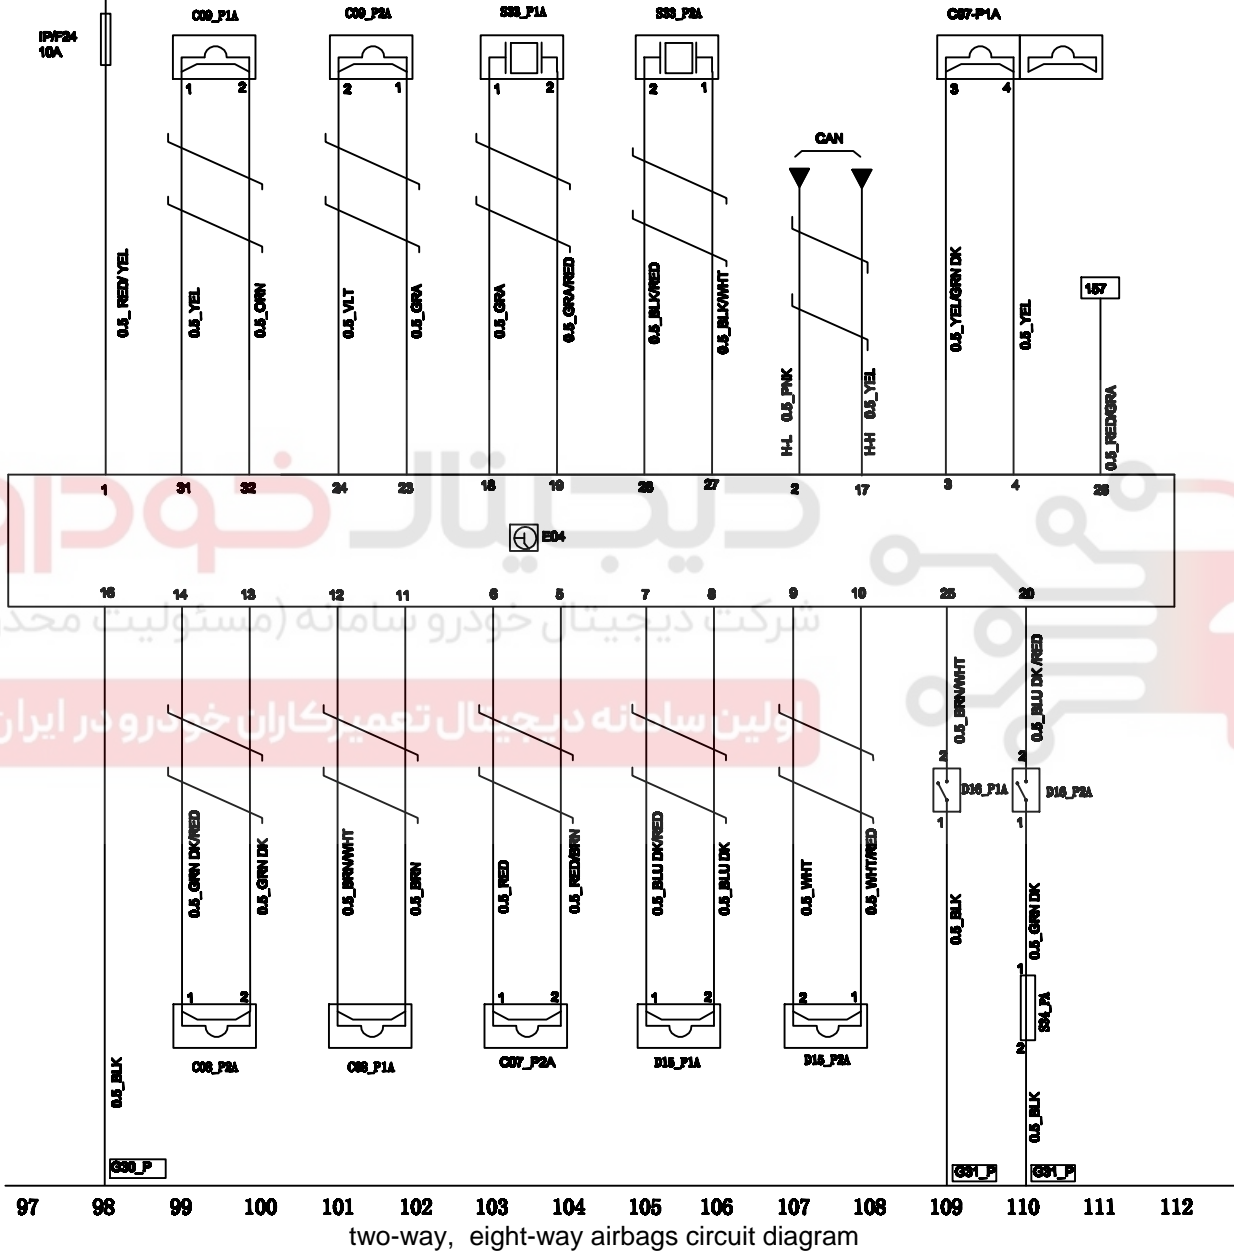

two-way, eight-way airbags circuit diagram

IP-dash-board fuse box

E04-airbag ECU(two-way is blue\eight is gray)

C08_P2A-passenger side airbag trigger

C08_P1A-driver side airbag trigger

C07_P2A-passenger airbag trigger

C07_P1A-driver airbag trigger

S33_P1A-driver's side sensor

S33_P2A-passenger's side sensor

C09_P1A-driver's air curtain connector
4 holes yellow

C09_P2A-passenger's air curtain
connector 2 holes yellow

D15_P1A-driver's seat belt pre-tensioner

2 holes yellow

D15_P2A-passenger's seat belt pre-tensioner

2 holes yellow

D16_P2A-assistant driver's side seat belt

latch connector 2 holes white

S34_PA-passenger detecting sensor connector

2 holes black

D16_P1A-driver's side seat belt latch

connector 2 holes white

G30_P-airbag ECU ground point

G31_P-airbag ECU ground point