


4A9-AT自动变速箱单元

4A9-AT TCU

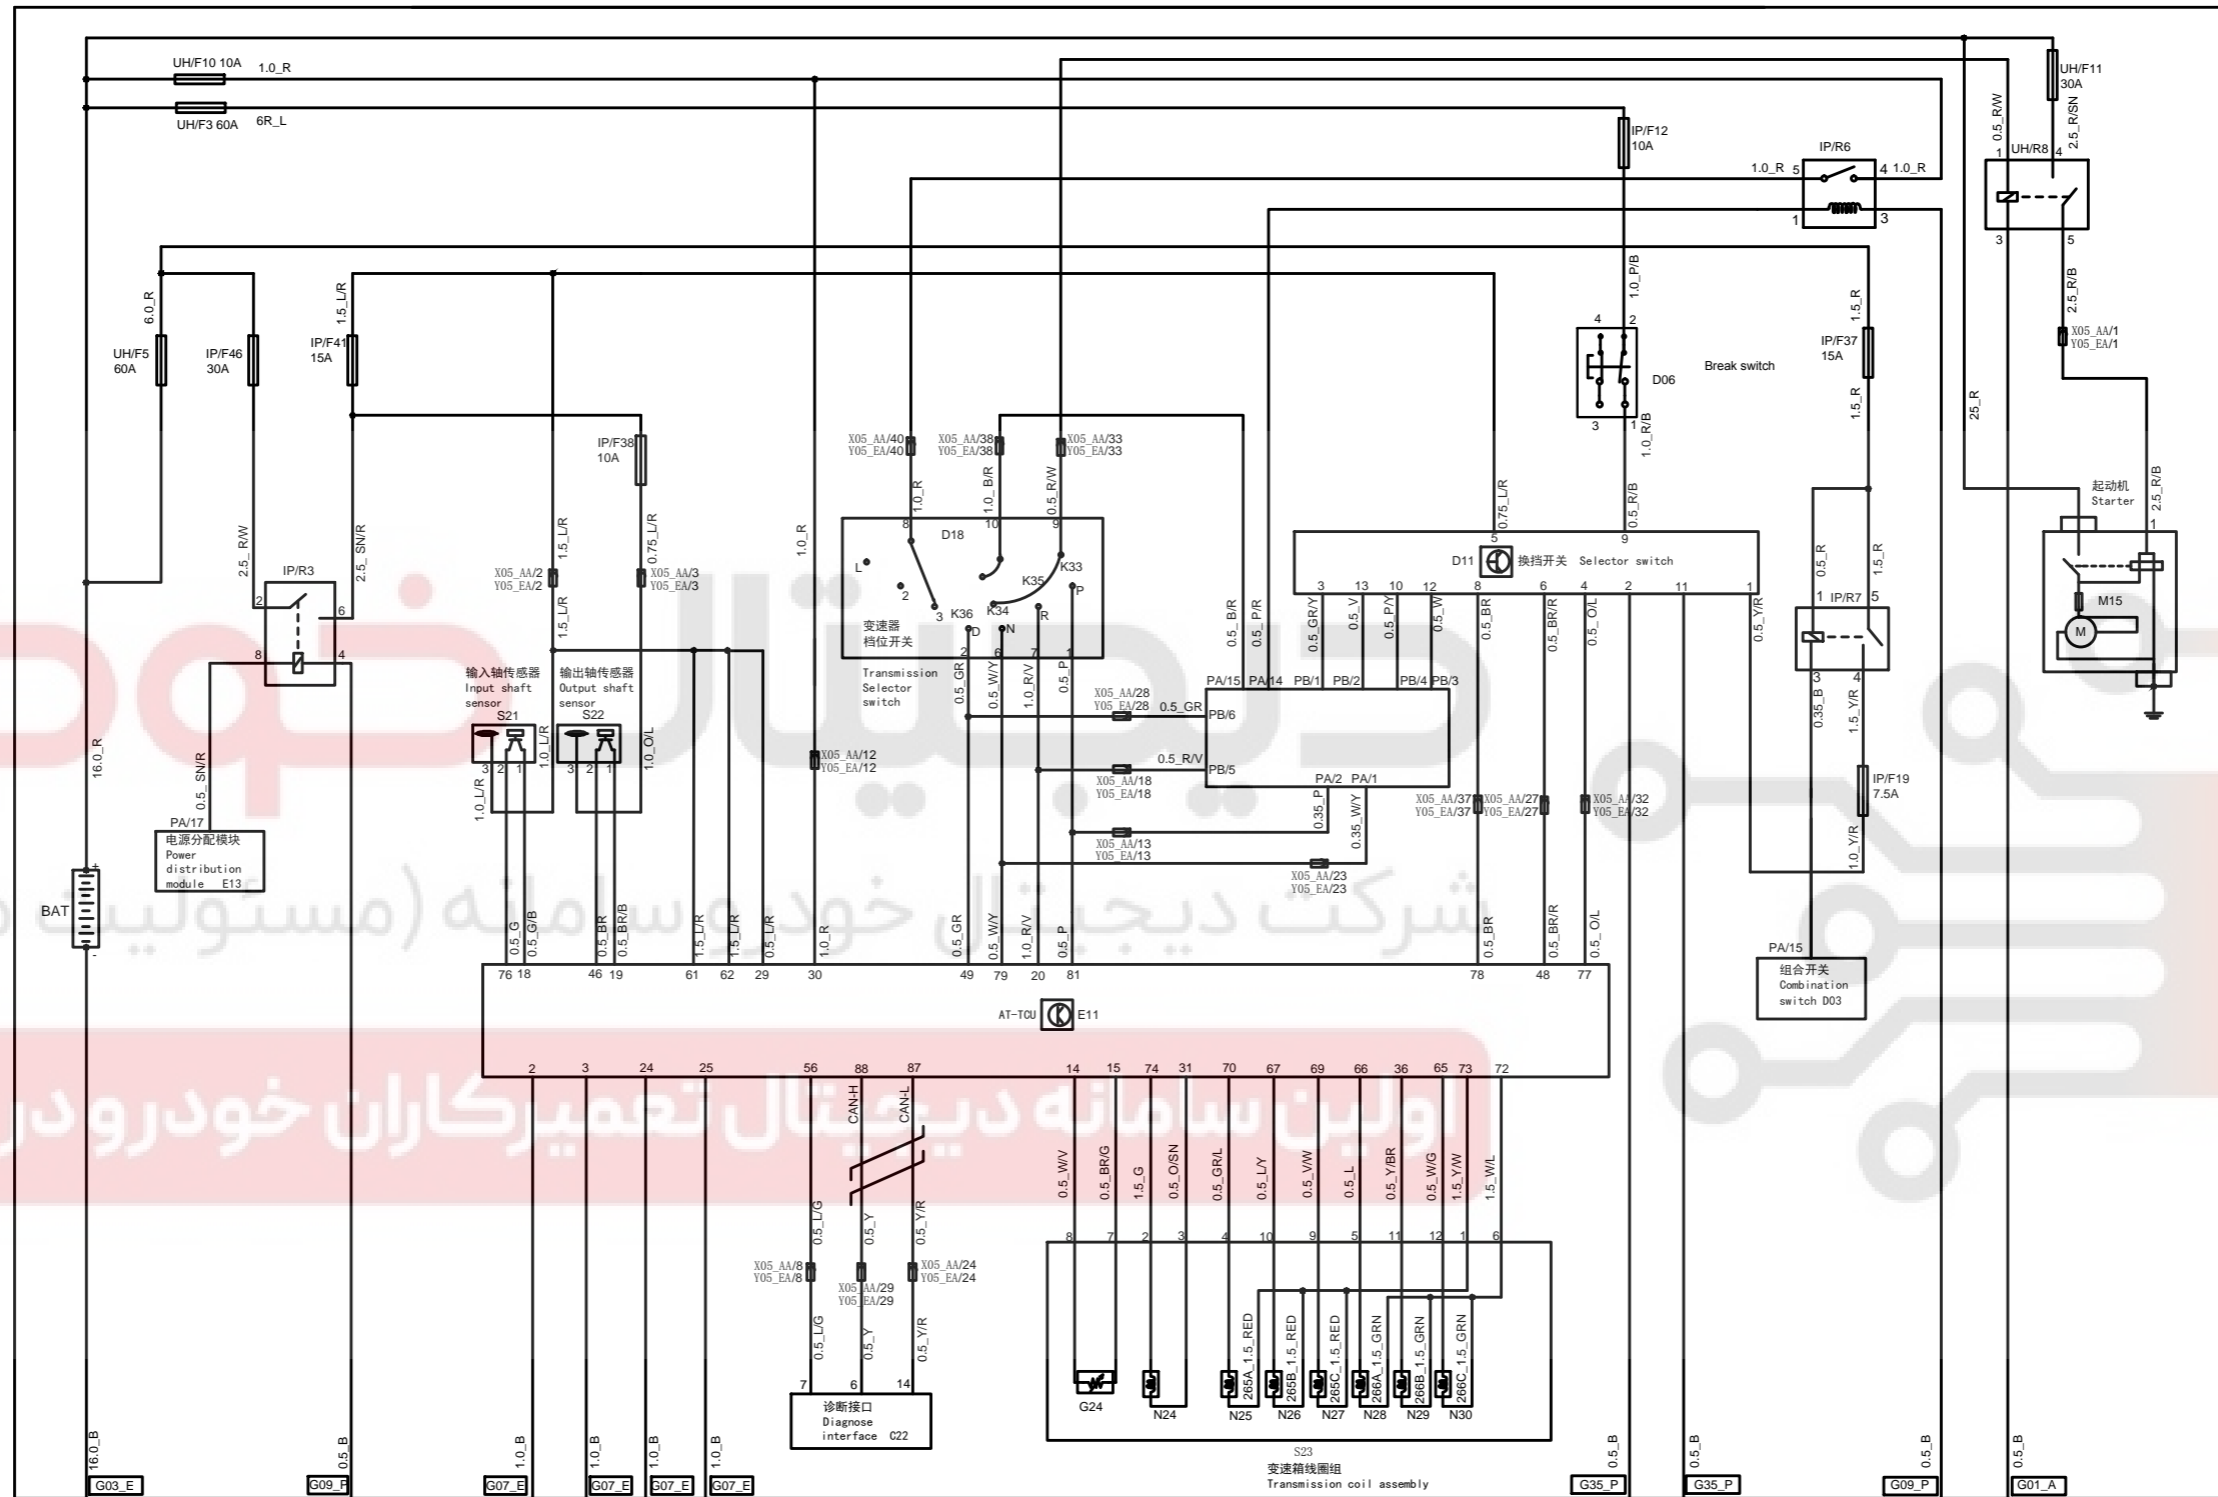

4A9-AT 自动变速箱单元电路图

4A9-AT TCU wiring diagram

- | | | | | | |
|--------------|-------------------|----------------------|----------------------------------|-------------------------------|---|
| E13- 电源分配模块 | N24- 变速箱VFS线圈 | G01_A- 发动机舱左前搭铁点 | E13-Power distribution module | N24-Transmission coil | O1_A-Ground point in FL engine compartment |
| D03- 组合开关 | N25- 变速箱LR/DIR线圈 | G03_E- 蓄电池负极到车身搭铁点 | D03-Combination switch | N25-Transmission LR/DIR coil | G03_E-Ground point between battery terminal negative and body |
| D06- 刹车开关 | N26- 变速箱OD线圈 | G07_E- AT油门踏板处搭铁点 | D06-Break switch | N26-Transmission OD coil | G07_E-Ground point in AT the throttle machine-team place |
| C22- 诊断接口 | N27- 变速箱RED线圈 | G09_P_ 主线束左侧A立柱下搭铁点2 | C22-Diagnose interface | N27-Transmission RED coil | G09_P_Ground point below main harness left A column 2 |
| M15- 起动机 | N28- 变速箱DCC线圈 | G35_P- 中控台处搭铁点 | M15-Starter | N28-Transmission DCC coil | G35_P-Ground point in center stack |
| E11- AT-TCU | N29- 变速箱UD线圈 | | E11-AT-TCU | N29-Transmission UD coil | |
| D11- 换挡开关 | N30- 变速箱2ND&REV线圈 | | D11-Selector switch | N30-Transmission 2ND&REV coil | |
| S23- 变速箱线圈组 | | | S23-Transmission coil assembly | | |
| D18- 变速器档位开关 | | | D18-Transmission Selector switch | | |
| S21- 输入轴传感器 | | | S21-Input shaft sensor | | |
| S22- 输出轴传感器 | | | S22-Output shaft sensor | | |
| G24- 油温传感器 | | | G24-Oil temperature sensor | | |