


Audio System

Circuit Diagram (Page 1 of 3)

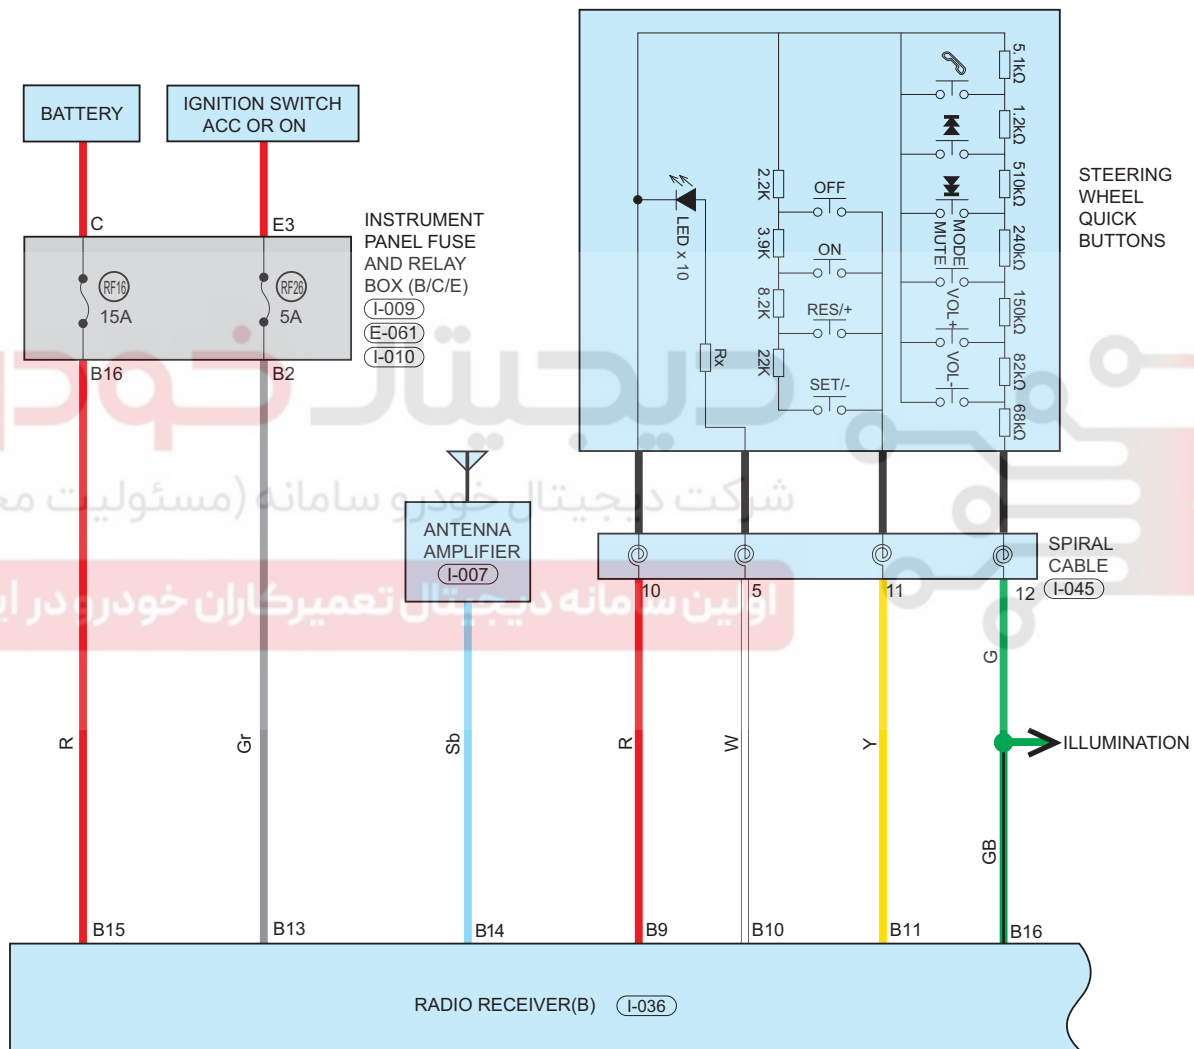

09

ET11092201

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-009	08-9	E-061	08-3	I-010	08-9
I-045	08-9	I-007	08-9	I-036	08-9

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF16	06-15	Instrument Panel Fuse and Relay Box
RF26	06-15	Instrument Panel Fuse and Relay Box

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-009	12-7	E-061	12-2	I-010	12-7
I-045	12-7	I-007	12-7	I-036	12-7


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 2 of 3)

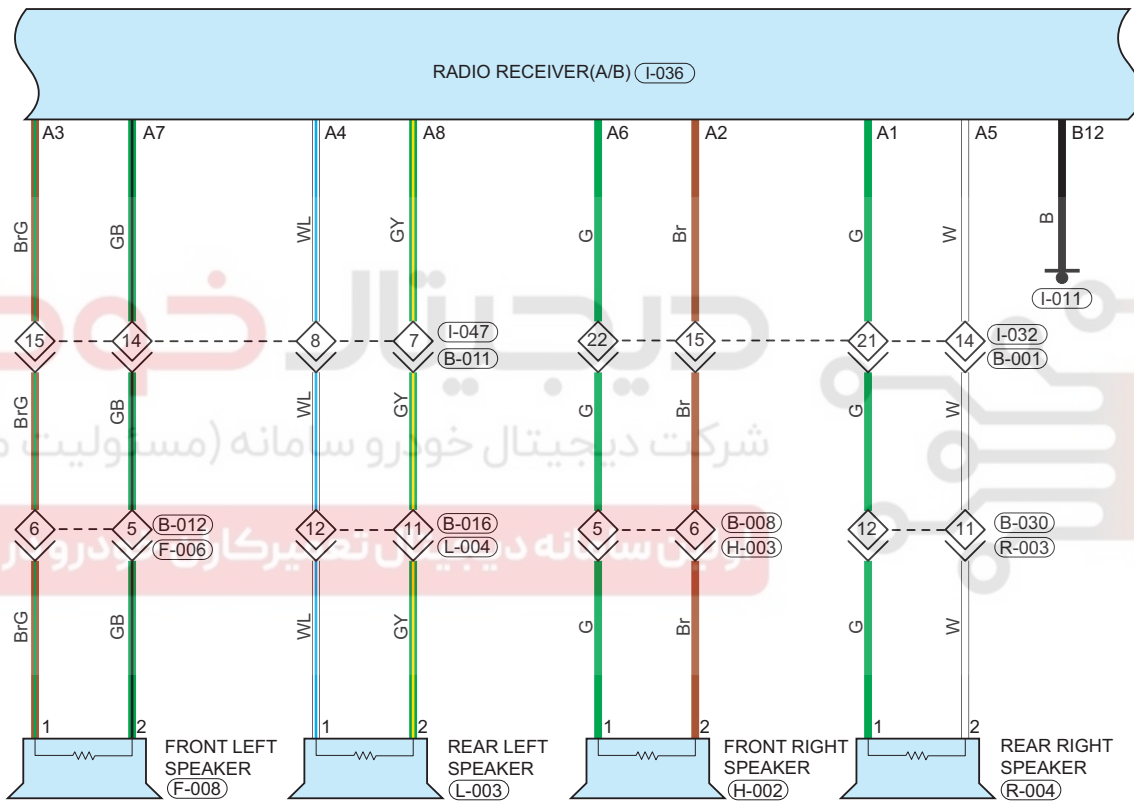

09

ET11092202

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	08-9	I-011	08-9	F-008	08-18
L-003	08-20	H-002	08-19	R-004	08-21

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-047, B-011	08-9, 08-13	I-032, B-001	08-9, 08-13	B-012, F-006	08-13, 08-18
B-016, L-004	08-13, 08-20	B-008, H-003	08-13, 08-19	B-030, R-003	08-13, 08-21


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	12-7	I-011	12-7	F-008	12-12
L-003	12-14	H-002	12-13	R-004	12-14
I-047, B-011	12-7, 12-10	I-032, B-001	12-7, 12-10	B-012, F-006	12-10, 12-12
B-016, L-004	12-10, 12-14	B-008, H-003	12-10, 12-13	B-030, R-003	12-10, 12-14

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 3 of 3)

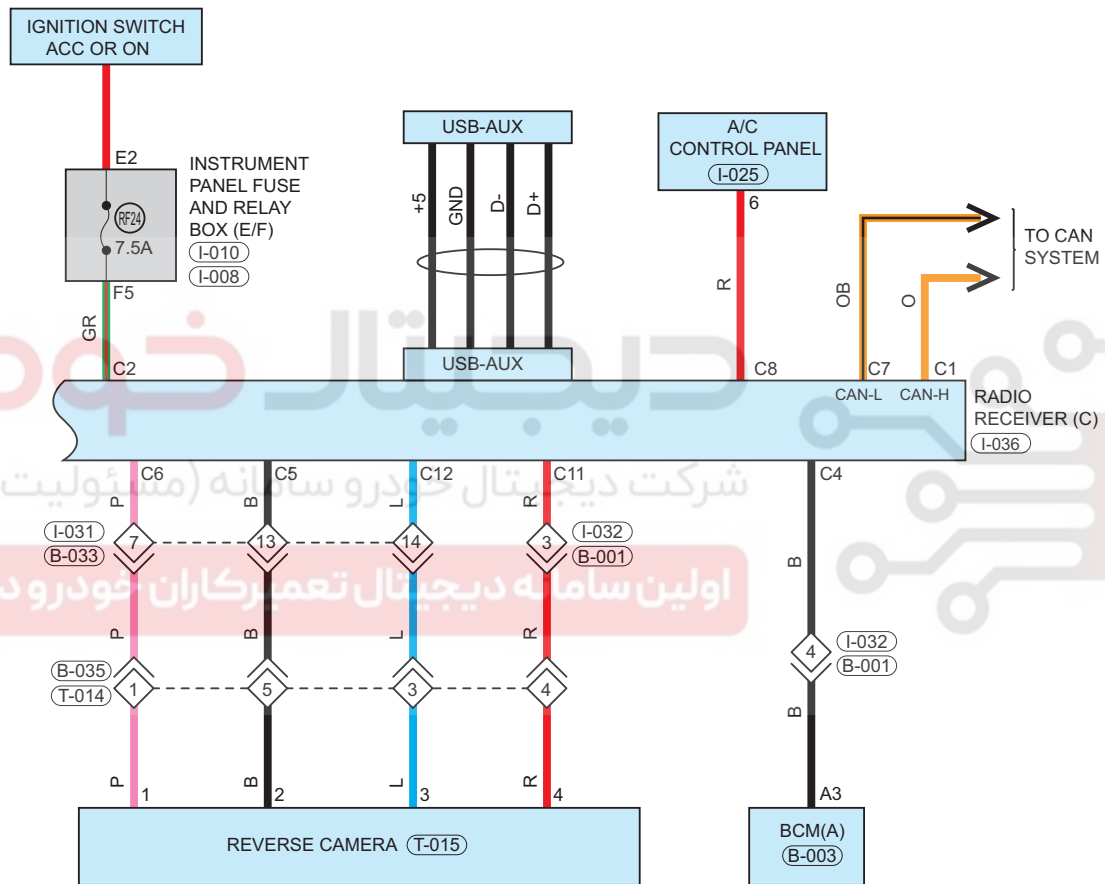

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مشاوریت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

ET11092203