

FUSE & RELAY INFORMATION


Fuse & Relay Information (7)

SD100-7

E/R JUNCTION BOX

LAYOUT

< FRONT >

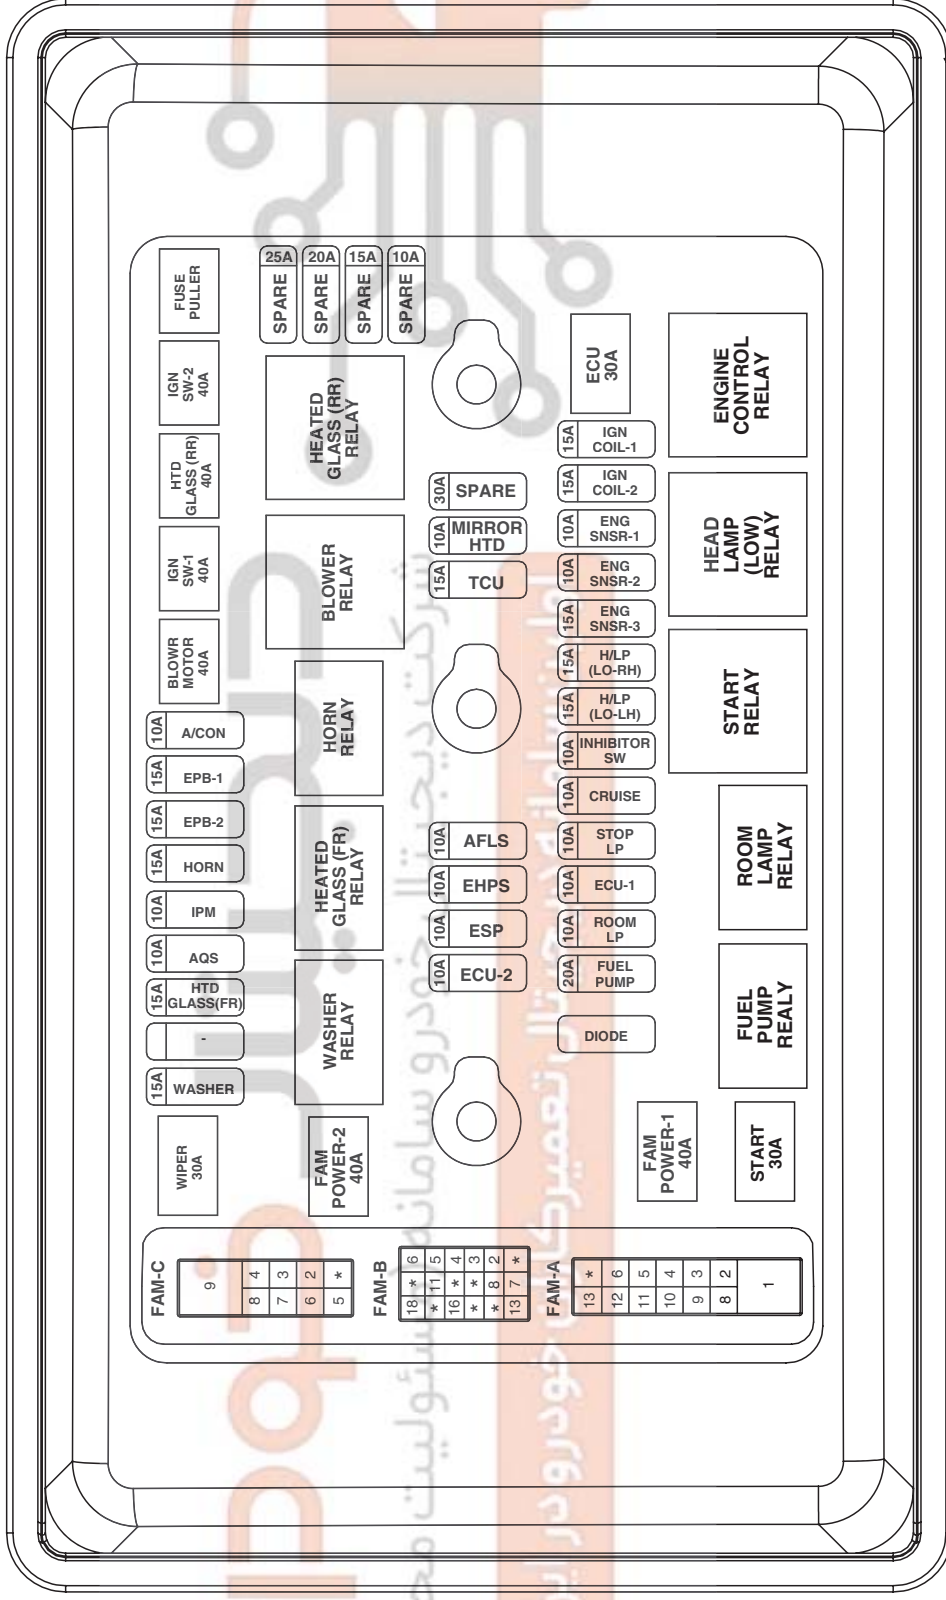

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (8)

SD100-8

CIRCUIT

	Description	(A)	Circuit Protected
FUSIBLE LINK	WIPER	30A	Electronic Control Wiper Module
	FAM POWER-1	40A	FAM
	FAM POWER-2	40A	FAM
	START	30A	Start Relay
	ECU	30A	Engine Control Relay
	BLOWER MOTOR	40A	Blower Relay
	IGN SW-1	40A	Ignition Switch (IG 2, START)
	HTD GLASS (RR)	40A	Heated Glass (RR) Relay
	IGN SW-2	40A	Ignition Switch (IG 1, ACC)
	A/C ON	10A	A/C Control Module
FUSE	EPB-1	15A	Electronic Parking Brake Module
	EPB-2	15A	Electronic Parking Brake Module
	HORN	15A	Horn Relay
	IPM	10A	IPM
	AGS	10A	AGS Sensor, Electronic Control Wiper Module, Blower Relay, Head Lamp (Low) Relay
	HTD GLASS (FR)	15A	Heated Glass (FR) Relay
	WASHER	15A	Washer Relay
	MIRROR HTD	10A	A/C Control Module, Power Outside Mirror & Mirror Folding Motor LH/RH
	TCU	15A	TCM
	AFLS	10A	Head Lamp LH/RH
FUSE	EHP5	10A	EHP5 Module
	ESP	10A	ESP Control Module, Multipurpose Check Connector
	ECU-2	10A	ECM
	IGN COIL-1	15A	Ignition Coil #2,4,6
	IGN COIL-2	15A	Ignition Coil #1,3,5, Condenser
	ENG SNSR-1	10A	ECM, Mass Air Flow Sensor, Oxygen Sensor #1,2,3,4
	ENG SNSR-2	10A	Canister Purge Control Solenoid Valve, Variable Intake Manifold Valve, Oil Control Valve, ECM, Cooling Fan Relay, Immobilizer Module
	ENG SNSR-3	15A	ECM, Injector #1~#6, Fuel Pump Relay
	H/LP (LO-RH)	15A	Head Lamp RH
	H/LP (LO-LH)	15A	Head Lamp LH, ECM
FUSE	INHIBITOR SW	10A	Transmission Range Switch
	CRUISE	10A	Smart Cruise Control Module
	STOP LAMP	10A	Stop Lamp Switch, Stop Lamp Relay, Generator
	ECU-1	10A	ECM, TCM
	ROOM LAMP	10A	Room Lamp Relay
	FUEL PUMP	20A	Fuel Pump Relay

✘ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION


Fuse & Relay Information (9)

SD100-9

E/R JUNCTION BOX

LAYOUT

<REAR >

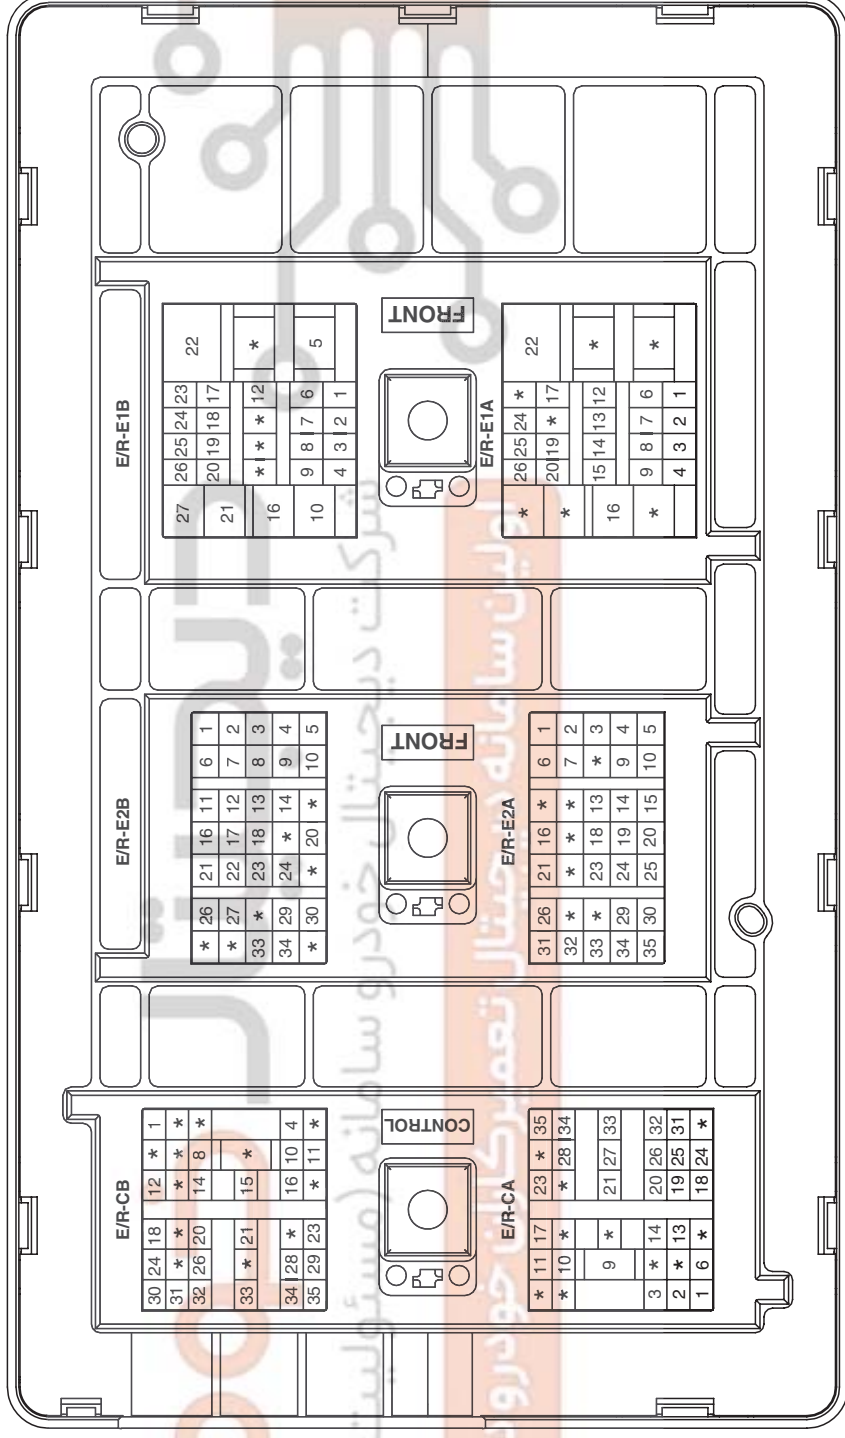

※ USE THE DESIGNATED FUSE AND RELAY ONLY